



OFFICINE GULLO  
FIRENZE

# INSTRUCTIONS FOR INSTALLATION AND USE



GG8P - GG12P - GGPS8P - GGPS12P  
GES8P - GES12P - GEPS8P - GEPS12P  
RANGE WITH OVEN FOR RESIDENTIAL AND PROFESSIONAL USE



# INDEX

## INSTALLATION MANUAL




DECLARATION OF COMPLIANCE .....	17
GAS TECHNICAL DATA TABLE .....	17
ELECTRIC TECHNICAL DATA TABLE .....	18
INSTALLATION.....	18
CHECKING FOR ADEQUATE VENTILATION .....	19
PIPE FOR GAS CONNECTION.....	19
ELECTRIC CONNECTION.....	20
EQUIPOTENTIAL .....	20
CHECKING HEAT OUTPUT .....	20
CHECKING PRIMARY AIR TO THE MAIN BURNERS AND PILOT NOZZLES .....	21
BURNER TECHNICAL DATA TABLE .....	21
RULES FOR CONVERTING AND INSTALLING OTHER TYPES OF GAS .....	23
CHANGING THE OPEN RING NOZZLES .....	23
SUBSTITUTING THE NOZZLE IN THE OVEN BURNER .....	23
SUBSTITUTING THE NOZZLE IN THE COUP DE FEU BURNER.....	23
CHECKING FUNCTIONING.....	24
MAINTENANCE.....	24
SPARE PARTS .....	24

## USER MANUAL

INSTRUCTIONS FOR USE .....	25
LIGHTING AND ADJUSTING THE BURNERS.....	25
LIGHTING AND ADJUSTING THE COUP DE FEU .....	25
LIGHTING AND REGULATING GAS OVEN BURNER .....	26
LIGHTING AND REGULATING THE ELECTRIC OVEN .....	26
CLEANING AND MAINTENANCE.....	27
WHAT TO DO IN THE EVENT OF A BREAKDOWN .....	28
PROCEDURE TO FOLLOW IF THE APPLIANCE IS NOT GOING TO BE USED FOR SOME TIME.....	28
MAINTENANCE (only for qualified personnel).....	28
INSTRUCTIONS FOR DISCHARGING GAS EMISSIONS .....	28

# INSTALLATION MANUAL




Fig. A/1  
GES8P

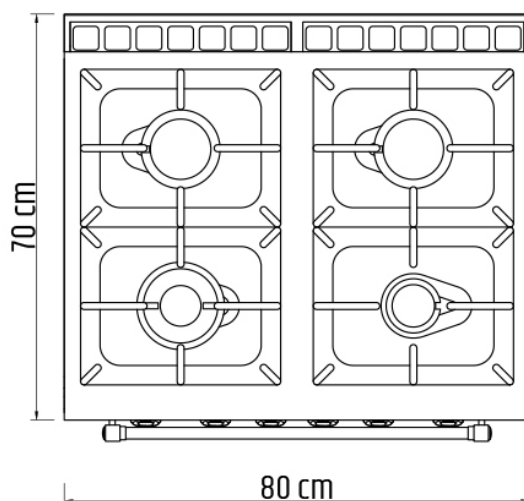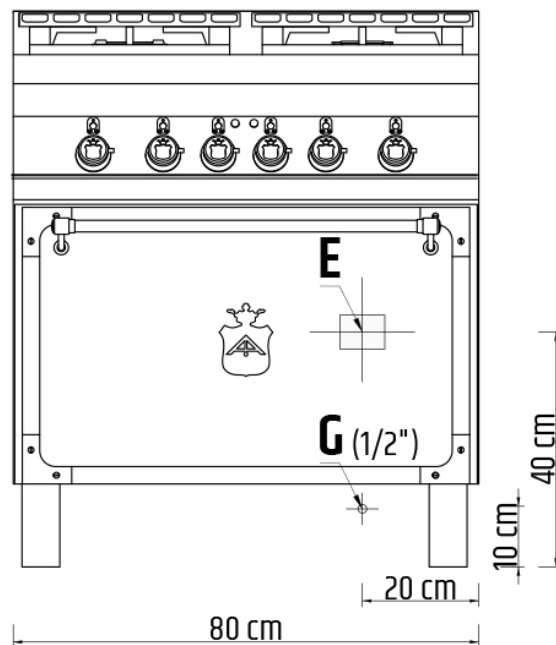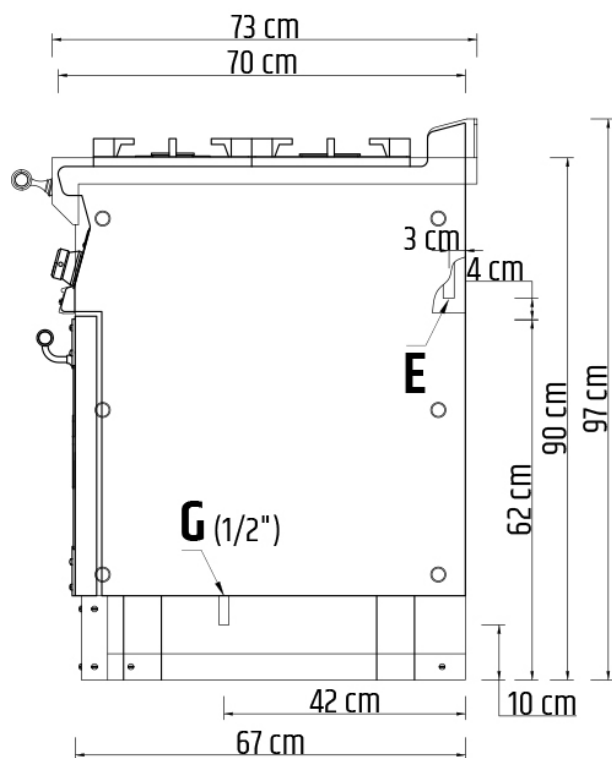

E. Electrical Connection  
G. Gas Connection






Fig. A/2  
GES12P

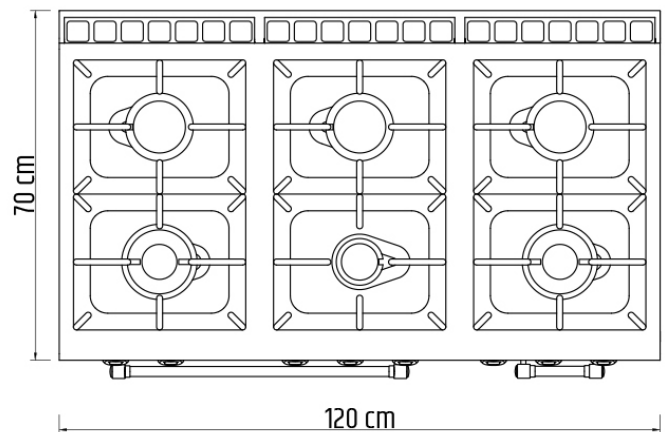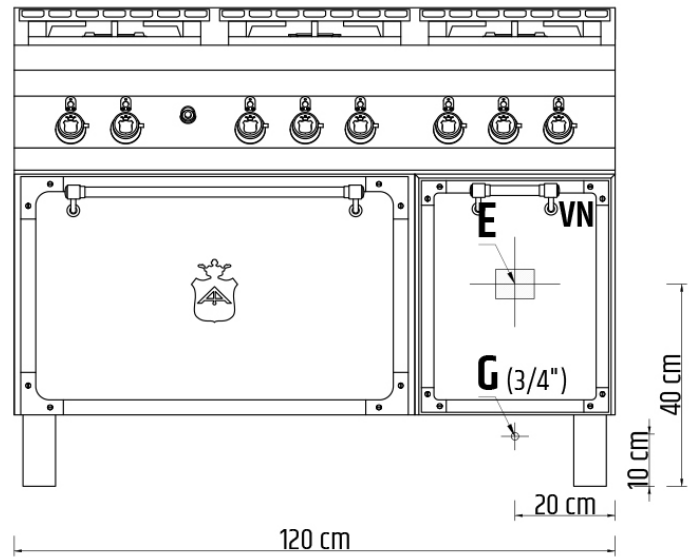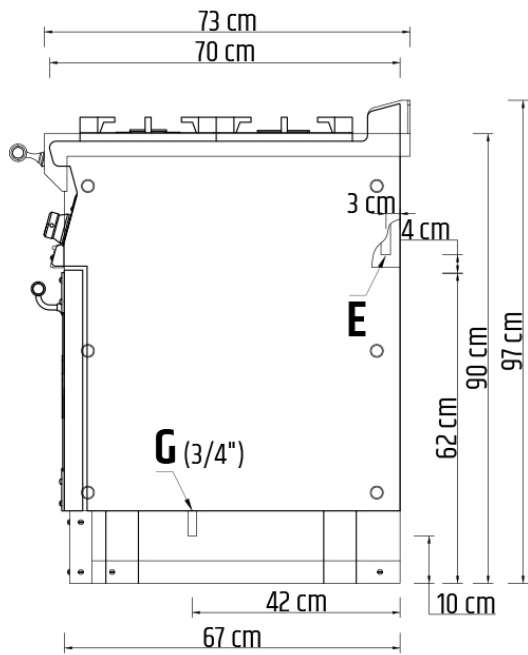




E. Electrical Connection  
G. Gas Connection

Fig. A/3  
GEPS8P

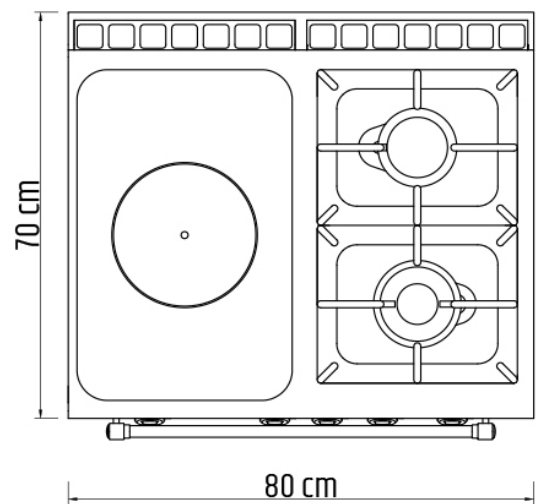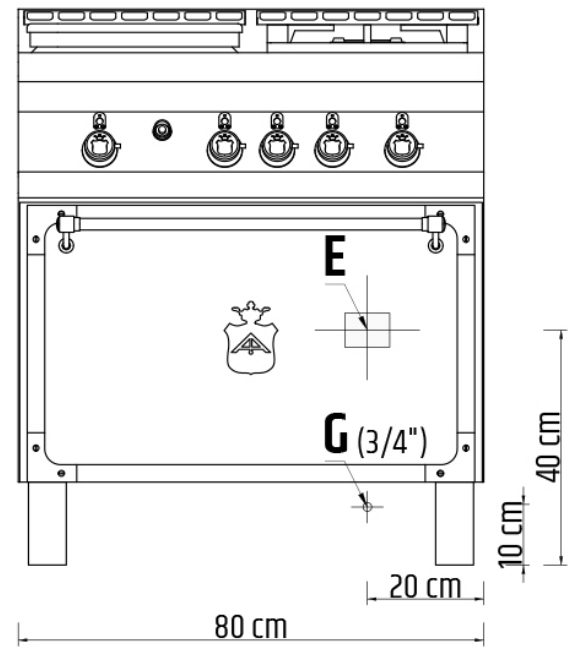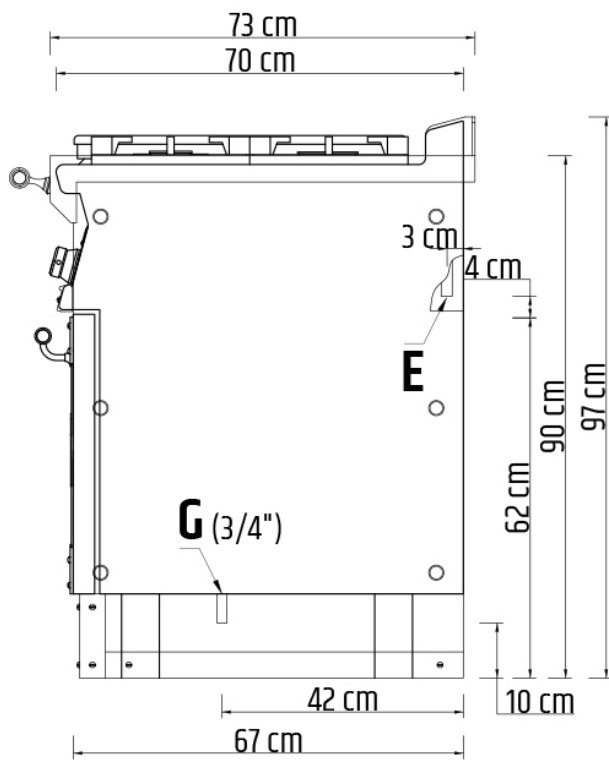




E. Electrical Connection  
G. Gas Connection

Fig. A/4  
GEPS12P

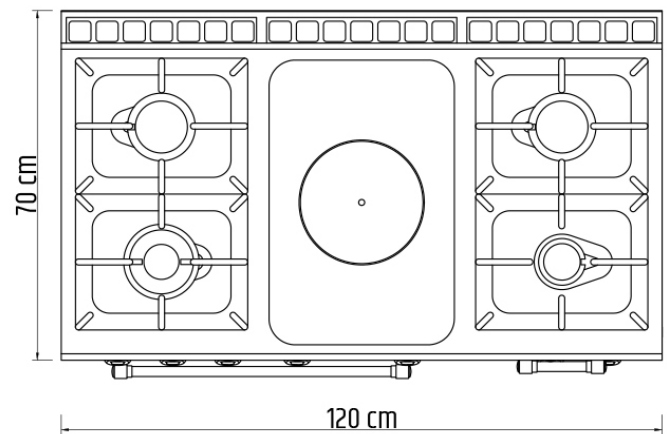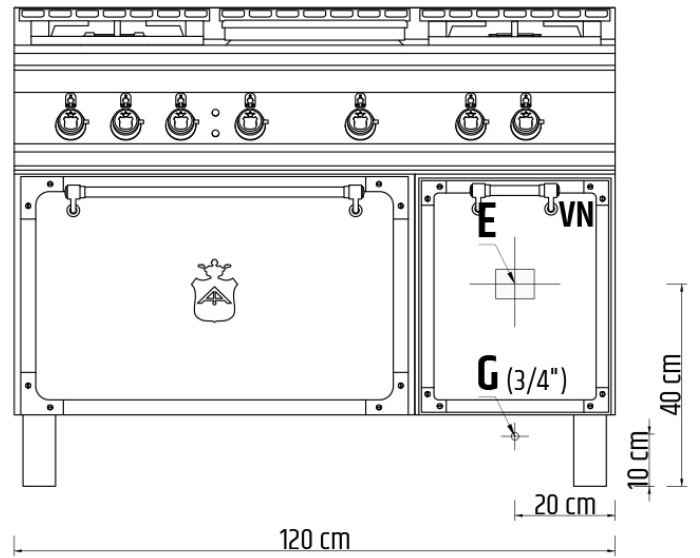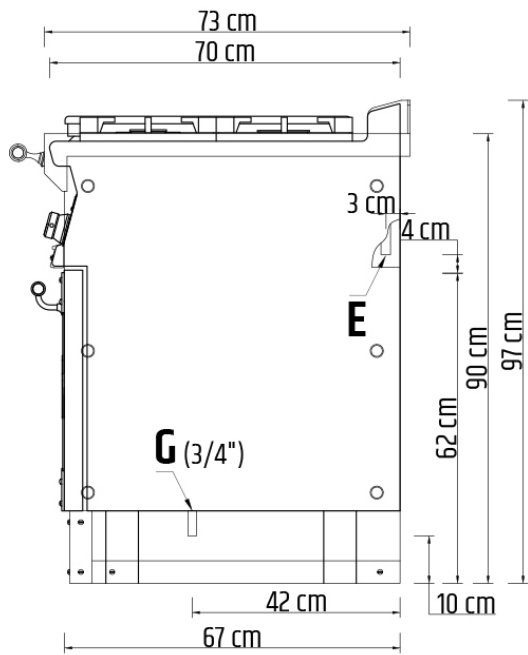

E. Electrical Connection  
G. Gas Connection




Fig. A/5  
GGS8P

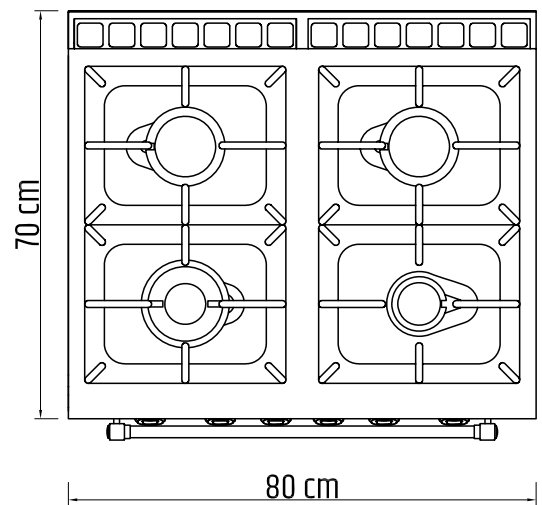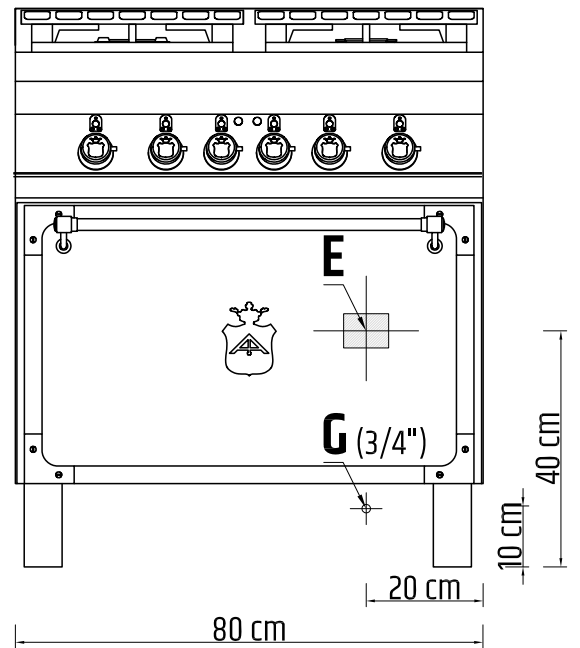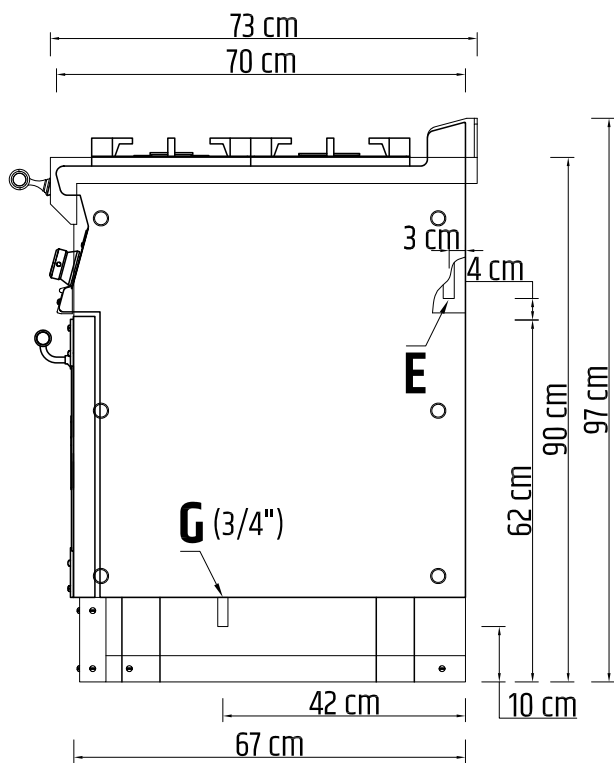

E. Electrical Connection  
G. Gas Connection






Fig. A/6  
GG512P

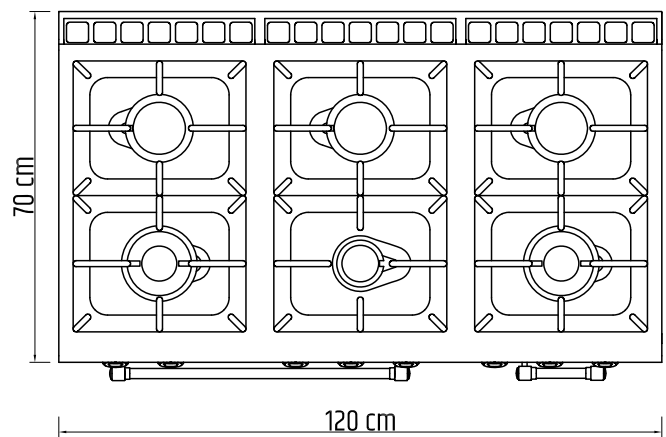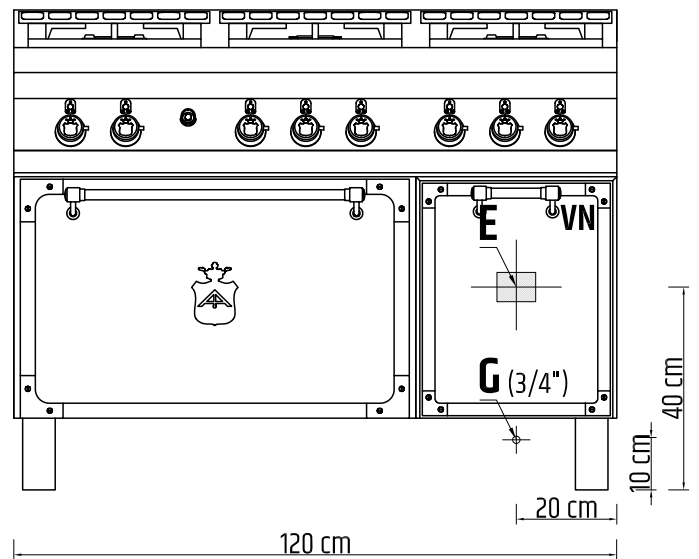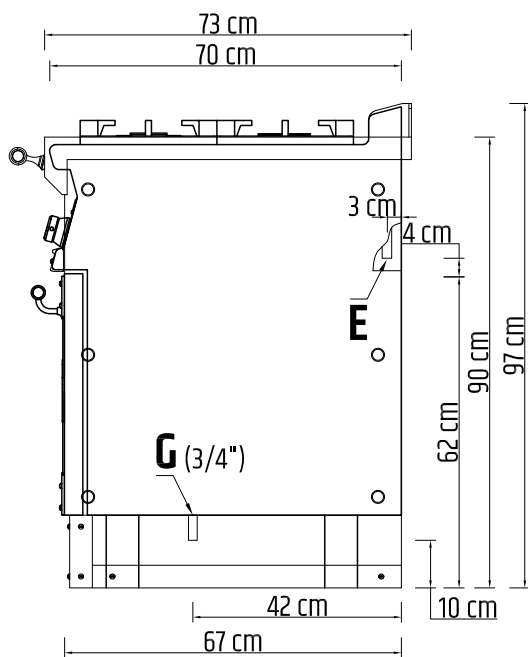




E. Electrical Connection  
G. Gas Connection

Fig. A/7  
GGPS8P

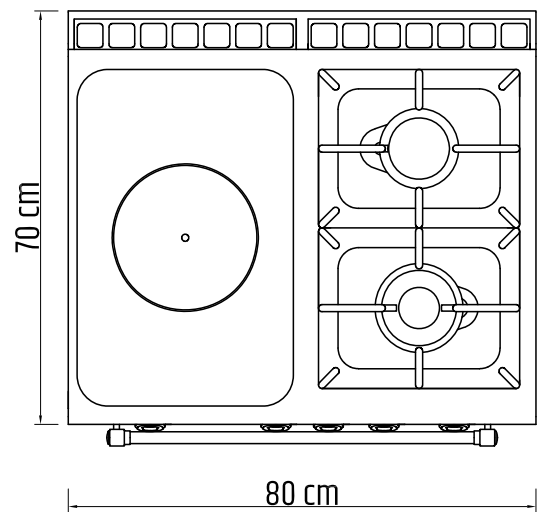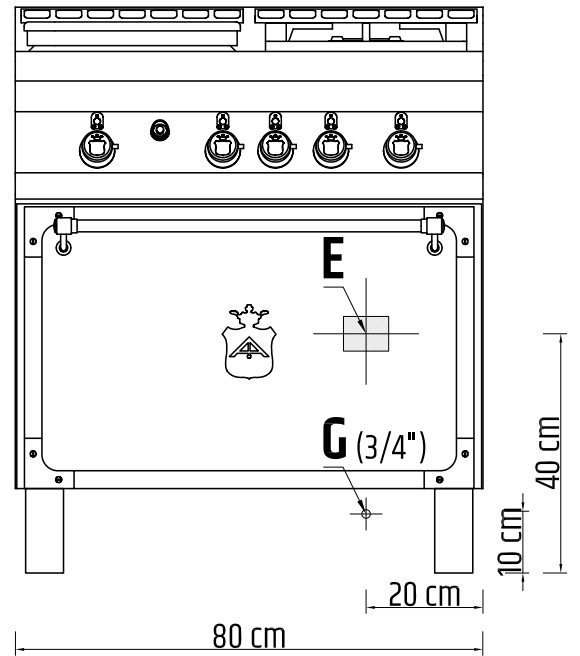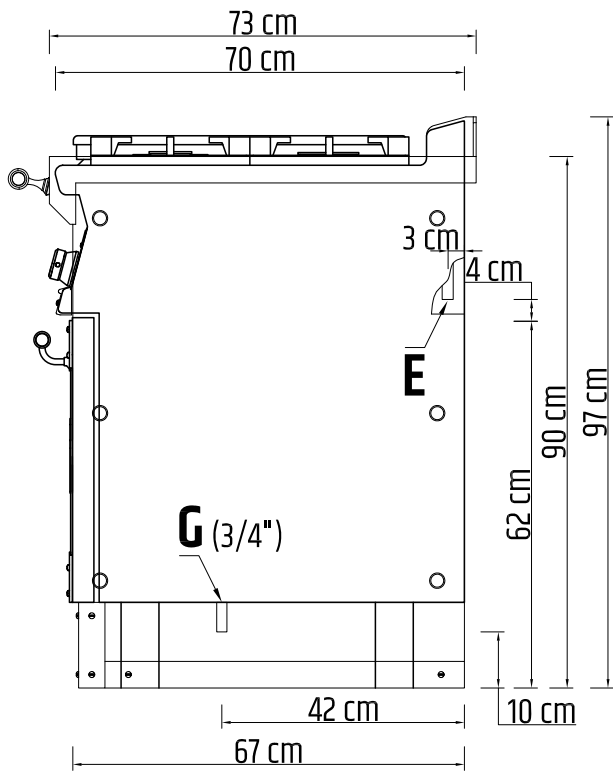


E. Electrical Connection  
G. Gas Connection

Fig. A/8  
GGPS12P

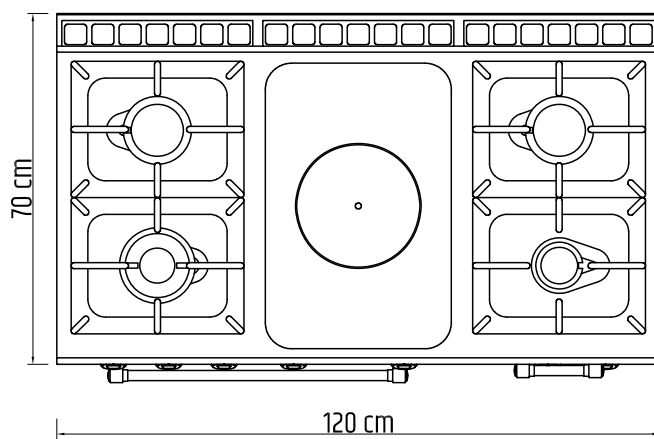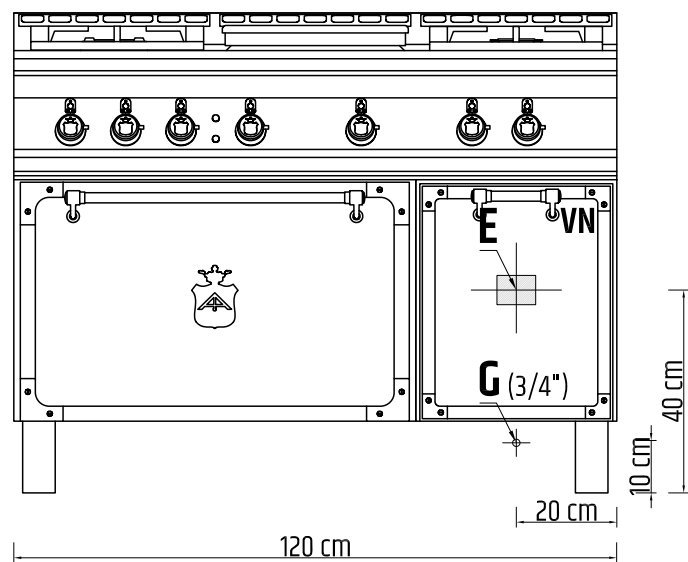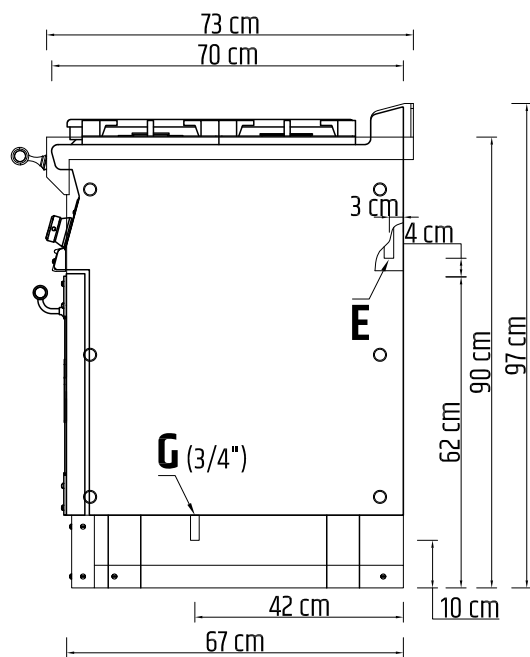

E. Electrical Connection  
G. Gas Connection


Fig. B

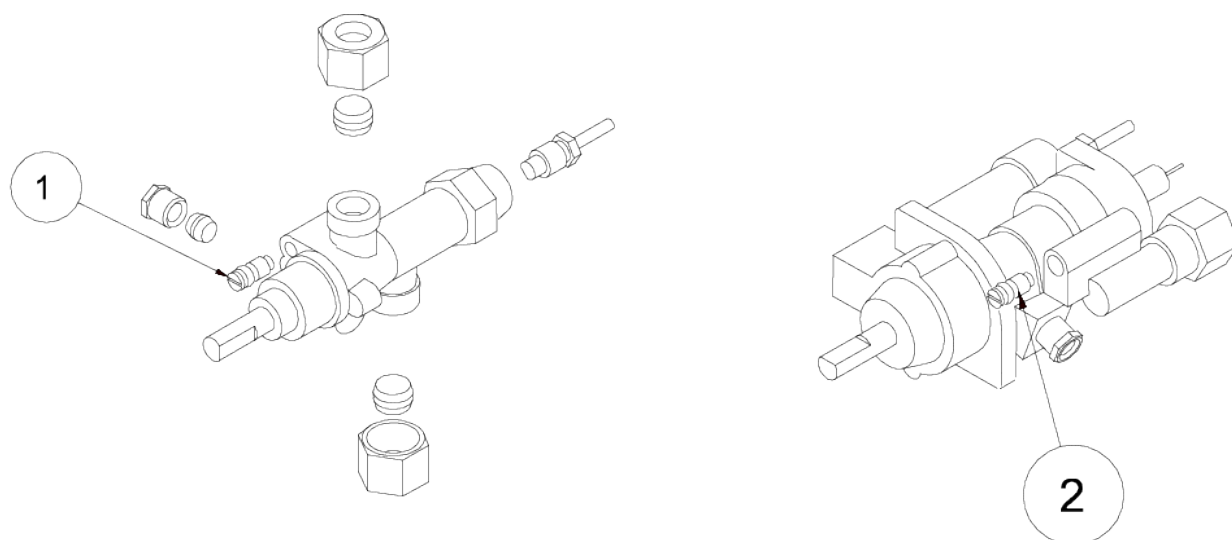

1. Cooking rings by-pass

2. Oven by-pass


Fig. C

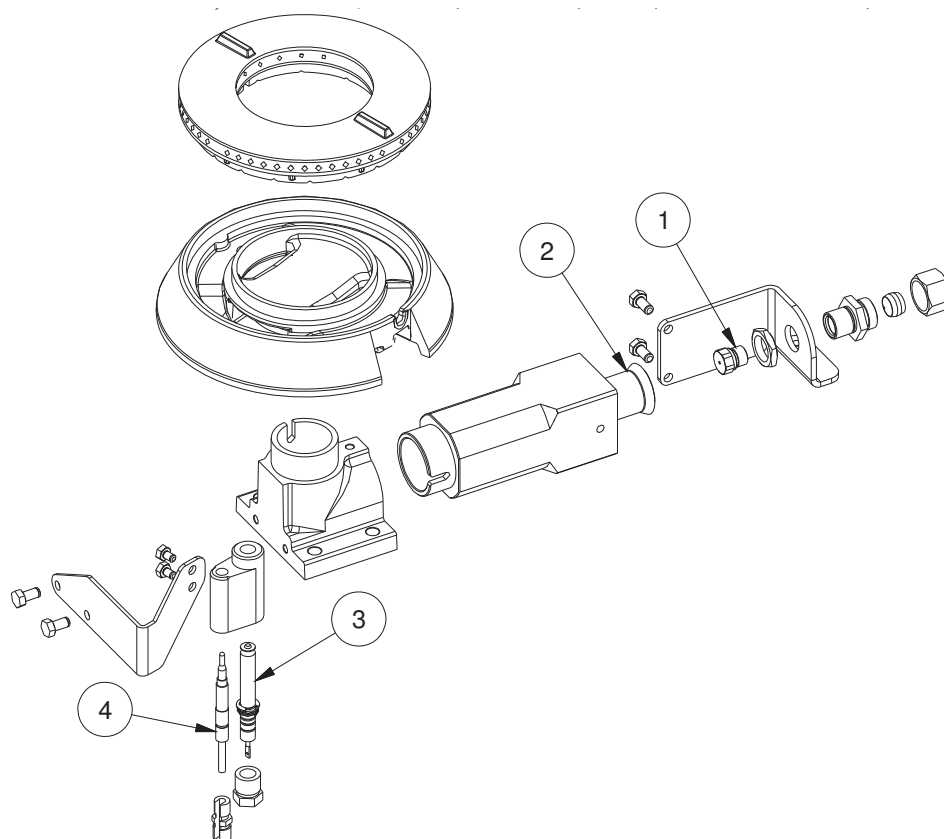

1. Injector cooking rings  
2. Air regulation

3. Lighting spark plug  
4. Thermocouple


Fig. D (oven)

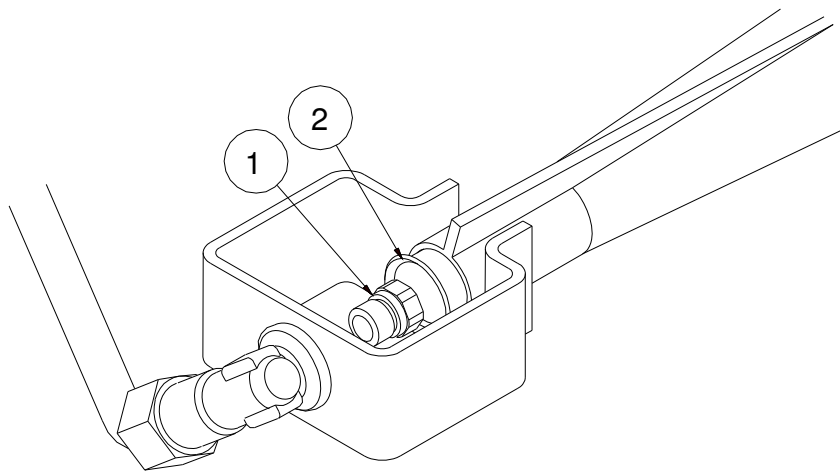

1. Oven injector

2. Oven air regulation

Fig. E (oven)

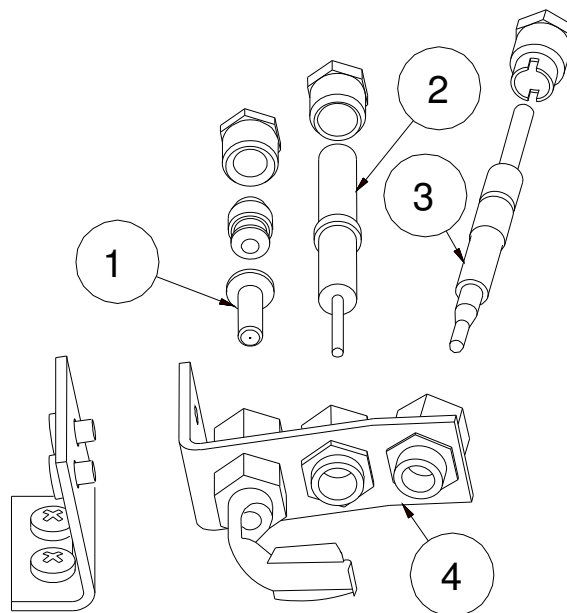

1. Pilot injector  
2. Lighting spark plug

3. Thermocouple  
4. Pilot bracket

Fig. F (oven)

1


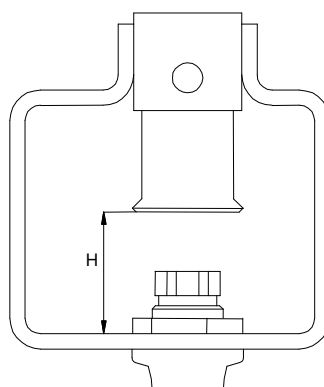


Fig. G  
Coup de feu

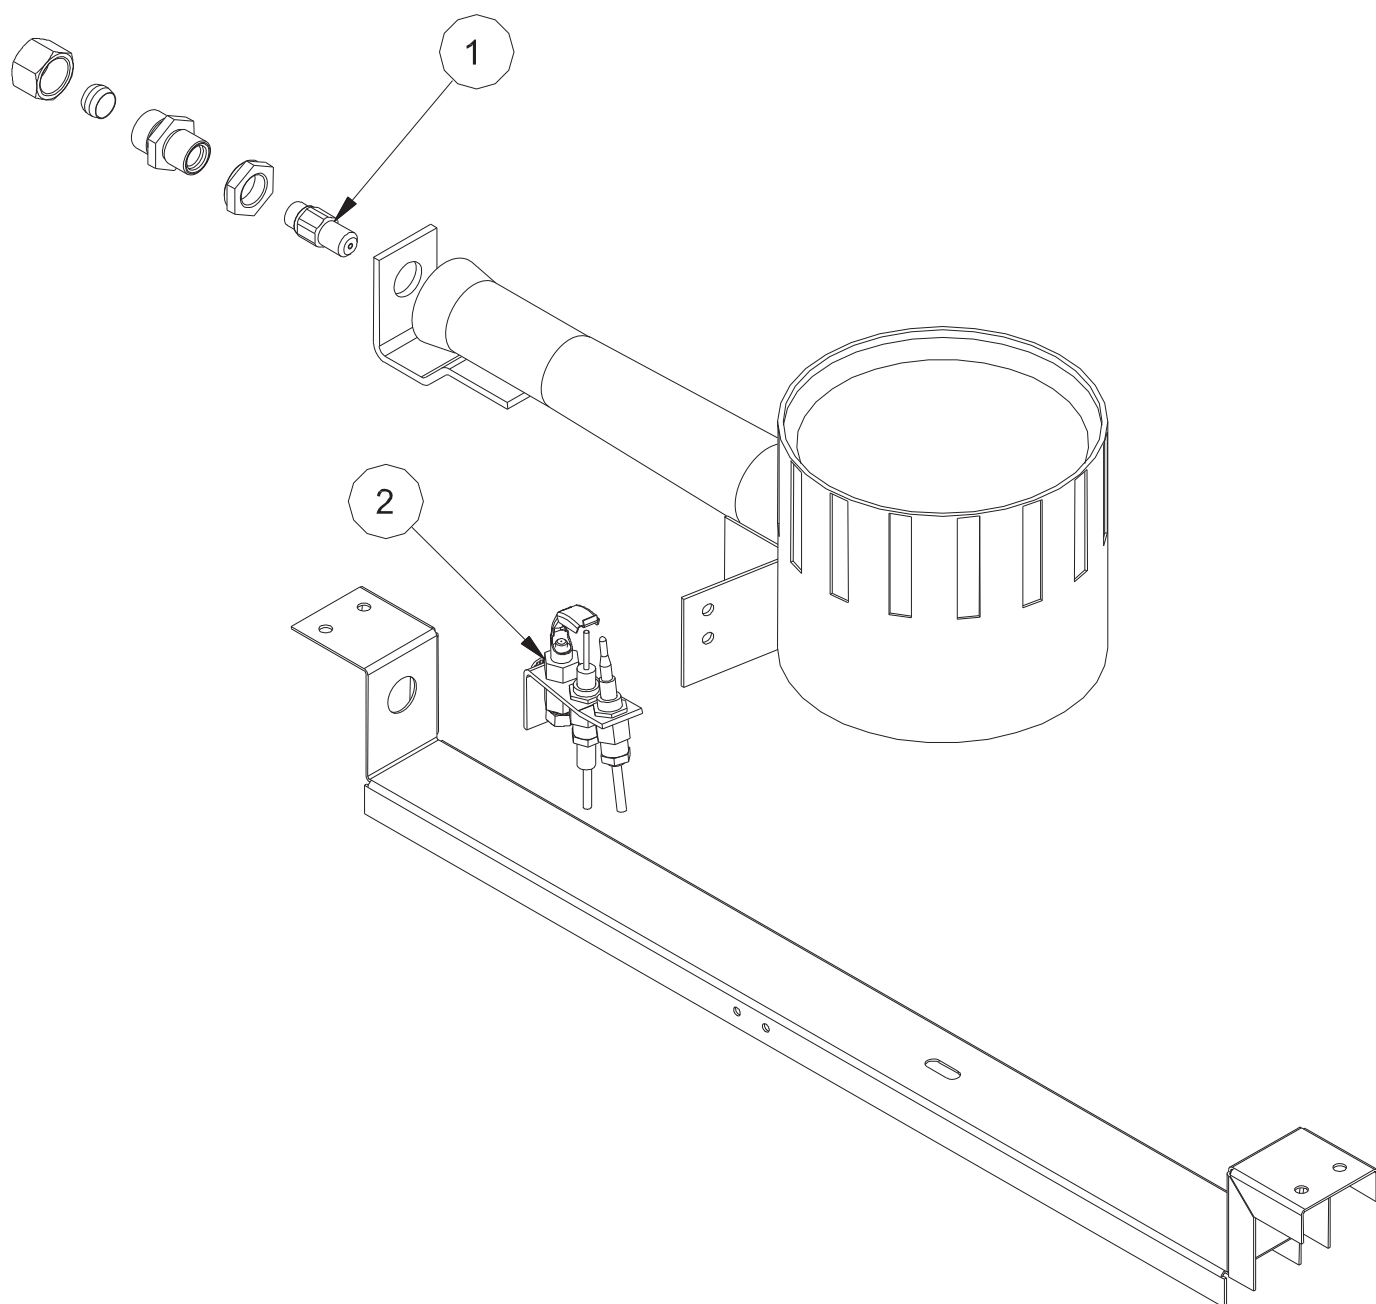

- 1. Injector
- 2. Pilot



Fig. H

ELECTRICAL SCHEME TOP


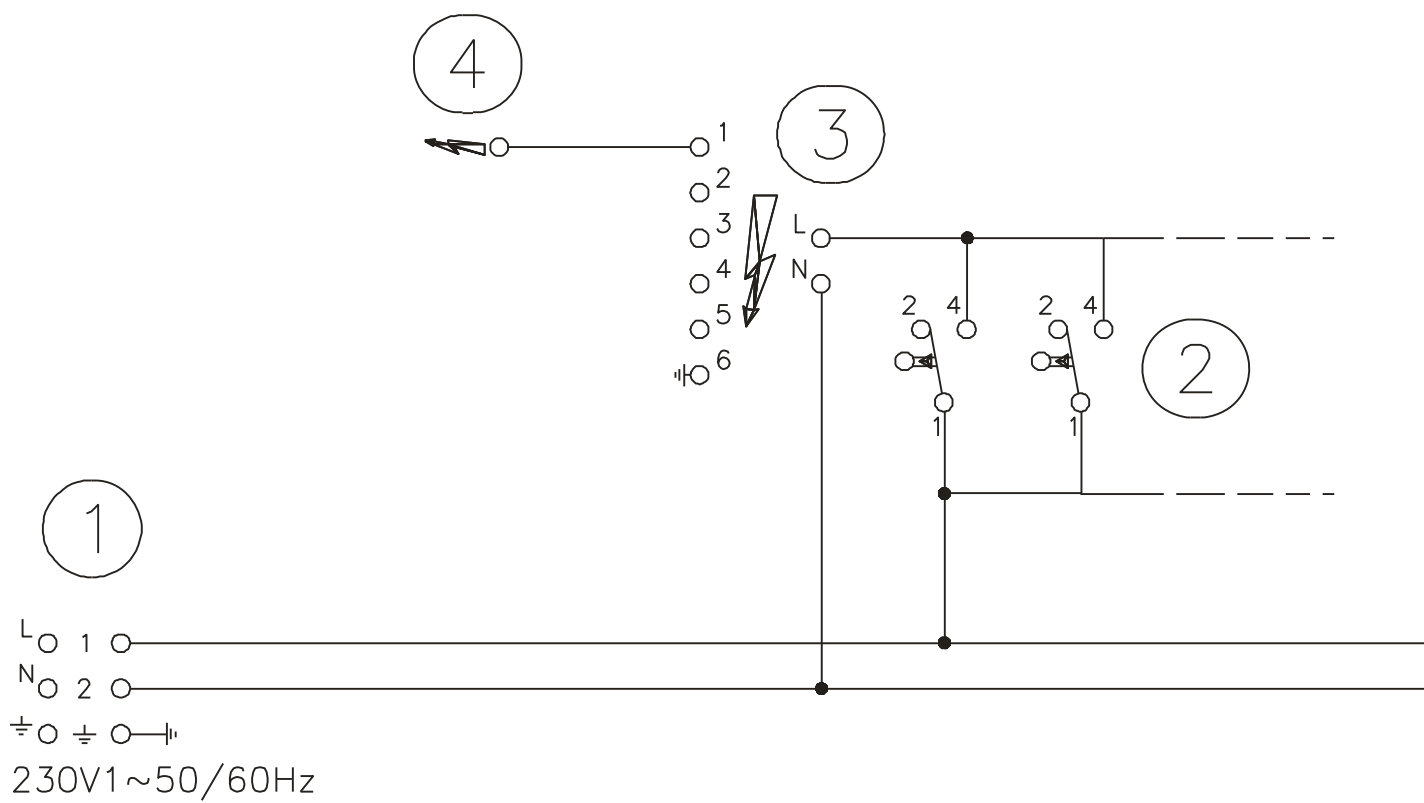


Fig. I

WIRING DIAGRAM STATIC OVEN GN2/1

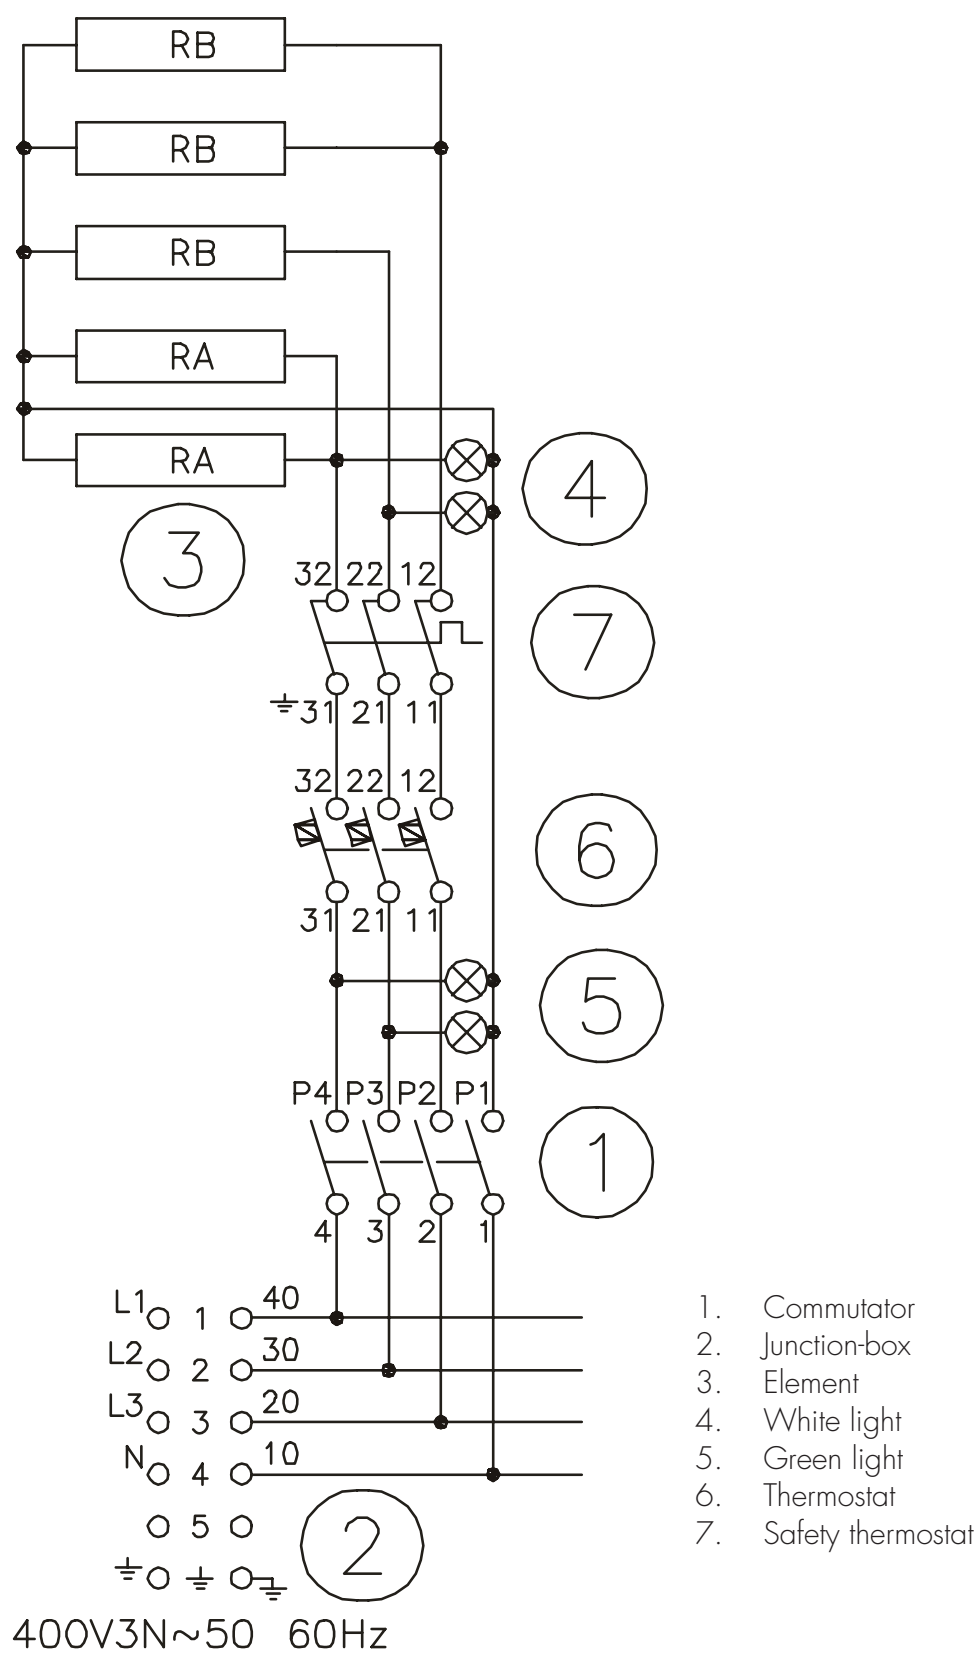

## DECLARATION OF COMPLIANCE

This appliance is manufactured by OFFICINE GULLO S.r.l



**OFFICINE GULLO**  
F I R E N Z E

Headquarters and factory  
Via Della Torricella 29, Antella, Bagno a Ripoli  
50012 Florence - Italy  
Tel. +39 055 65 60 3324  
+39 055 62 18 07  
officinegullo.com | info@officinegullo.com

The manufacturer declares that the appliances are compliant with the prescriptions of the EEC norm 2009/142 for the gas part and with norm 2006/95/CE, 2004/108/CE for the electric part. The installation must be done observing the norms in force particularly concerning room ventilation and discharging gas emissions.

N.B.: The manufacturer declines any responsibility for direct or indirect damage caused by improper or incorrect installation, alterations, maintenance or use of the appliance, as in all the other cases considered in the items of our sales conditions.

### GAS TECHNICAL DATA TABLE

MODEL	Dimensions cm	NOMINAL BURNER CAPACITY kW					TOT. NOM. CAPACITY kW	Gas coupling ISO 7-1
		Burner 3,5 kW	Burner 5,5 kW	Burner 7,5 kW	Coup de feu 7 kW	Gas oven 7,3 kW	Gas	
GG8P	80x70x90h	1	2	1	-	1	29,3	R3/4GM
GES8P	80x70x90h	1	2	1	-	-	22	R3/4GM
GG12P	120x70x90h	1	3	2	-	1	42,3	R3/4GM
GES12P	120x70x90h	1	3	2	-	-	35	R3/4GM
GGPS8P	80x70x90h	-	1	1	1	1	27,3	R3/4GM
GEPS8P	80x70x90h	-	1	1	1	-	20	R1/2GM 3/4GM(1007)
GGPS12P	120x70x90h	1	2	1	1	1	36,3	R3/4GM
GEPS12P	120x70x90h	1	2	1	1	-	29	R3/4GM

## ELECTRIC TECHNICAL DATA TABLE

MODEL	Dimensions cm	Power Supply	Tot. power (KW)	Max. absorb A	Power supply cable mm <sup>2</sup>
GG8P	80x70x90h	230V~ 50/60 Hz	0,01	0,04	5x1
GES8P	80x70x90h	400V~3N 50/60 Hz	5	10,4	5x1,5
GG12P	120x70x90h	230V~ 50/60 Hz	0,01	0,04	5x1
GE12P	120x70x90h	400V~3N 50/60 Hz	5	10,4	5x1,5
GGPS8P	80x70x90h	230V~ 50/60 Hz	0,01	0,04	5x1
GEPS8P	80x70x90h	400V~3N 50/60 Hz	5	10,4	5x1,5
GGPS12P	120x70x90h	230V~ 50/60 Hz	0,01	0,04	5x1
GEPS12P	120x70x90h	400V~3N 50/60 Hz	5	10,4	5x1,5

### INSTALLATION

- The operations for installing, conversions for use with other types of gas and starting up must be done only by qualified personnel whose qualifications comply with the norms in force.
- Gas installations, the electrical connections and the rooms in which the appliances are installed must comply with the norms in force in the Country in which the installation is carried out; above all, the appliance must be installed in a well ventilated room, preferably under an extractor hood, so as to ensure the complete extraction of gas emissions which are formed during combustion. The air necessary for combustion is 2m<sup>3</sup>/h per kW of power installed.

**Attention:** In accordance with international rules, when connecting the appliance, an automatic device enabling the disconnection of all contacts from the mains, must be installed above it; this device must have a contacts opening of at least 3 mm.

## CHECKING FOR ADEQUATE VENTILATION

Make sure that the air intake into the room where the appliance is installed is sufficient for an adequate change of air, as specified by regulations in effect.

The appliances installed in buildings open to the public must satisfy the following requirements.

### Installation rules

The installation and maintenance of the appliance must be done according to the correct procedures and regulation texts in use, particularly:

- **safety standards for the prevention of fire and panic.**

Connection and installation of appliance, ventilation and exhaust removal systems, shall be done according to the Manufacturer's instructions and by qualified technicians and according to the regulations in effect. The electric wiring shall conform to the regulations in effect.

All fire prevention codes shall be observed.

a) General indications **(Rules valid for GB only)**

- **For all appliances:**

Gas safety Regulations, 1984; Health and safety at Work Act, 1974 Codes of Practice, BS 8173, 1982, The Building Regulations 1985; The Building Standards Regulations, 1981, the IEE Regulations and the by-laws of the local Water Undertaking.

The local gas Region or LPG supplier and the local authority and the relevant recommendation of the British Standards (latest editions) concerned.

The installation, transformation and repair of appliances for professional kitchens as well as removal due to malfunction, and the supply of gas, may be made only by means of a maintenance contract stipulated with an authorized sales office and in observance of technical regulations.

The appliance can be installed by itself or in a series side by side with appliances produced by us.

There must be a minimum distance of at least 10 cm between the appliance and the sides of the nearby cabinets made of inflammable material.

Take suitable measures to guarantee thermal insulation of the inflammable sides, such as, for example, the installation of protection against radiation.

The appliances must be installed in a suitable manner, observing the safety standards.

The small feet are adjustable to level the appliance.

## PIPE FOR GAS CONNECTION

The gas connection must be done with steel or copper pipes, or otherwise with flexible steel pipes in compliance with the national norms, if any exist. Each appliance must be provided with a cut-off cock for rapid interruption of the gas supply. Once the appliance has been installed, it is necessary to check for gas leaks for the pipe fittings; do not use a flame for this purpose but a non-corrosive substance such as soapy water or foamy substances as contained in leakfinder sprays. All our appliances undergo careful testing: the type of gas, the operating pressure and the category are indicated on the data plate.

**NB:** The year of the appliance manufacture is shown in item "N" on the data plate. The first two numbers (e.g. 08..) represent the year of manufacture.

## ELECTRIC CONNECTION


The appliance is supplied without the connection cable; to install it, proceed in the following way:

- Remove the back panel
- Push the connection cable through the cable channel, connect the conductor wires to the corresponding terminals in the junction box and fix them into place.
- Block the cable with the cable blocker, and reassemble the panel. The earth wire must be longer than the others so that if the cable blocker should break, it will disconnect after the tension wires.

N.B. The connection cable must have the following characteristics: it must be type H05RN-F and must have an adequate section for the power of the appliance (see technical data table).

## EQUIPOTENTIAL

The appliance must be connected to an equipotential system.

The connection screw is positioned at the back of the appliance and is identified by the symbol .

**Attention!** The manufacturer will neither be held responsible for, nor will give any compensation during the guarantee period for any damage caused, and which is due to inadequate installations not compliant with the instructions.

## CHECKING HEAT OUTPUT

The appliances must be checked in such a way as to verify that the heat output is correct:

- The heat output (thermal power) is indicated on the data plate of the appliance;
- Firstly, check that the appliance can be used with the type of gas supplied; then check that the indication on the plate corresponds to the gas to be used. For converting to another type of gas, check that the type of gas complies with what is stated in this instruction manual.

The pressure is read with a gauge (minimum resolution of 0.1 mbar) inserted in the relative pressure outlet.

Remove the hermetically closed screw and insert the gauge pipe.

After reading, put back the screw tightening it hermetically and check for pressure leaks.

### Connection for liquid gas G30/G31

The connection pressure for liquid gas is 30 mbar with butane and 37 mbar with propane.

Check the plate, read the pressure and verify that the description of the nozzle installed corresponds to the one supplied by the manufacturer.

### Connection with natural gas H G20

The connection pressure for natural gas is 20 mbar.

Check the plate, read the pressure and verify that the description of the nozzle installed corresponds to the one supplied by the manufacturer.



## CHECKING PRIMARY AIR TO THE MAIN BURNERS AND PILOT NOZZLES

All the burners are fitted with an air regulator by means of which the primary air can be varied thanks to an adjustable bush that can be locked with a screw. In the Burner Technical Data table you will find the approximate values for the "h" parameter (primary air). The flow of primary air must be regulated so there is no detachment of the flame when the burner is cold or a return of the flame when the burner is hot.

The pilot air is regulated when the appliance is tested and inspected for the gas it is set for.

If you are going to change to a different type of gas, regulate the air by means of the adjusting bush until the flame stops sputtering and becomes an intense blue colour.

**BURNER TECHNICAL DATA TABLE**

Burner max 3,5 kW- min. 1,15 kW	12,8 kWh/kg G30 BUTANE 30 mbar	12,8kWh/kg G31 PROPANE 37 mbar	9,45 kWh/m <sup>3</sup> st. G20 NATURAL GAS H 20 mbar
Burner injector 1/100 mm Min. output adjustment 1/100 mm Consumption Primary air h=mm	90 50 kg/h 0,276 open	90 50 kg/h 0,272 open	145 adjustable m3 st./h 0,370 open
Burner max 5,5 kW- min. 1,55 kW			
Burner injector 1/100 mm Min. output adjustment 1/100 mm Consumption Primary air h=mm	115 60 kg/h 0,434 open	115 60 kg/h 0,427 open	175 adjustable m3 st./h 0,582 20
Burner max 7,5 kW- min. 2,5 kW			
Burner injector 1/100 mm Min. output adjustment 1/100 mm Consumption Primary air h=mm	135 75 kg/h 0,591 20	135 75 kg/h 0,582 20	205 adjustable m3 st./h 0,794 20
Coup de feu Burner max 7 kW- min. 4 kW			
Burner injector 1/100 mm Min. output adjustment 1/100 mm Pilot Injector 1/100 mm Consumption	130A 100 20 kg/h 0,552	130A 100 20 kg/h 0,544	195 adjustable 35 m3 st./h 0,740
Oven Burner max 7,3 kW- min. 2,2 kW			
Burner injector 1/100 mm Min. output adjustment 1/100 mm Pilot Injector Consumption Primary air h=mm	145 75 1x19 0.570 kg/h 12	145 75 1x19 0.570 kg/h 12	205 adjustable 1x27 0.772 m3 st./h 12
Oven Burner max 11 kW- min. 3,5 kW			
Burner injector 1/100 mm Min. output adjustment 1/100 mm Pilot Injector Consumption Primary air h=mm	175 100 1x19 0.859 kg/h 13	175 100 1x19 0.859 kg/h 13	270 adjustable 1x27 1.164 m3 st./h 13

Burner max 3,5 kW- min. 1,15 kW	G110 8 mbar	G150.1 8 mbar	Town gas G110 10 mbar
Injector (marking)	250	250	235
By-pass (screw adjustment (number of turns anti-clockwise from fully closed position)	1/2	1/2	1/2
Air adjustment (mm)	11,0	11,0	11,0
Burner max 5,5 kW- min. 1,55 kW			
Injector (marking)	340	340	320
By-pass (screw adjustment (number of turns anti-clockwise from fully closed position)	3/4	3/4	3/4
Air adjustment (mm)	8,5	8,5	8,5
Burner max 7,5 kW- min. 2,5 kW			
Injector (marking)	450	450	390
By-pass (screw adjustment (number of turns anti-clockwise from fully closed position)	1+1/2	1+1/2	3+1/2
Air adjustment (mm)	10,0	10,0	10,0
Oven Burner max 6,5 kW- min. 2,2 kW			
Injector (marking)	500	500	450
By-pass (screw adjustment (number of turns anti-clockwise from fully closed position)	2	2	2
Air adjustment (mm)	14,0	14,0	14,0
Pilot injector	50	50	50

## RULES FOR CONVERTING AND INSTALLING OTHER TYPES OF GAS

Our appliances are tested and regulated for liquid gas.

The conversion or adaptation to another type of gas must be carried out by a specialized technician. The nozzles for the various types of gas are in a packet supplied with the appliance and are marked in hundredths of mm (see the technical data table).

### CHANGING THE OPEN RING NOZZLES

#### Main nozzles

Take the rungs off, remove the burners and trays, with a size 12 spanner substitute the nozzles with the appropriate ones, regulate the primary air (h) (see the "burner" technical data table) unscrewing the securing screw. Once regulated, tighten the screw, adjust the minimum flame by turning the screw to the right or left until the thermal power reaches 1,15 kW for the 3,5 kW burner, 1,55 kW for the 5,5 kW burner and 2,5 kW for the 7 kW burner.

**Warning:** If liquid gas is being used the minimum adjustment screw must be locked right down.

### SUBSTITUTING THE NOZZLE IN THE OVEN BURNER

To substitute the oven burner, proceed as follows:

- Remove the oven bottom (floor);
- Unscrew the fixing screws from the burner nozzle protection.
- Substitute the nozzle, using a suitable spanner (see "burners" technical data table).
- Regulate the air regulation bush to the corresponding value in the "technical data" table by unscrewing the fixing screw with relative jam nut, regulate minimum output by turning the screw to the right or to the left until the thermal power reaches 2,2 kW for the burner of 7,3 kW and 3,5 kW for the burner of 11 kW; this procedure is only possible after having let the oven burner work at maximum output for about 20 minutes (knob in pos. 300).
- After this procedure, put back the burner nozzle protection.
- Substitute the pilot nozzle, using a suitable spanner.

After regulating, check lighting, at both maximum and minimum output. Make sure that, when changing rapidly from minimum to maximum output, the flame does not present any problems and that it doesn't go out, when closing or opening the oven door quickly.

**Warning:** For functioning with liquid gas, screw down the regulating screw completely.

### SUBSTITUTING THE NOZZLE IN THE COUP DE FEU BURNER

Remove the panel and with a suitable spanner substitute the nozzle with another, suitable one.

Adjust the minimum flame by turning the by-pass screw either to the right or to the left until heat output reaches 4 kW.

The primary air of the all plate burner does not need adjusting.

**Attention:** If liquid gas is used, the minimum flame adjustment screw must be screwed right down.

## CHECKING FUNCTIONING

The appliance contains the instructions necessary for use.

Check the appliances for gas leaks.

Check the lighting and flame of the main burner.

We urge the user to follow the instructions when using the appliance.

## MAINTENANCE

With prolonged use of the appliance, it is essential to carry out regular maintenance for the safe functioning of the appliance; we therefore recommend drawing up a contract for after sales service. Maintenance must be done only by specialized personnel, observing the norms in force and our indications.

## SPARE PARTS

### Coup de feu:

It is possible to substitute the spark plug cock, thermocouple and burner after having removed the front panel.

### Open rings:

The cocks can be changed by removing the front panel; to change the thermocouples and burners you have to remove the rungs and trays.

### Gas oven:


the gas-cock, timer, thermocouples, burners and ignition plugs can be changed by accessing them inside the oven and/or by removing the bottom oven panel or control panel.

# USER MANUAL

## INSTRUCTIONS FOR USE


**Attention!** The appliance must only be used under surveillance.

### LIGHTING AND ADJUSTING THE BURNERS

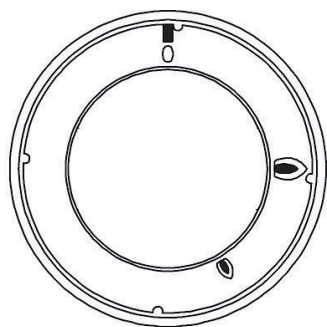


On the front panel, above each knob, there is a symbol which indicates to which burner the knob corresponds.



To light, turn the knob to the left from position "0" to the  symbol (see figure); keep it pushed down and press the button with the  symbol until the gas lights.

The knob must be kept pushed down for a few seconds and then released. The flame may go out, in which case it is necessary to repeat the procedure. By turning to the  position, the burner is brought to the minimum. To put out the burner, turn the knob back into the "0" position.
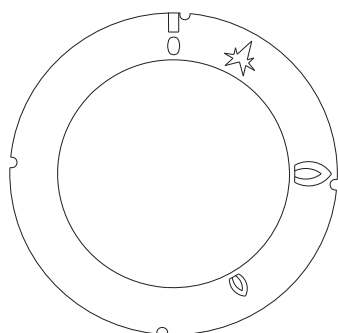
### LIGHTING AND ADJUSTING THE COUP DE FEU



On the front panel, above each knob, the burner it corresponds to is indicated by the index.


To light the pilot flame, turn the knob to the left from position "0" to the  symbol (see figure); keep it pushed down and press the button with the  symbol until the gas lights. Keep the knob pressed a few second and then let it go.

If the flame goes out you have to repeat the procedure.

By turning the knob round to the position  the burner is at maximum.

By turning the knob round to the position  the burner is at minimum. To switch off, move the knob back into position "0".

## LIGHTING AND REGULATING GAS OVEN BURNER

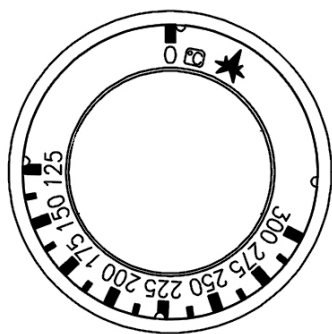


To light, turn the knob to the left from position "0" to the ★ symbol (see figure); keep it pushed down and press the button with the ⚡ symbol until the gas lights. It is possible to check the flame through the inspection hole on the oven floor (bottom); after a few seconds, release the knob. If the flame goes out, repeat the operation. Turn the knob into the position of the desired temperature. To turn off the oven, turn the knob to the right, into position "0"

Before turning the oven on, make sure the oven racks are in the desired position. Preheating the oven is essential for baking. It is recommended to pre-heat the oven slightly warmer than the cooking set point for at least 30 minutes. All cooking times are based on a preheated oven unless otherwise stated in the recipe.

**Attention!** When the oven is on, the door must not remain open because it could heat and damage the knobs.

## LIGHTING AND REGULATING THE ELECTRIC OVEN

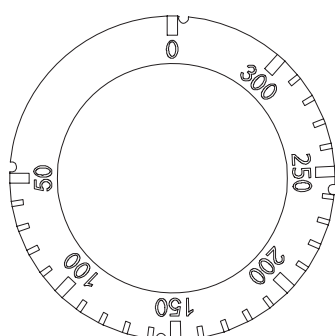





Before turning the oven on, make sure the oven racks are in the desired position.

Turn the control knob to the right and set the temperature wanted.

 To turn the oven off, turn the knob to the left to position 0.

To turn the oven on, turn the selector knob (see figure) to the right or left into one of the following positions

-  Top + bottom heating element
-  Bottom heating element
-  Top heating element

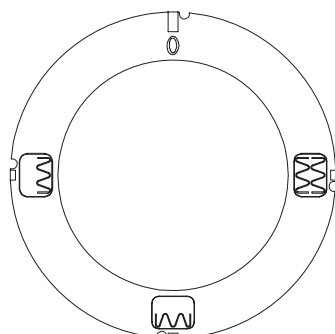

Preheating the oven is essential for baking. It is recommended to pre-heat the oven slightly warmer than the cooking set point for at least 30 minutes. All cooking times are based on a preheated oven unless otherwise stated in the recipe.

**Caution:** when the oven is on the door must be kept shut otherwise the knobs and protection sheet could get hot and be damaged.



## CLEANING AND MAINTENANCE

Attention! During cleaning, do not wash the external parts of the appliance with direct sprays of water or with high pressure.

After every use, clean the appliance thoroughly. Daily cleaning after switching off the appliance ensures the perfect functioning and long life of the appliance.

Before starting to clean the appliance, disconnect the power supply. The parts in steel must be washed with hot water and neutral detergent, then rinsed thoroughly in order to eliminate all traces of detergent; after which, dried with a dry cloth. Do not use abrasive or corrosive detergents.

The enamelled parts should be washed with soapy water.

Oven: Cleaning the oven is made easier by removing the support grill.

Important: As well as ordinary cleaning and maintenance, it is advisable to have the installation checked by an installer at least once a year.

It is therefore suggested to draw up an after-sales assistance contract.

### Cleaning burnished brass surfaces

No synthetic protective varnishes have been used to obtain the special burnishing effect on the burnished brass details in order to avoid spoiling the beauty of the brass with an artificial patina. The antique finish of the surface is the result of natural oxidation that has simply been accelerated. All the natural antique finish brass surfaces can be cleaned with any kitchen degreasing detergent, accompanied by the use of an abrasive scouring pad (the green colored type used for washing dishes). It is recommended that the metal be rubbed, uniformly applying light pressure, until the desired effect is achieved.

The brass details should then be dried.

Do not use polish as this is suitable for maintaining the gloss but not the antique finish and could result in an effect that is not compliant with our products. Any spots that may appear over time on the burnished brass surfaces should be considered as a desirable and particular characteristic of our craft metal working processes.

### Cleaning chromium-plated brass surfaces

No synthetic varnishes have been used to obtain the special polish on the chromium-plated brass details in order to avoid spoiling the beauty of the chromium plating with an artificial patina. All the chromium-plated surfaces should be cleaned, where necessary, with a soft, possibly micro-fiber cloth, combined with metal polishing products, if required. Do not use abrasive pads.

### Cleaning satin finish nickel-plated brass surfaces

No synthetic varnishes have been used to obtain the special nickel-plating on the satin finish nickel-plated brass details in order to avoid spoiling the beauty of the nickel-plated, satin finished solid brass with an artificial patina. All the nickel-plated and satin finished brass surfaces should be cleaned, where necessary, with a soft, possibly micro-fiber cloth, combined with a neutral detergent, if required. Do not use abrasive pads.

### Cleaning the varnished surfaces

All the varnished surfaces should be cleaned using a neutral detergent and, where necessary, a soft, possibly micro-fiber cloth. Do not use abrasive pads or any other chemical products.

### Cleaning brushed steel surfaces

All the brushed steel surfaces should be cleaned using degreasing products or products specifically designed to be used on steel and, where necessary, extra-fine steel wool or extra-thin sandpaper.

## WHAT TO DO IN THE EVENT OF A BREAKDOWN

Turn off the gas tap and notify the after sales service.

## PROCEDURE TO FOLLOW IF THE APPLIANCE IS NOT GOING TO BE USED FOR SOME TIME

Turn off the gas tap and clean the appliance as specified above.

## MAINTENANCE (only for qualified personnel)

Any kind of maintenance must only be done by qualified personnel. Before carrying out maintenance, remove the plug or switch off the switch above the appliance.

## INSTRUCTIONS FOR DISCHARGING GAS EMISSIONS

### Type "A" Appliances (See data plate)

Type "A" appliances must discharge the products of combustion into extractor hoods or similar devices connected to an efficient chimney, or directly outside.

(Natural Discharge) Fig. 1.

If there is no hood, as an alternative, an air extractor connected directly to the outside is acceptable, (Forced Discharge) Fig. 2, but its capacity must not be inferior to what is established in item 4.3 of the UNI-CIG norm 8723.

### In the event of forced discharge

The gas supply to the appliance, must be directly interlocked to the system and cut off automatically if its capacity drops below the values prescribed by item 4.3 of the UNI-CIG norm 8723.

Supplying the appliance with gas again must only be possible manually.

### NATURAL DISCHARGE

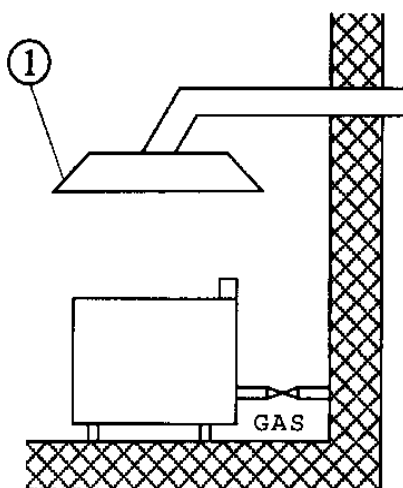


Fig.1

1. Extractor hood

### FORCED DISCHARGE

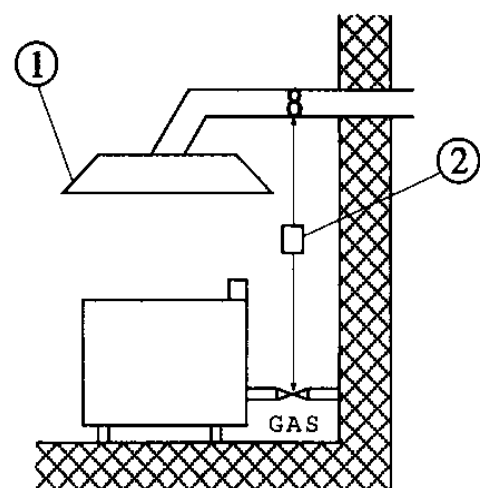


Fig.2

1. Extractor hood  
2. Interlocking

### Type "B11" appliance (see data plate)

#### 1) Natural Discharge (fig.3)

Connection to a chimney with natural pull made reliably efficient by means of an anti-wind fitting and discharging the products of combustion directly outside.

#### 2) Forced Discharge (Fig.4)

The gas supply to the appliance must be directly interlocked to the system of forced discharge and must cut off automatically in the event that its capacity goes below the values prescribed by item 4.3 by the UNI-CIG norm 8723.

The release of gas to the appliance must be possible only manually.

In the event of installation, the end part of the discharge pipe of the appliance must be at least 1.8 m from the surface on which the appliance is placed (ground). The section of the discharge pipe outlet must be placed inside the perimeter.

#### NATURAL DISCHARGE

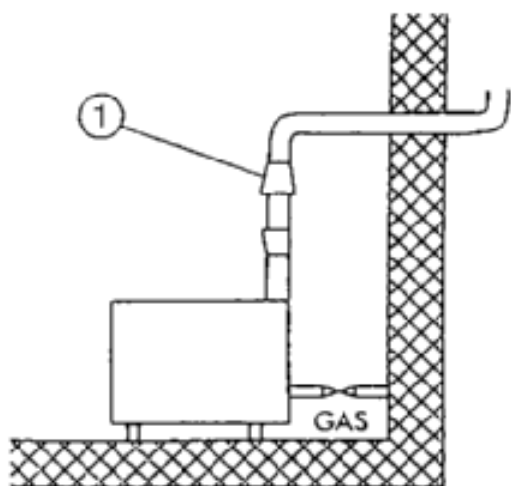


Fig. 3

1) Anti-wind (blow back) chimney

#### FORCED DISCHARGE

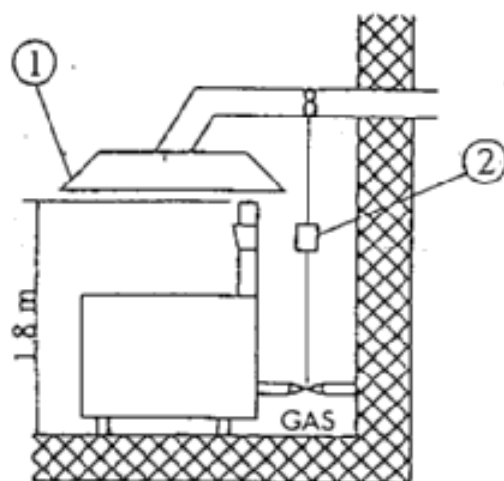


Fig. 4

1. Extractor hood  
2. Interlocking

Type "B11" appliances are supplied upon request with chimney or chimney and anti-wind (blow back) device to be assembled and delivered separately.







en  
international  
V 1.3 - 8.18

Tel. +39 055 656 0324 | [info@officinegullo.com](mailto:info@officinegullo.com)  
Via Della Torricella 29, Antella, Bagno a Ripoli - 50012 Florence - Italy

**OFFICINEGULLO.COM**