

# VISIONTRACK

THE NEXT GENERATION OF TELEMATICS  
AND INTEGRATED CAMERA SOLUTIONS

# VT2000

How to replace the SD card



THE UK'S MOST AWARD-WINNING CAMERA TELEMATICS COMPANY



[www.visiontrack.com](http://www.visiontrack.com)

The purpose of this guide is to show you how to replace the SD card within the VT2000.

Please make sure the VT2000 is powered off and showing no LED's before you remove the SD card.

You will need the following:

- Replacement SD Card
- Key



Insert the key into the lock barrel and turn clock wise.



With a firm grip slide the locking case away from the VT2000.



Push the SD card in to click release it.



Pull the SD card out of the VT2000 and put this aside.



Push the new SD card into the VT2000 until you hear a click, this means the SD card is in securely, it will also sit flush within the casing.



Once the SD card is back in the VT2000, please place the locking case back over the VT2000.



You can now take the key and lock the case, moving the key anti clock wise. once complete please power the camera to confirm the SD card is being detected.

