



## Connection Guide

### Connection Guide for VT2000 to VT-PANIC



VT2000



VT2000 & VT2.2 POWER DELAY



VT-PANIC

<b>VT2000 &amp; VT2.2 POWER DELAY Cabling</b>	<b>VT2000 &amp; VT2.2 POWER DELAY</b> Specifications Input: DC 10-32V, 2000mA Output DC5V, 2500mA	<b>VT-PANIC</b>
---	--	-----------------

- Black (Ground)
- Red (Power Battery +)
- White (Power ACC +)
- Green (Alarm In, NC/NO),
- Black (Ground), (NC/NO Alarm-)
- Orange (Alarm In, Voltage on/off (3-70V) (External panic button+)
- Yellow (Alarm out), Low(0V) to High (5V)



Please note as part of the installation you are required to press the calibration button on the camera.

- 1) Install the unit and park the vehicle on a flat surface.
- 2) Turn on the unit, after the unit has booted please press the calibration button for three seconds.
- 3) Once calibration is complete the unit will beep to confirm this is done.



VT-Panic



Calibration button

**t** +44 (0) 1246 225 745  
**e** info@visiontrack.com  
**w** visiontrack.com  
**s** support.visiontrack.com