

- D Germany** Landmann® GmbH & Co. Handels-KG  
Am Binnenfeld 3-5, D-27711 Osterholz-Scharmbeck, Deutschland  
Tel. \*\*49 - 47 91 - 30 8 - 59 oder 16, Fax \*\*49 - 47 91 - 30 8 - 36  
Mo-Do 8:00 bis 16:45 Uhr, Fr 8:00 bis 15:30 Uhr  
e-mail: ohz@landmann.de, internet: www.landmann.com
- GB United Kingdom** Landmann® Ltd.  
Unit 6 Blackstone Road, Stukeley Meadows Industrial Estate, Huntingdon, Cambs, PE29 6EF, United Kingdom  
Customer Service: 014 80 - 42 17 20  
Monday to Thursday 9am to 5pm, Friday, 9am to 4pm.  
e-mail: enquiries@landmann.co.uk, internet: www.landmann.co.uk
- F France** LANDMANN France S.A.S.U.  
Saarlandstrasse 16-20, D-66482 Zweibrücken  
Tel.: 0033 3 87 88 08 38  
Email: receptionfrance@landmann.de
- I Italiy** La preghiamo di rivolgersi all'ufficio tedesco.
- H Hungary** Landmann Hungária Kft.  
Almáskert u. 4., H-2220 Vecsés  
Tel. \*\*36 - 29 - 55 50 70, Fax \*\*36 - 29 - 35 49 32  
Hétfő-Csütörtök 8:00 - 16:30, Péntek 8:00 - 16:30  
e-mail: infohun@landmann.de, www.landmann.hu
- PL Poland** Landmann® Polska Sp.z.o.o.  
ul. Kuziennicza 13b, 59-400 Jawor, Polska  
Tel. \*\*48 - 76 - 8 70 24 61, Fax \*\*48 - 76 - 8 70 23 88  
Poniedziałek - czwartek od 8:00 do 16:45, piątek od 8:00 do 15:30  
e-mail: landmann@landmann.pl, internet: www.landmann.pl
- S Sweden** Landmann® Skandinavia AB  
Storgatan 70, S-568 32 Skillingaryd, Sverige  
Tel. \*\*46 - 3 70 - 69 35 80, Fax \*\*46 - 3 70 - 4 95 80  
Måndag-Fredag, 08.00 - 16.00  
e-mail: landmann@landmann.se, internet: www.landmann.se
- N Norway** Landmann® Norge AS  
Sandstuveien 60 A, N-1184 Oslo, Norway  
Tel. \*\*47 - 23 - 16 50 10, Fax \*\*47 - 23 - 16 50 11  
Mandag-Fredag 08:00 - 16:00  
e-mail: landmann@landmann.no, internet: www.landmann.no
- DK Denmark** LANDMANN® Danmark A/S  
Kastanievej 30, DK - 2670 Greve, Danmark  
Tel. \*\*45 - 59 44 74 14, Fax \*\*45 - 59 44 74 41  
Mandag-Torsdag: 8.00 - 16.00, Fredag 8.00 - 15.00  
e-mail: landmann@landmann.dk, internet: www.landmann.dk
- FIN Finland** Landmann® Finland OY  
Laulakuja 4, PL. 1, SF-00421 Helsinki, Finland  
Tel. \*\*358 - 9 - 47 70 93 - 0, Fax \*\*358 - 9 - 47 70 93 50  
Maanantai-Perjantai 8:30 - 16:30  
e-mail: landmann@landmann.fi, internet: www.landmann.fi

**D Montage- und Betriebsanleitung**

 
**S Monterings- och bruksanvisning**

**N Monterings- og driftsanvisning**

**FIN Kokoamis- ja käyttöohje**

**DK Montage- og betjeningsvejledning**

**GB Assembly and operating manual**

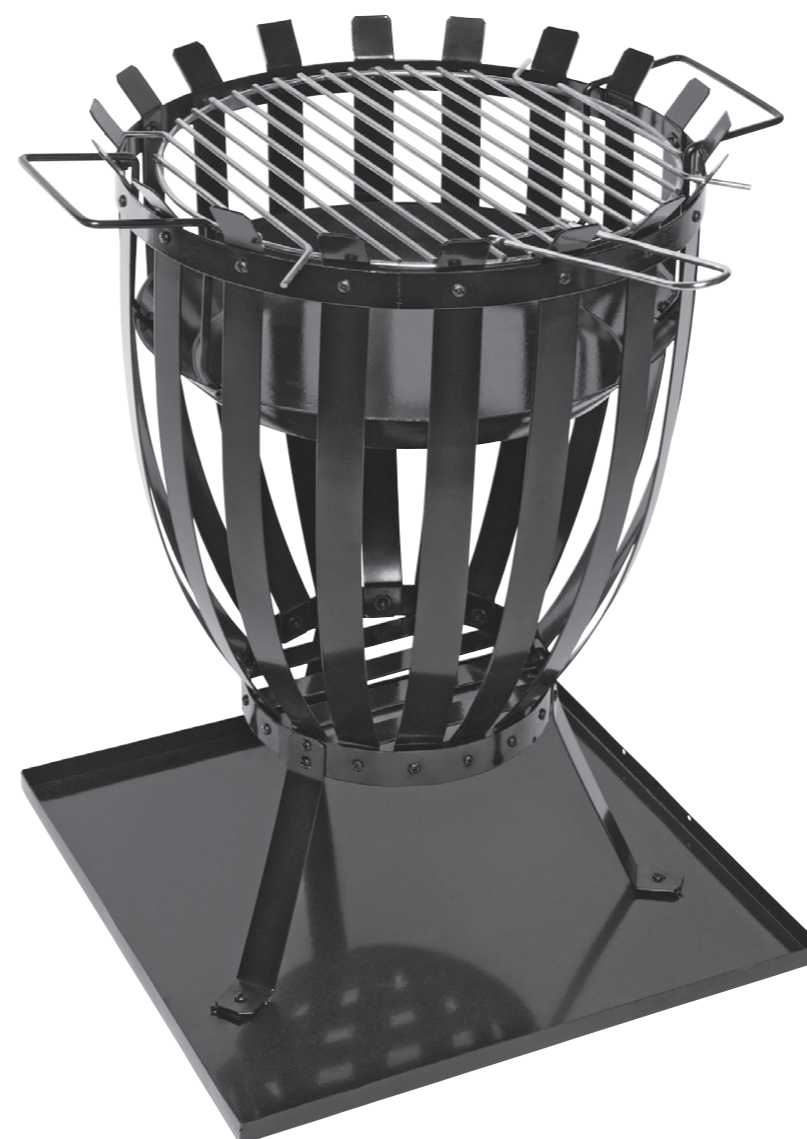

**D Vor Montage und Inbetriebnahme erst lesen!**

Das Nichtbeachten der Vorgaben dieser Anleitung kann eine Beeinträchtigung der Funktion oder die Beschädigung des Geräts, anderer Sachwerte sowie Personenschäden zur Folge haben.

Lesen Sie deshalb vor der Montage und vor jeder Inbetriebnahme die entsprechenden Kapitel dieser Anleitung. Befolgen Sie die Arbeitsschritte in der vorgegebenen Reihenfolge und beachten Sie die enthaltenen Sicherheitshinweise.

Diese Anleitung ist Teil des Produkts. Verwahren Sie diese deshalb ständig am Produkt und übergeben Sie diese an jeden nachfolgenden Benutzer

**FIN Lue ennen kokoamista ja käyttöönottoa!**

Näiden ohjeiden noudattamatta jättäminen saattaa haitata laitteen toimintaa tai vahingoittaa laitetta tai aiheuttaa muita esine- tai henkilövahinkoja.

Lue ohjeen vastaava luku ennen kokoamista ja käyttöönottoa. Käy työvaiheet läpi oikeassa järjestyksessä ja noudata turvallisuusohjeita.

Tämä ohje on osa tuotetta. Säilytä se siksi aina tuotteen lähetyvillä ja luovuta se tuotteen mukana seuraavalle käyttäjälle

**GB Please read before assembling and using!**

Failure to observe these instructions can affect or damage the device and other objects and lead to personal injury.

We therefore recommend that you read the relevant chapter of these instructions prior to assembly and before each use. Follow the steps in the order they are specified and please observe the safety warnings.

These instructions form part of the product. They should therefore always be stored with the product and passed on to each subsequent user.

**N Må leses før montering og igangkjøring!**

Manglende overholdelse av instruksjonene i denne anvisningen kan påvirke funksjonen eller skade enheten, andre gjenstander eller føre til personskader.

Les derfor de aktuelle kapitlene i denne anvisningen før montering og før hver igangkjøring. Følg arbeidstrinnene i den angitte rekkefølgen og overhold de opplyste sikkerhetsanvisningene.

Denne anvisningen er en integrert del av produktet. Oppbevar den derfor alltid på produktet og gi den videre til alle påfølgende brukere

**DK Læses inden montage og idriftsættelse!**

Det kan medføre en forringet funktion eller beskadigelse af apparatet, og der kan ske beskadigelse af andre materialer eller personskader, hvis anvisningerne i denne betjeningsvejledning ikke overholdes.

Læs derfor de pågældende kapitler i denne betjeningsvejledning inden montage og ibrugtagning. Følg de enkelte arbejdsstrin i den foreskrevne rækkefølge, og overhold alle de angivne sikkerhedsanvisninger.

Denne vejledning er en del af produktet. Opbevar den derfor altid sammen med produktet, og sørg for at give betjeningsvejledningen videre til andre, der senere anvender produktet.

 
**S Ska läsas före montering och första användning!**





Om inte riktlinjerna i denna bruksanvisning följs kan det påverka apparatens funktion eller skada den och dessutom leda till andra sak- eller personskador.

Läs därför igenom motsvarande kapitel i bruksanvisningen innan du börjar med monteringen och alltid innan du ska använda enheten. Följ stegen i angiven ordning och rätta dig efter alla säkerhetsanvisningar.

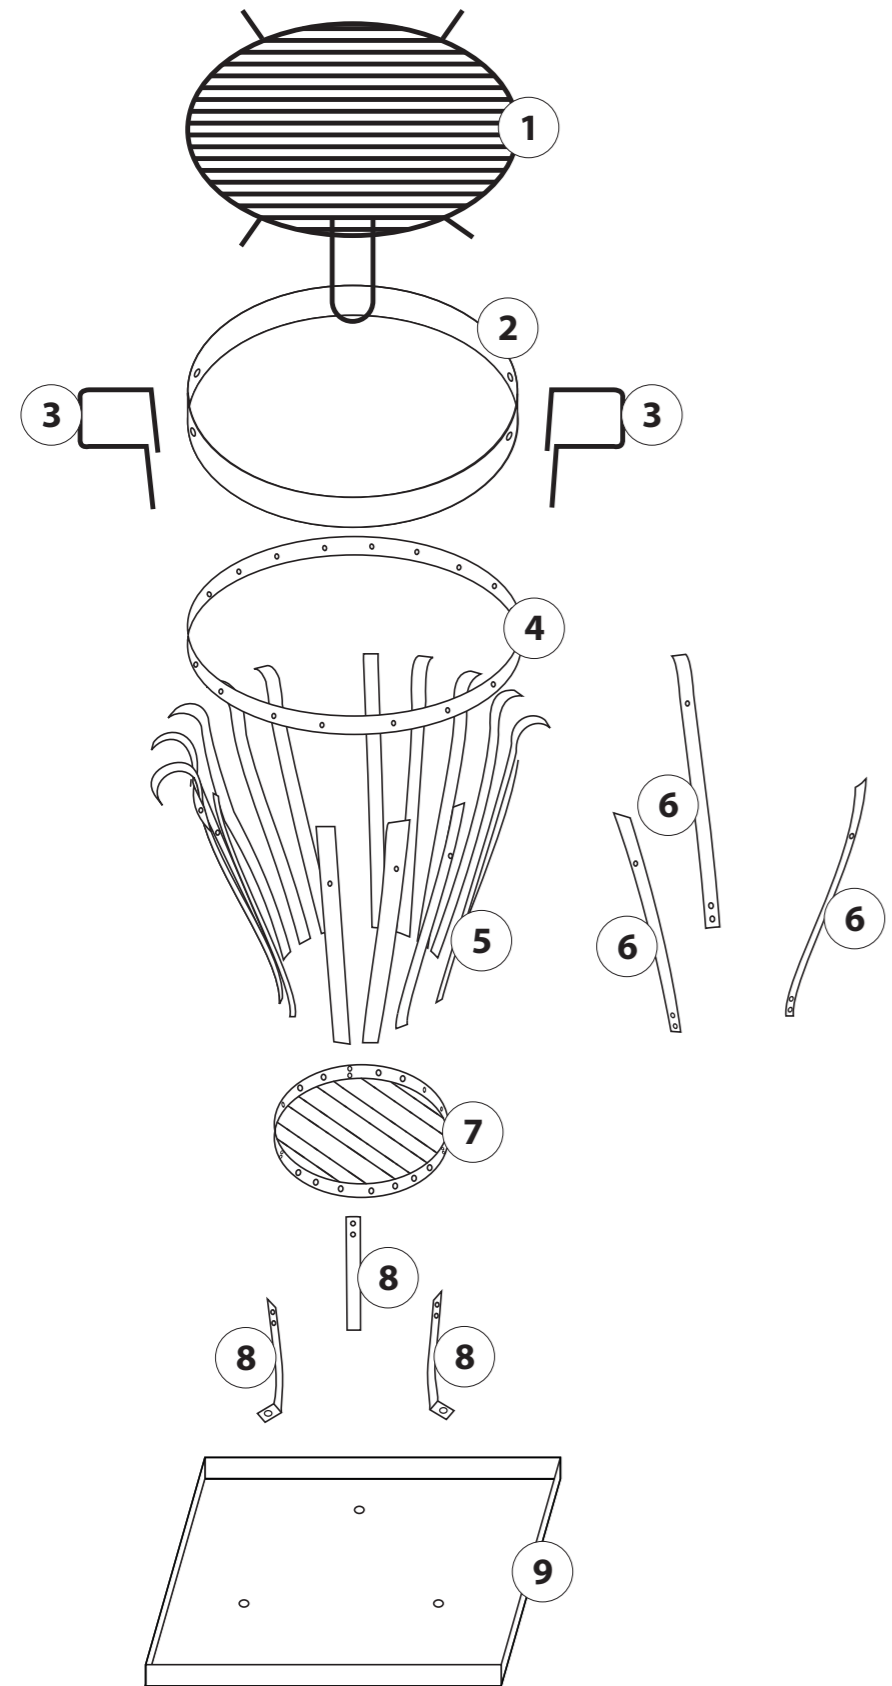Denna handledning är en del av produkten. Förvara den alltid i närheten av denna och lämna över den till efterföljande användare.





			
S1	S2	U	
M5x20	M5x10	Ø5	M5
6x	40x	43x	43x

# **GB** Assembly and operating manual

## **Table of contents**

<b>Delivery specifications</b> .....	<b>36</b>
<b>Utilisation</b> .....	<b>36</b>
Correct usage .....	36
Incorrect usage.....	36
<b>Warranty</b> .....	<b>36</b>
<b>Safety instructions</b> .....	<b>36</b>
Definition of instructions used.....	36
General safety precautions.....	37
Residual risks .....	37
<b>Danger</b> .....	<b>38</b>
<b>Operation</b> .....	<b>39</b>
Using the fire pit as a fire basket.....	39
Using the fire pit as a barbecue .....	40
Decommissioning the fire pit .....	40
<b>Cleaning</b> .....	<b>40</b>
<b>Environmental information and disposal measures</b> .....	<b>40</b>
<b>Specifications</b> .....	<b>40</b>

## Delivery specifications

Pos. *	Qty.	Designation
1	1	Cooking grill
2	1	Fire bowl
3	2	Fire bowl handle
4	1	Retaining ring (large)
5	15	Grill strut (with 2 drill holes)
6	3	Grill strut (with 3 drill holes)
7	1	Retaining ring (small) (with bottom inlay)
8	3	Tripod
9	1	Ash plate

\* see fold-out page

## Utilisation

### Proper use

The fire pit may only be used outdoors for the following purposes:

- As a fire basket in combination with fire wood (wood fire). Do not use the fire bowl (2) and the cooking grill (1) in this case.
- As a barbecue for cooking suitable foods. For this use you **must** have the fire bowl (2) and cooking grill (1) in place. The only approved fuels are barbecue charcoal or briquettes. The fuel must be located in the fire bowl (2).

Always observe all of the instructions in this manual when using the fire pit.

**This fire pit is only intended for private use.**

### Improper use

Any other use or application extending beyond the intended purpose is not permitted. This applies to the following types of misuse in particular:

- Do not use any fuel other than approved charcoal, barbecue briquettes, or fire wood in the fire pit.
- Do not use the fire pit to heat materials and substances other than food that is suitable for barbecuing.
- Only barbecue food over the fire bowl filled with barbecue charcoal or briquets, not over the wood fire.

## Warranty

Landmann guarantees this fire pit for a period of two years after the date of purchase.

The warranty covers defective workmanship and parts; it is restricted to the replacement of these parts. Costs for postage, assembly, replacement of worn parts (fire bowl, cooking grill, bottom inlay) and other costs are not covered by this warranty. The warranty shall expire in the event of incorrect operation and any type of unauthorised modification made to the fire pit.



Please retain your receipt in case you need to make a warranty claim.

## Safety instructions



### Definition of terms used

The following pictograms and signal words are used in these instructions to point out hazards and important information.

### Safety instructions

Pictogram and signal word	Note on ...
 <b>Danger</b>	... a possible danger that can result in severe personal injury or damage to property if the stated measures are not observed.
 <b>Caution</b>	... a possible danger that can result in damage to property if the specified measures are not observed.

### Operating notes

Pictogram	Note on ...
	... a useful function or tip.
	... Danger of confusion; the symbol points to an easily visible part of the component.

## General Safety Precautions

Failure to observe the following basic safety measures can cause severe injury to persons and substantial damage to property:

- Use the fire pit only for the intended purpose.
- Never use the fire pit despite obvious damage.
- Never modify the fire pit's technology. Only use original spare parts by Landmann.
- Only use accessories that are approved for this fire pit (if in doubt, contact customer service).
- Only use the fire pit outdoors and not under a roof.
- Never leave the fire pit unattended when in use. Take particular care to ensure that children and persons with physical or mental disabilities keep well away from the fire pit. They may not be able to identify the dangers correctly.
- When using the fire pit always wear fire-proof gloves for heat protection.
- Small parts may be lethal if swallowed. Note that there is a danger of suffocation if the respiratory tract is covered by packing foil.
- Do not place heavy loads on the fire pit. In particular, observe the maximum weight loads in the Technical Specifications.
- When using the fire pit as a fire basket, burn only dry wood as damp wood, or wood that is unsuitable for burning, has a tendency to let off more sparks.

## Residual risks



### **Danger: explosive deflagration**

Accelerants like petrol, spirits and other similar liquid accelerants are extremely dangerous, as they burn in an explosive way when ignited.

This is particularly true if such accelerants are sprayed or poured onto hot fuel, as this can cause a flashback in the fuel container.

If hot charcoal or briquettes are extinguished with water, an explosive deflagration occurs as the water evaporates instantly.

### **Possible consequences:**

- Severe injury to persons or damage to property, especially burns

### **Safety measures:**

- Only use the fire bowl outdoors and not under a roof.
- Only ignite the fuel with an approved igniter (EN 1860-3) and observe the safety instructions for the igniter while doing so.
- Do not bend over the fire bowl while igniting.
- Do not extinguish charcoal or briquets with water.
- Carefully extinguish burning wood with a moderate amount of water, avoiding splashes.

**Danger: carbon monoxide poisoning**

Carbon monoxide is produced through the incomplete combustion of carbonaceous material such as wood, charcoal or briquettes.

Lack of air circulation increases the concentration of the toxic gas. Open windows or doors do not offer any security. As the combustion gases are not extracted directly via flue systems when burning wood or charcoal indoors, there is a risk of severe poisoning because the gas spreads silently throughout the room.

Carbon monoxide is odourless, colourless and non-irritating. Therefore, it does not trigger any warning effect in humans.

The gas is lighter than air and it can accumulate easily in the surrounding environment through oxygen displacement. It is absorbed via the lungs swiftly and silently.

**Possible consequences:**

- Severe or fatal injury due to carbon monoxide poisoning.

**Safety measures:**

- Only use the fire pit outdoors and ensure the area is well-ventilated.

**Danger: burns and fire**

When in use, some parts of the fire pit can become very hot. If a gust of wind enters the fire pit, it can cause flying sparks and/or the formation of flames.

**Possible consequences:**

- Severe burns from touching hot parts.
- Fire or smoldering fire if flammable materials or substances are near the fire pit.

Bushes, trees and grass can quickly catch fire, especially in dry weather.

**Safety measures prior to use:**

When setting up the fire pit, make sure that

there are not, and will not be, any flammable materials or substances near the fire pit. The minimum distance to flammable materials or substances is 5 m and the minimum distance to flame-resistant materials or substances, e.g. house walls, is at least 2 m.

- the fire pit is protected from the wind.
- that the fire pit is positioned firmly on a sufficiently large surface area. It must not be moved during use.

**Safety measures during use:**

- Keep a working water hose, a bucket full of water, or a fire extinguisher near the location.
- Wear heat-resistant gloves.
- Never leave the fire pit unattended. Take particular care to ensure that children and pets are kept away from the fire pit.

**Safety measures after use:**

- Monitor the fire pit until it has cooled down.

## Assembly

Here are a few tips to help you assemble your fire pit quickly and successfully:

- Check that no parts are missing by carefully placing all of the individual parts in some free space (subject to minor technical changes).
- If, despite careful factory checks, a component should be missing, please contact our customer service department (see last page). We will immediately attend to your request.
- To assemble the barbecue you only need a medium-size screwdriver as well as an 8 mm open ended spanner.
- Only use tools that are intact and suitable for the job at hand. Worn or unsuitable tools will not allow you to tighten the bolts sufficiently, but will damage them to the extent that they can no longer be turned.
- Always fit all connecting elements (screws, nuts, bolts, etc.) as shown in the illustrations. If you misplace a connecting element, replace it with an appropriate part. Only by doing this can you ensure that the construction is strong and safe.
- Be sure to follow the instructions in the specified order!
- Tighten all the screw joints hand tight so that you can align the fire pit correctly. After assembling all the parts, tighten all the joints.
- Even if you are not experienced at DIY, assembly does not generally take longer than one hour.



The illustrations showing the assembly steps are at the end of this manual.

## Operation



**Caution:**

Please note the maximum permitted capacity of the fire pit with wood, charcoal and briquettes (see 'Technical specifications'). If the fire pit is overfilled it can result in damage.igen.

Only use approved barbecue lighters (such as Landmann solid firelighters); never use petrol, spirits or other substances that are subject to deflagration when ignited.

Check to ensure that ....

- there are not, and will not be, any flammable materials or substances near the fire pit. The minimum distance to flammable materials or substances is 5 m and the minimum distance to flame-resistant materials or substances, e.g. house walls, is at least 2 m.
- the fire pit is protected from the wind.
- the fire pit is positioned firmly on a sufficiently large surface area. It must not be moved during operation.
- the fire pit is fully assembled and has no apparent faults.

 
## Using the fire pit as a fire basket



**Caution:**

Open fire is not permitted in some areas. Observe local regulations.

1. Remove the cooking grill (1) and the fire bowl (2).
2. Lay wood in the bottom inlay (7) to form a pyramid.
3. Ignite the wood with an approved firelighter for barbecues. Observe the safety instructions for the firelighter..

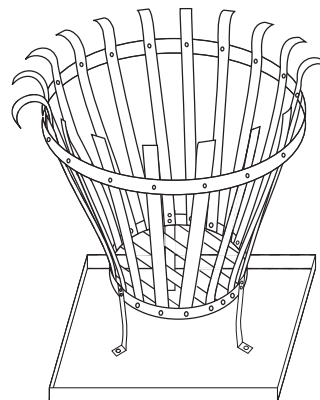

Using the fire pit as a fire basket

## Using the fire pit as a barbecue

 
Only place barbecue charcoal or briquettes in the fire bowl. We recommend using quality products from Landmann.

1. Hang the fire bowl (2) with the attached handles (3) onto the large holding ring (4).
2. Place barbecue charcoal or briquettes in the fire bowl (2).
3. Ignite the charcoal or briquettes with an approved firelighter for barbecues. Observe the safety instructions for the firelighter.



The first time you use the fire pit, heat for some 20 minutes without food so that the food-safe coating is hardened (as with any oven).

4. When the charcoal or briquettes are completely covered with a layer of ash, distribute them evenly in the fire bowl by using a suitable metal utensil (e.g. fire rake).
5. Place the cooking grill (1) onto the large holding ring (4).
6. You can now put your grillables on the barbecue. Always wear barbecue mittens or gloves that protect your hands against the heat.

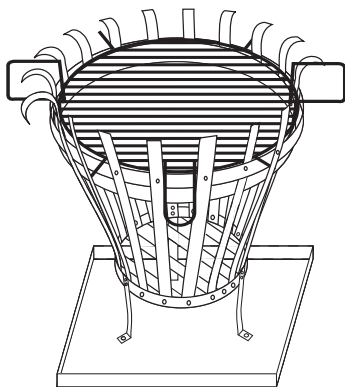

Use as a barbecue

## Decommissioning the fire pit

- Always think ahead when using the fire pit. Only put on the amount of fuel that you actually need.
- After you finish using the fire pit, or if you want to interrupt use:
- Do not leave the fire pit unattended while the fuel is still hot.
  - Allow charcoal or briquets to burn out. Carefully extinguish burning wood with a moderate amount of water, avoiding splashes.
  - Never dispose of hot embers. Leave them in the fire pit or fire bowl until they have cooled down.

## Cleaning



**Danger: Risk of burning when cleaning the hot fire pit**

Some parts of the fire pit can become very hot. For this reason, always allow the fire pit to cool down before cleaning. Never use water to quench the hot fire pit. Wear protective gloves.

To make sure that you have many years of enjoyment with your fire pit you should always clean it after use with detergent, a brush and a cloth.

## Environmental information and disposal measures

Pay attention to cleanliness when handling the fire pit.

 
 
 
 
 
 
 
To dispose of the fire pit properly, disassemble it into its individual parts. Recycle the metal components.

Observe the local regulations.

## Specifications

Appliance category	EN 1860-1
Dimensions (L x H x W)	approx. 45 x 65 x 51.5 mm
Weight	7.7 kg
Fuel capacity (bottom inlay)	max. 5 kg
Fuel capacity (fire bowl)	max. 2 kg
Cooking area	approx. Ø 35.5 mm




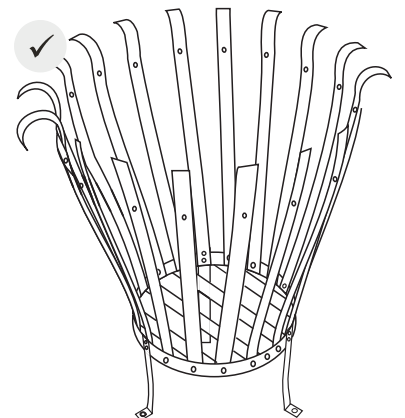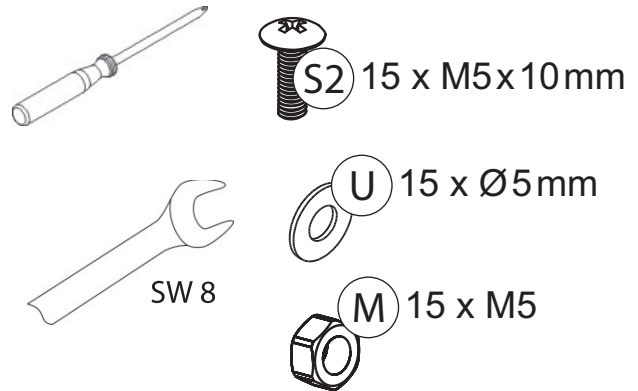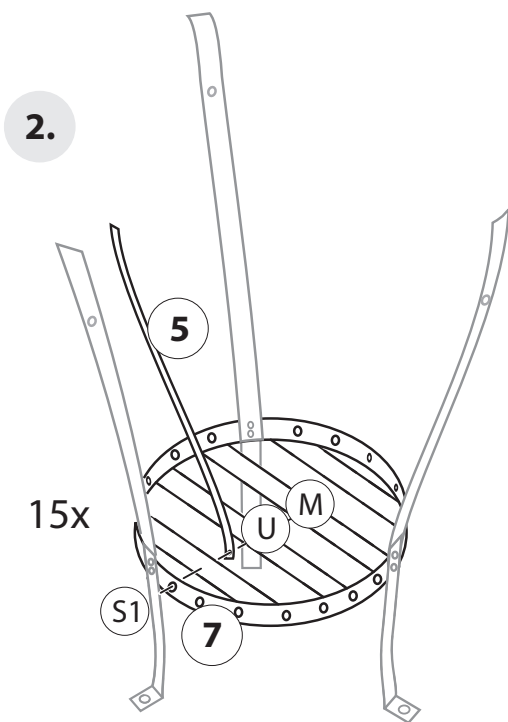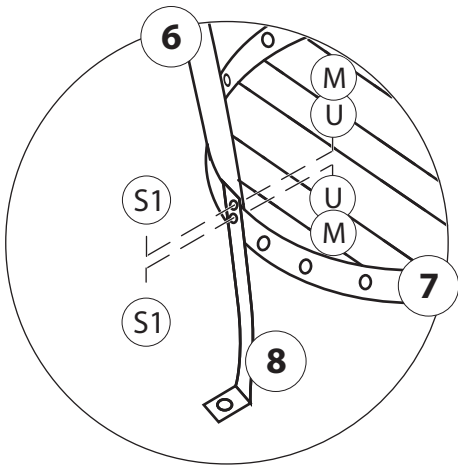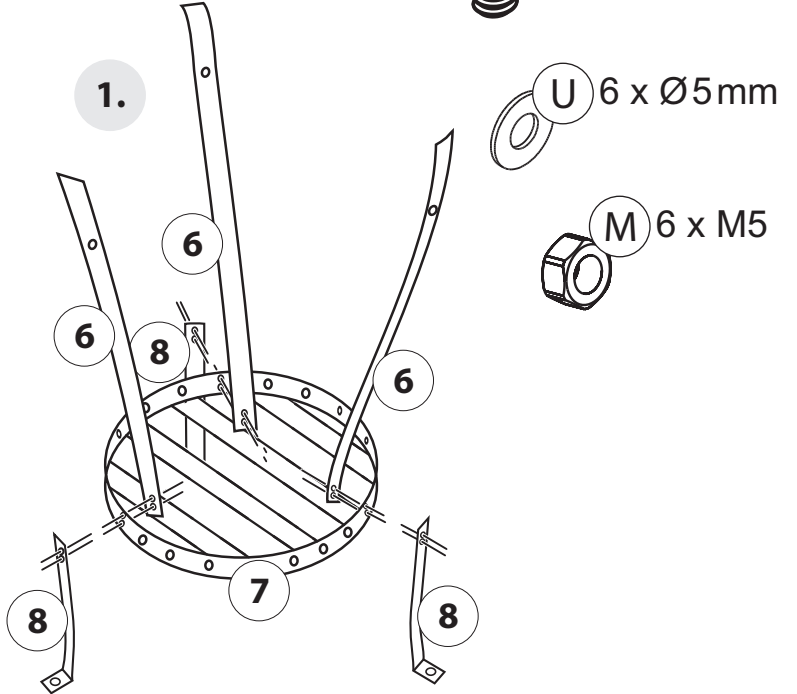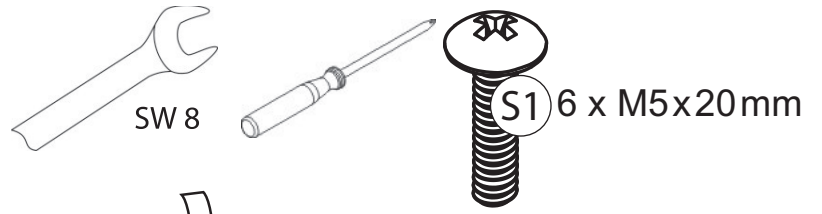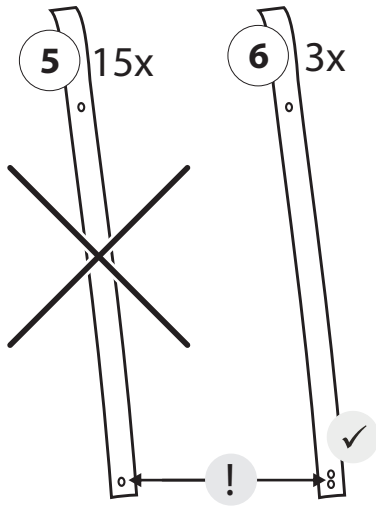





**S2** 18 x M5x10mm




 
**M** 18 x M5

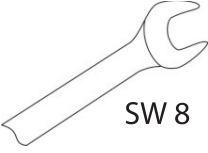







**U** 18 x Ø5mm

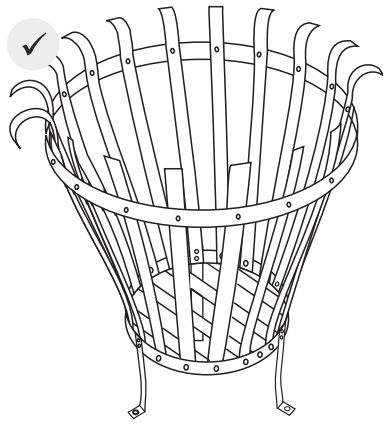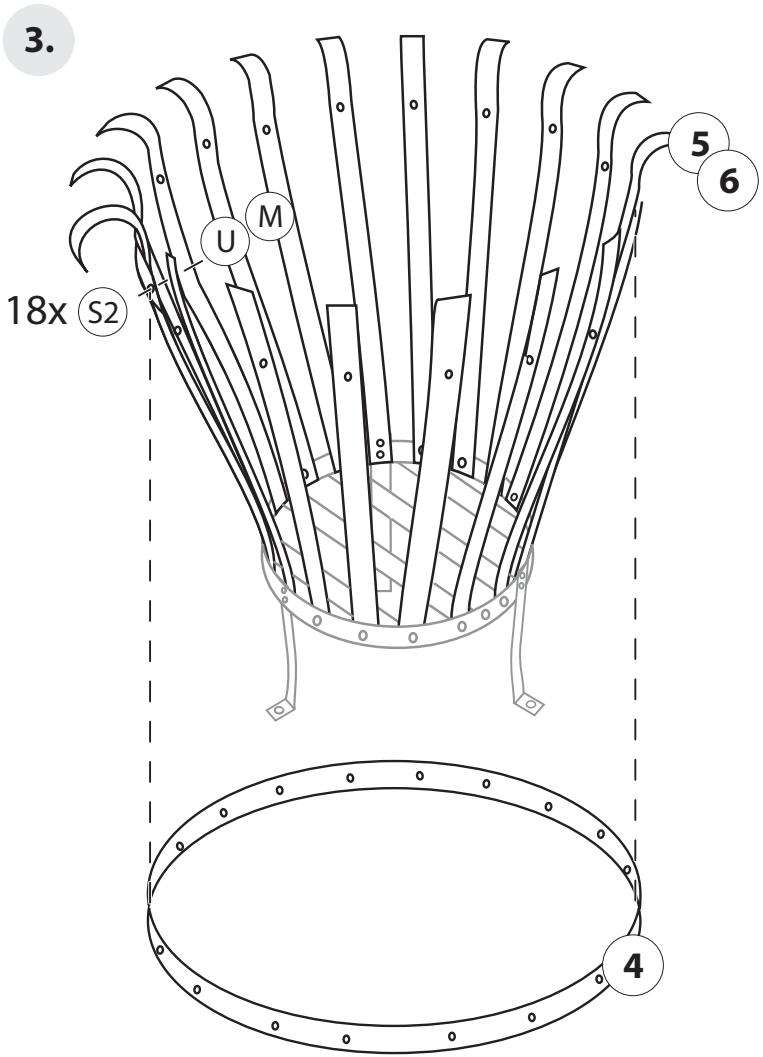  

    4.

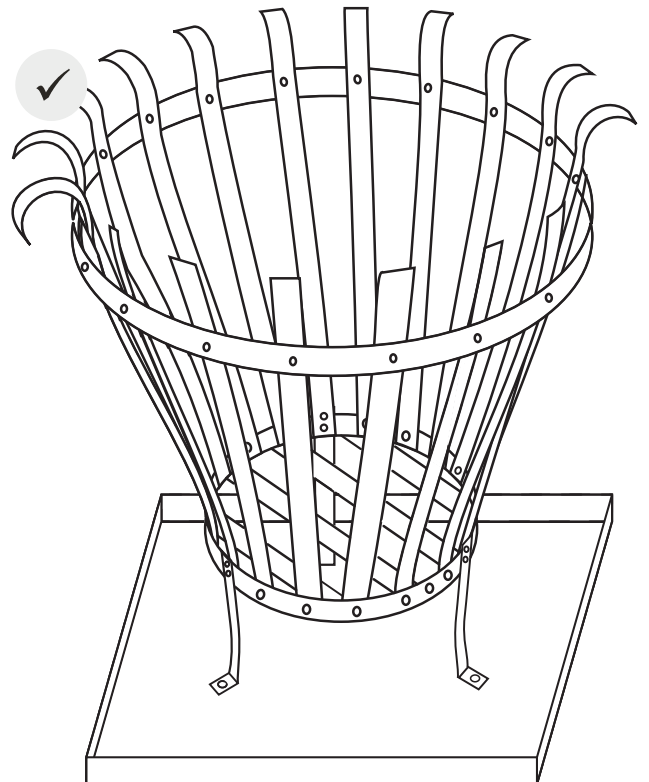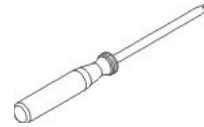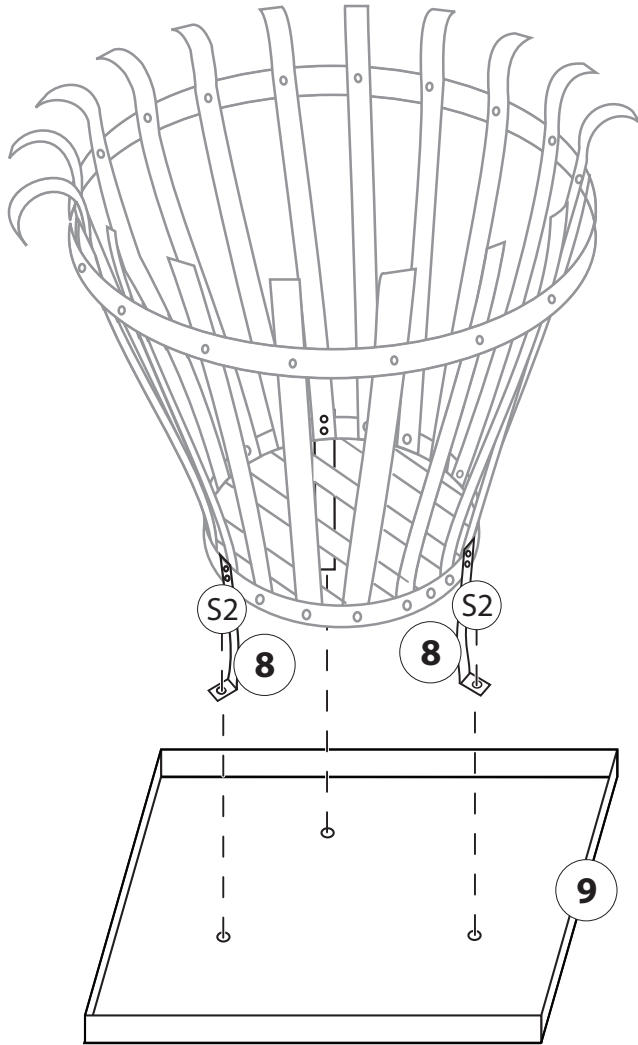

      5.

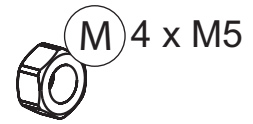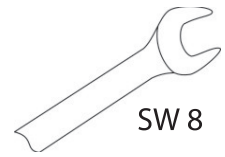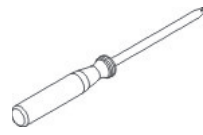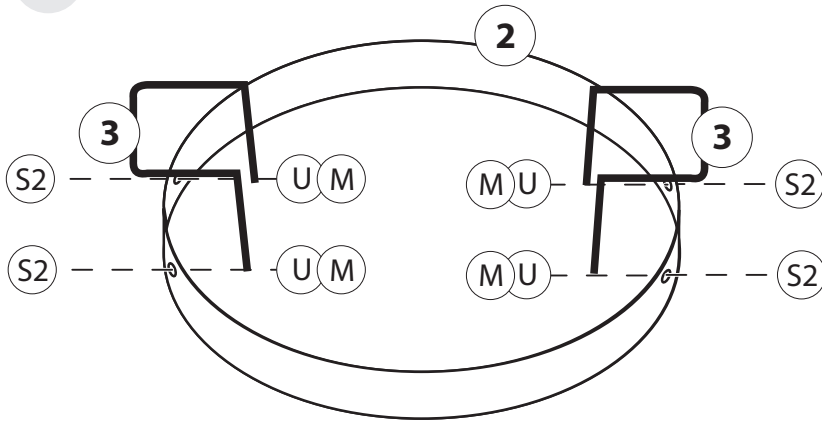

6.

