

be attractive

be reliable

be smart

sauber

Secadora Serie 1-8C Manual de usuario
Tumble Dryer Serie 1-8C User manual

be useful

be efficient

be connected

be sauber

ÍNDICE:

Información sobre seguridad.....	3
Instalación.....	7
Atención y asesoramiento.....	8
Descripción de componentes.....	9
Descripción del panel de control.....	11
Instrucciones de funcionamiento.....	12
Tabla de programas.....	13
Funciones especiales de secado.....	14
Limpieza y mantenimiento rutinario.....	16
Alarmas en Display y soluciones.....	18
Precauciones.....	18
Especificaciones técnicas.....	19
Ficha de producto.....	20

Información sobre seguridad

Símbolos para el cuidado del secado

Preste atención al utilizar la secadora si los materiales de la ropa no pueden ser secados por ella o contienen los siguientes símbolos:

Notas de seguridad

Para evitar daños en usted, otras personas o cualquier propiedad deben seguir las siguientes normas de seguridad

1. Este producto pertenece a la categoría I de electrodomésticos eléctricos, solo para el sacado de textiles que hayan sido lavados con agua en el hogar. Por favor preste atención a la potencia de seguridad usada durante el proceso
2. Debe usarse una fuente de alimentación con toma de tierra fiable. El cable debe ser enterrado bajo tierra y no debe estar en contacto con servicios públicos como tuberías de agua o gas. El cable de tierra y el cable nulo deben distinguirse y no deberán conectarse juntamente.
3. El cable de alimentación debe estar de acuerdo con el estándar nacional y debe ser capaz de soportar la corriente por encima de 16A. Para garantizar la seguridad de usted y su familia, por favor adapte inmediatamente si casa si cualquier especificación de la energía no cumple con los requisitos mencionados con anterioridad.
4. La cantidad máxima de textiles en seco que se puede utilizar en esta máquina es de 8 Kg.
5. La secadora no podrá ser usada si ha sido limpiada con productos químicos industriales.
6. El quitapelusas debe ser limpiado con frecuencia.
7. No permita que la pelusa se acumule alrededor de la secadora.
8. Es necesaria una ventilación adecuada de la habitación para evitar, a través del reflujo de gases, la quema de otros combustibles, incluidos fuegos abiertos.
9. No seque prendas sucias en la secadora.
10. Debe lavar con agua caliente y con una cantidad extra de detergente prendas que se hayan manchado con aceite, acetona, alcohol, gasolina, keroseno, removedores, removedores de aguarrás, cera, etc.
11. No debe utilizar la secadora para productos tales como espuma de goma (látex forma), gorros de ducha, textiles impermeables, goma respaldados por artículos y ropa o almohadas equipadas con almohadillas de espuma de goma, etc.
12. El suavizante o productos similares, deben ser utilizados según lo especificado en las instrucciones.

13. La última parte de un ciclo de secado en secadora ocurre sin calor (ciclo de enfriamiento) para asegurarse de que los artículos queden a una temperatura y evitar que estos se estropeen.
14. **ATENCIÓN:** No parar la secadora nunca antes de que finalice el programa a menos que todas las prendas se saquen rápidamente y se extiendan para disipar el calor.
15. El aire de escape no debe salir por el mismo conducto utilizado para expulsar vapores de gas u otros combustibles.
16. Este electrodoméstico no debe instalarse detrás de una puerta con cierre, una puerta corredera o una puerta con una bisagra en el lado contrario a la apertura de la secadora. De esta manera se logra una apertura total de la puerta.
17. Prendas contaminadas con petróleo pueden inflamarse, especialmente cuando son expuestas a fuentes de calor tales como una secadora. Los artículos se calientan oxidando el aceite. La oxidación genera calor. Si el calor no puede escapar, los artículos pueden calentarse demasiado como para prenderse fuego. Amontonar, apilar o guardar artículos con aceite evita que el calor escape y así crear riesgo de incendio.
18. Para poder utilizar prendas que han sido inevitablemente contaminadas por aceite vegetal o de cocinar o por productos de cuidado del cabello, debe lavarlas con agua caliente previamente y utilizar una cantidad extra de detergente. Esto reduce el riego pero, no lo elimina.
19. El aparato no debe ser volcado durante el uso normal o el mantenimiento.
20. Retire todos los objetos de los bolsillos de las prendas como mecheros o fósforos.
21. Este aparato puede ser utilizado por niños mayores de 8 años y personas con reducción capacidades físicas, sensoriales o mentales o falta de experiencia y conocimiento si han tenido instrucciones relativas al uso del aparato de forma segura, en tendiendo los riesgos que conllevan o bien, bajo supervisión. Los niños no deben jugar con este aparato. La limpieza y mantenimiento del mismo no puede ser realizada por niños sin la supervisión de un adulto.
22. Si el cable de alimentación está dañado, debe ser remplazado por el fabricante, el agente de servicios o personas especializadas para evitar riegos.
23. La secadora está fabricada para un uso únicamente en interiores.
24. La apertura de la puerta del aparato no debe obstaculizarse con una alfombra o similares.
25. Los niños menores de 3 años deben ser alejados, a no ser que haya una supervisión continua.
26. Mantener a las mascotas alejadas del aparato.
27. Si encuentra que la secadora tiene una temperatura anormalmente alta, por favor desconéctelo de la corriente inmediatamente

Desechar correctamente este producto



Este símbolo indica que este producto no debe desecharse como el resto de residuos domésticos en toda la UE. Para evitar posibles daños en medio ambiente o en salud humana y evitar la eliminación incontrolada de residuos. Recíclelo correctamente para promover la reutilización sostenible de recursos materiales. Para devolver el dispositivo usado, por favor utilice los sistemas de recogida y devolución o póngase en contacto con el distribuidor donde compró el producto. Ellos pueden llevarse este producto para reciclaje seguro ambiental.

Información sobre seguridad

Riesgo de descarga eléctrica

1. No tirar del cable para desenchufar el aparato.
2. No enchufar o desenchufar el aparato con las manos mojadas.
3. No dañe el cable de alimentación o el enchufe

Riesgo de lesión

1. No desmontar o instalar la secadora sin no es bajo supervisión o con instrucciones.
2. No poner esta secadora encima de una lavadora sin un Kit de apilamiento específico para ello (Si quiere colocar su secadora sobre la lavadora, debe comprar las partes independientes e instalarse por el fabricante, su servicio técnico o personas similarmente calificadas para evitar riesgos).
3. No se apoye sobre la puerta abierta de la secadora.

Daños peligrosos

1. No seque por encima de la capacidad nominal.
2. No utilice la secadora si el filtro anti pelusa.
3. No seque la ropa sin haber sido centrifugada anterior.
4. No exponga la secadora directamente al sol, eso solo para uso en interiores.
5. No instale la secadora en espacios mojados o húmedos.
6. Para la limpieza o mantenimiento de la secadora recuerdo desenchufarla y no utilizar agua para su limpieza.

Peligro de explosión

Por favor no seque ropa impregnada de sustancias inflamables como alcohol, aceite de carbón o se producirá una explosión.


Instalación

Transporte

Transportar con precaución. No sujete la maquina por las partes más salientes de la misma. No utilice la puerta de la secadora como asa de transporte. Si la secadora no puede transportarse recta, esta puede inclinarse 30 ° hacia la derecha


Posición de instalación

1. Por favor coloque la secadora en una superficie solida y plana.
2. No coloque el aparato en una pendiente, sobre una alfombra o en parqué.
3. No coloque la secadora en lugares exteriores para prevenir que sus piezas se congele y la maquina deje de funcionar.

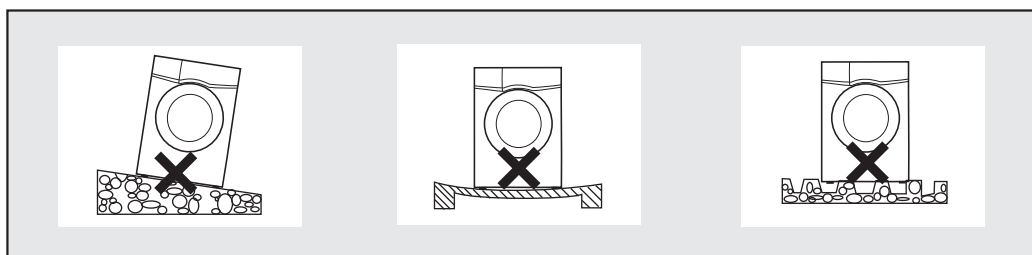

Nivel de ajuste

Una vez este en la posición definitiva, compruebe que esta nivelada haciendo uso de un nivel. Si no lo está, ajuste las patas con la herramienta.

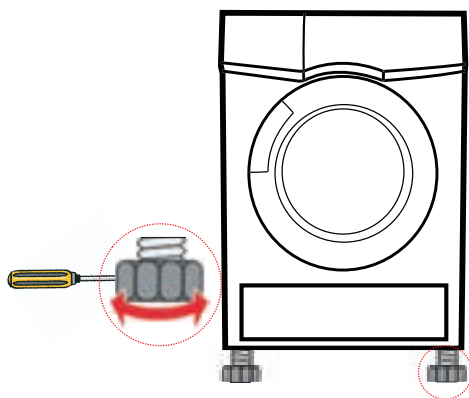

Conexión a la fuente de alimentación

1. Asegúrese de que la tensión de la fuente de alimentación es la misma que en las especificaciones eléctricas de la secadora.

2. Por favor, no lo conecte con la placa de conexión de alimentación, el enchufe universal o zócalo.

Atención y Asesoramiento

Atención:



Antes del primer ciclo, el polvo y la grasa acumulada en el periodo de fabricación y transporte pueden permanecer en la secadora. Para evitar manchar la ropa:

- a) poner algunos trapos limpios en el tambor.
- b) Enchufe a la corriente
- c) Presione "Botón de On/Off", seleccione el programa "Rápido" y pulsa el botón "Start/Pause".
- d) después de terminar este programa, por favor siga el "mantenimiento limpieza y rutinario", limpiar el condensador de aire y el filtro de pelusa.


Consejos:

- 1. Antes del secado, centrifugue la ropa en la lavadora. Una velocidad de centrifugado alta puede reducir el tiempo de secado y permite el ahorro de energía.
- 2. Para un secado uniforme, ordene la ropa según el tipo de material y el programa de secado correspondiente.
- 3. Antes de su secado, cerrar cremalleras, ganchos y anillos para ojetes, botones, atar las correas de tela, etc.
- 4. No seque excesivamente la ropa porque la ropa puede arrugarse
- 5. No seque los artículos que contengan caucho o materiales elásticos similares como impermeables, cubiertas de bicicletas, etc.
- 6. La puerta puede abrirse sólo después de finalizar el programa de la secadora. No abra la puerta antes de terminar el programa, ya que puede sufrir quemaduras por el vapor o superficie caliente.
- 7. Limpie el filtro de pelusa y vacíe el cajón después de cada uso para evitar alargar el proceso de secado y consumir más energía.
- 8. Elija el programa que corresponda al material de lana para que la ropa quede más fresca y suave.
- 9. Seguir las siguientes referencias de peso:

 Abrigos (800gr aprox)	 Chaquetas (800gr en algodón aprox)	 Vaqueros (800gr aprox)	 Toallas, Edredones (900gr en algodón aprox)
 Sábanas (600gr en algodón aprox)	 Ropa de trabajo (parte de arriba y abajo) (1200gr en algodón aprox)	 Pijamas (200gr aprox)	 Camisas (300gr en algodón aprox)
 Camisetas (180gr en algodón aprox)	 Ropa interior (70gr en algodón aprox)	 Calcetines (30gr en materiales mezclados)	

Descripción de componentes


Descripción de los componentes

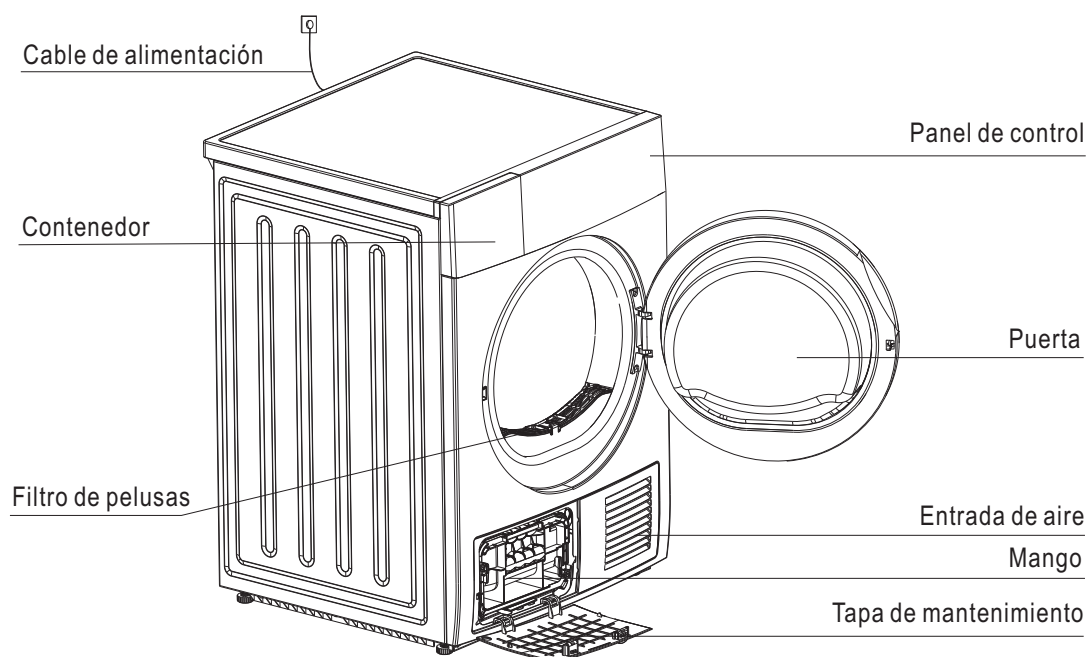

Accesorios


Las siguientes partes son opcionales para modelos específicos. Si su secadora se compone de alguna de ellas, por favor use unos guantes para su colocación siguiendo las siguientes instrucciones.

PASOS DE INSTALACIÓN

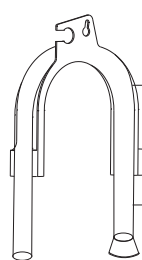


Soporte de la tubería
(opcional)

Manguera de drenaje
de condensacion
(opcional)

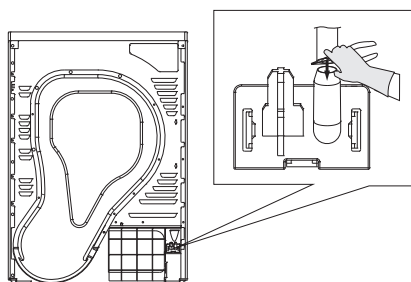


PRIMER PASO: Quitar la manguera de drenaje del conector de la tubería usando unos alicates

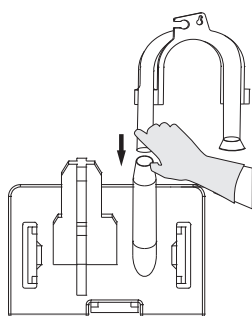

SEGUNDO PASO: Insertar la manguera de drenaje externa


TERCER PASO: Poner el soporte de la tubería en un lavabo o fregadero

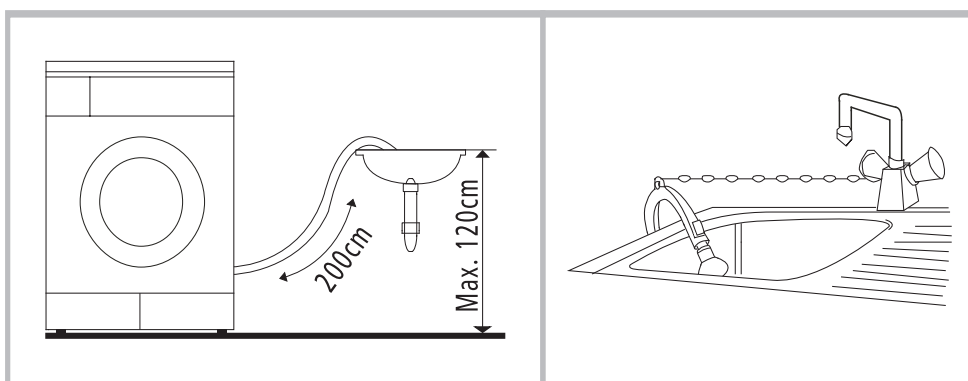

Inicio rápido



Descripción del panel de control

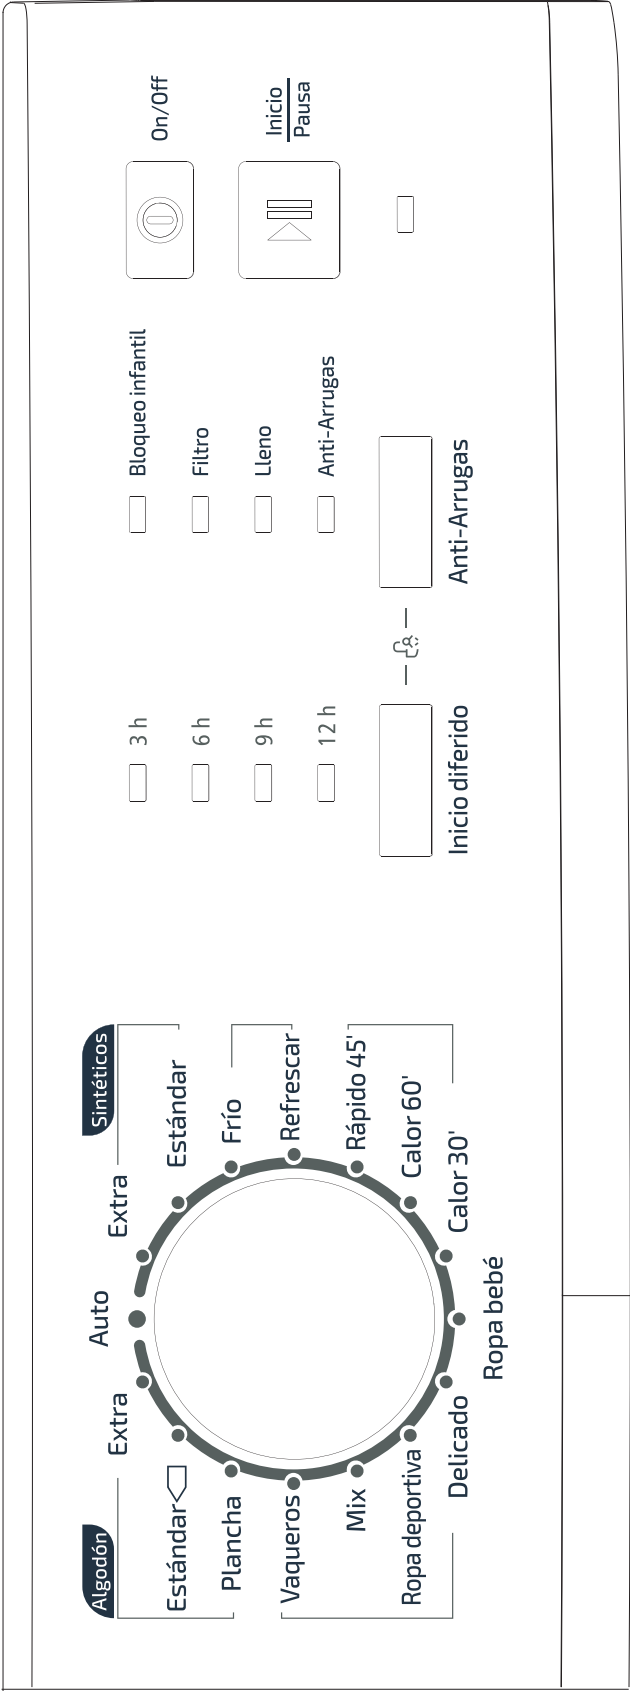

Instrucciones de funcionamiento

Selección de programa

1. Presione el botón **【On/Off】** , cuando la pantalla LED se encienda, gire la perilla para seleccionar el programa deseado
2. Seleccionar alguna de las siguientes funciones adicionales si lo desea, **Delay】** , **【Time】** , **【Intensity】** , **【Speed Dry】** , **【Signal】** or **【Anti-Crease】**
3. Presione el botón **【Start/Pause】**

Inicio del programa

El tambor seguirá girando después del inicio del programa, la luz de la pantalla parpadeará en secuencia y el tiempo restante en pantalla cambiará automáticamente.

Nota:

En ocasiones, el tambor puede pararse durante unos 40 segundos durante el proceso de secado, pero la pantalla no mostrará nada anormal. Se trata de un ajuste automático de la secadora, después de este tiempo, continuará con su funcionamiento normal.

Fin del programa

1. El tambor dejará de funcionar cuando termine el programa, la pantalla mostrará "0.00", en la última fase la luz parpadeará. La secadora comenzará el programa anti arrugas si el usuario no quita la carga en 1 minuto (**ver página 14**). Por favor, apague el aparato y desconecte el enchufe el enchufe.
2. Resolver un problema de acuerdo con "Indicación de fallo y soluciones, si hay una parada inesperada durante el proceso de secado y se mostrará en la información de la secadora (página 16).

Funciones especiales de secado

Funciones especiales de secado

1. Instrucciones para el procedimiento de secado 【Delay】

El programa delay permite comenzar el programa de secado in x:xx horas.

Cuando se inicia el programa, la pantalla mostrará sólo el tiempo de retardo para comenzar y el icono . Después de 30 segundos el panel mostrará el icono  y aparecerá “-”

1. Cargar la secadora y asegurarse que la puerta está cerrada.
2. Presionar el botón [On/Off] y seleccionar el programa deseado con la perilla.
3. Puede seleccionar [anti-arrugas] o [Señal] según sus necesidades.
4. Presione el botón [Delay].
5. Continúe seleccionando [Delay] para seleccionar el tiempo de retraso.
6. Después de pulsar el botón [Start/Pause], la secadora está funcionando en buenas condiciones. El proceso de secado comenzará automáticamente cuando el tiempo de retraso finalice.
7. Si vuelve a pulsar el botón [Start/Pause] la función Delay se pausará.
8. Si quiere cancelar la función Delay debe pulsar el botón [On/Off].

Funciones especiales de secado

2. Instrucciones para la función [Anti-arrugas]

Al final del ciclo de secado, el tiempo de funcionamiento anti arrugas es 30 minutos (por defecto) o 120 minutos (seleccionados). El **【Anti-arrugas】** se iluminará cuando se selecciona la función anti arrugas. Esta función evita que la ropa se arrugue. La ropa se puede sacar durante la fase anti arrugas. Excepto los programas **【Frio】** , **【Refrescar】** and **【Lana】** , todos los demás tienen esta función


3. Instrucciones para el [Bloqueo de seguridad]

1. La secadora incorpora un sistema de seguridad de bloqueo que previene ante descuidos de niños.
2. Cuando la secadora se encuentra en el funcionamiento, pulse los botones **【Anti-arrugas】** y **【Inicio Diferido】** al mismo tiempo por más de 3 segundos para iniciar la función de bloqueo infantil. Cuando se establece bloqueo infantil, la pantalla mostrará el icono  y ningún botón funcionará salvo [On/Off]. Para quitar el bloqueo infantil debe pulsar por más de tres segundos ,de nuevo, los botones **【Anti-arrugas】** y **【Inicio Diferido】** .

Limpieza y mantenimiento rutinario

Vaciar el cajón de agua

1. Saque el recipiente de agua con las dos manos.
2. Incline el recipiente de agua, vierta el agua condensada.
3. Introduzca el recipiente de agua.

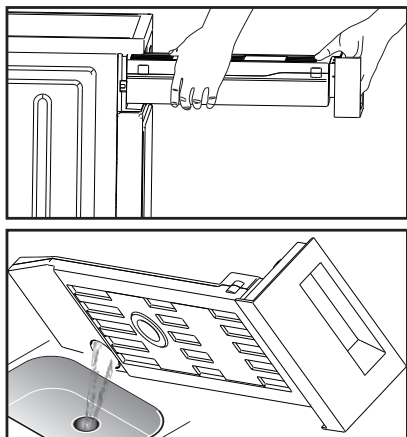

ATENCIÓN:

1. Vaciar el cajón después de cada uso. Si este se llena durante, la maquina le avisara con este icono parpadeando . Una vez haya vaciado el cajón de agua, podrá reanudar la secadora pulsando el botón [Start/Pause]
2. No beber el agua condensada
3. No utilice la secadora sin el cajón de agua

Limpiar el filtro de la puerta

Dejar enfriar la secadora


1. Abrir la puerta de la secadora.
2. Sacar el filtro de la puerta.
3. Limpie el filtro de pelusas; limpie los hilos acumulados en el filtro de pelusas, con la mano o enjuagando con agua y secar bien
4. Poner el filtro en su lugar de nuevo.

Limpiar el filtro de la base


1. Abrir la cubierta del filtro
2. Desatornille ambas palancas de bloqueo
3. Saque el aire condensado
4. Limpie bien el filtro
5. Colocar el filtro de nuevo
6. Atornille las palancas de bloqueo
7. Cierre la tapa de filtro hasta que encaje en su posición

NOTA!

1. La pelusa acumulada en el filtro bloqueará la circulación de aire, lo que **hará** que aumentará del tiempo de secado y el consumo de energía;
2. Desconecte el cable de alimentación antes de limpiar!
3. No utilizar la secadora sin el filtro!
4. Limpie el filtro después de cada uso para evitar la acumulación de pelusa en el interior de la secadora.

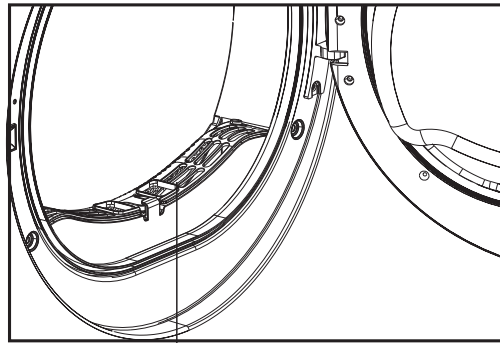

Filtro de la puerta

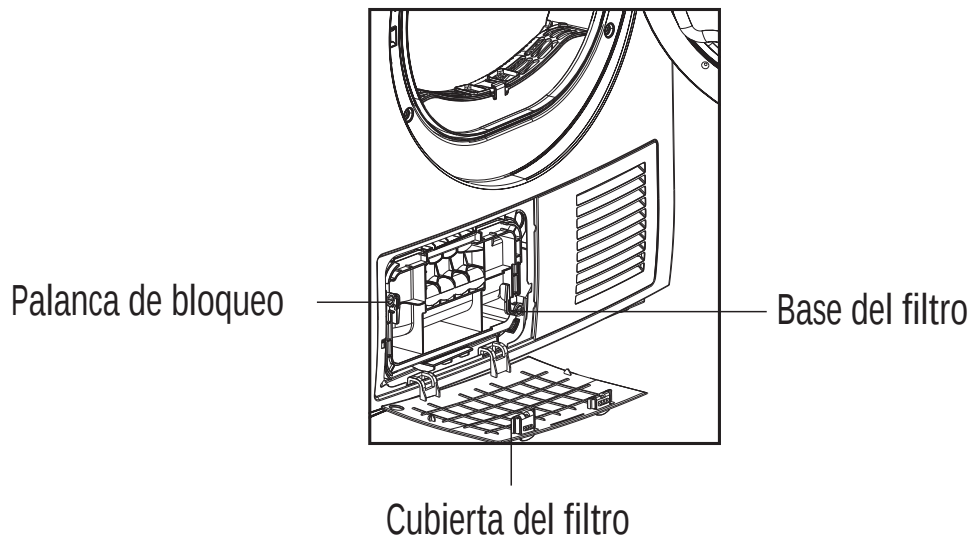

Limpiar el condensador

Cada dos meses aproximadamente limpie el condensador de pelusas con una esponja o cepillo. Utilice unos guantes para ello.

Nota: La pelusa puede retirarse más fácilmente si esta húmeda

Alarmas en el display y soluciones

Display	Causa	Solución
par  lea	El contenedor está lleno	Vaciar contenedor
	Fallo en la bomba de agua o en el sensor de nivel de agua	Por favor contacte con el servicio técnico si persiste el problema
Bloqueo + 6h	Fallo sensor de humedad	
Bloqueo + 9h	Fallo sensor temperatura	
Bloqueo + 3h	Fallo del calentador	

Precauciones

Precauciones

-  Solo técnicos autorizados pueden encargarse de las reparaciones. Antes de llamar al servicio de atención al cliente, por favor asegúrese si usted se puede encargar del problema siguiendo el manual de instrucciones. El técnico le cobrará por el servicio incluso en el periodo de garantía.

Problema	Solución
• El display no funciona	• Insertar el enchufe. • Comprobar el programa seleccionado. • Comprobar fusibles del hogar.
• No comienza el secado	• Compruebe que el botón de comienzo está seleccionado. • Compruebe que la puerta está cerrada. • Compruebe que el programa está seleccionado
• La puerta se abre sola	• Presione la puerta hasta que suene un "Click". • Compruebe que no hay sobrecarga de ropa.
• No se alcanza el nivel de secado o el tiempo de secado es muy largo	• Limpiar el filtro de pelusas y el condensador • Vaciar el container. • Comprobar la salida de agua. • Espacio de la secadora muy limitado. • Limpiar el sensor de humedad • Usar el siguiente programa más potente de secado o usar un programa con temporizador

-  Si usted no puede encargarse de la avería
1. Pulse el botón [On/Off]
 2. Desconecte la secadora y llame al servicio técnico

Especificaciones técnicas

Especificación

Fuente de alimentación	220-240~50Hz
Potencia nominal de entrada	2700W
Temperatura ambiente	+5℃ ~+35℃
Tamaño	615 595 845
Capacidad de secado	8kg
Peso neto	41kg

1. La capacidad nominal es la capacidad máxima, asegúrese de que la ropa seca que se carga no hace exceder la capacidad nominal
2. No instalar la secadora en una habitación donde haya riesgo de congelación. A temperaturas alrededor de cero la secadora puede que no funcione.
3. Hay un riesgo de daño si el agua condensada llega a congelarse en la bomba, mangueras y / o recipiente de agua condensada.

Ficha de producto

Ficha de producto

Capacidad nominal: 8kg

Tipo Secadora: Condensación

Clase de eficiencia energética: B

Consumo de energía por año de 560.9kWh, sobre la base de 160 ciclos de secado del programa de algodón normal con carga completa y con carga parcial y del consumo de los modos de bajo consumo. El consumo real de energía por ciclo depende de cómo se utilice el aparato.

Automática o no automática: Automática

Etiqueta ecológica de la UE: N / A

Consumo de energía ponderado del programa normal de algodón con carga completa y parcial: 3,50 kWh

El consumo de energía del programa normal de algodón con carga completa: 4,74 kWh

El consumo de energía del programa normal de algodón con carga parcial: 2,57 kWh

Consumo de energía del modo apagado (Po): 0.1 W

Consumo de energía del modo sin apagar (PI): 0.8 W

Duración del modo sin apagar: 10 min

El "programa normal de algodón" utilizado a plena carga y parcial es el programa de secado estándar cuya información aparece en la etiqueta y en la ficha, informa que este programa es adecuado para el secado de la ropa normal de algodón húmedo y que es el programa más eficiente en términos del consumo de energía para el algodón.

Duración ponderada del programa del programa normal de algodón con carga completa y parcial: 111 min

Duración del programa del programa normal de algodón con carga completa: 140min

Duración del programa del programa normal de algodón con carga parcial: 90min

Eficiencia de la condensación de clase B en una escala de G (la menos eficiente) a A (más eficiente).

Eficiencia de la condensación Promedio del programa normal de algodón con carga completa: 81%

Eficiencia de la condensación Promedio del programa normal de algodón con carga parcial: 81%

Eficiencia de la condensación ponderada para el programa normal de algodón con carga completa y parcial: 81%

Nivel de potencia acústica para el programa normal de algodón con carga completa: 69dB

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions	2
-----------------------------	---

INSTALLATION

■ Product Description	9
■ Installation	9

OPERATION

■ Quick Start	12
■ Before each Drying	13
■ Control Panel	15
■ Option.....	16
■ Drying Programmes Table	18

MAINTENANCE

■ Cleaning and Care	20
■ Trouble Shooting	22
■ Technical Specifications	24
■ Product Fiches.....	25

SAFETY INSTRUCTIONS

■ Safety Instructions

Warning!

To prevent any damages to your and others' life or property, you have to follow the safety notes.

Intended use

- This dryer is intended for drying typical amounts of household laundry, which have been washed with water. It has been designed solely for private use and is not suitable for commercial or shared use (i.e. by several families in an apartment building).
- Use this appliance only as described in this user manual.
- This appliance is for indoor use only.
- Any other use is deemed improper and may result in damage to property or even personal injury.
- The manufacturer accepts no liability for damage caused by improper use.

Safety Instructions

- The appliance corresponds to protection class I and may only be connected to a plug with a protective conductor that has been installed properly. When connecting the appliance to the mains, make sure that the mains voltage is correct. You can find more information about this on the rating plate.

SAFETY INSTRUCTIONS

- The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the household wiring system tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Warning!

Electric shock hazard

- Before connecting the tumble dryer, ensure that the connection parameter on the rating plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.
- The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the household wiring system tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- Do not pull the power cord forcefully. Please grasp the mains plug instead
- Do not plug/draw the mains plug with wet hands.
- Do not bend, clamp or damage the power cord and the power plug.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY INSTRUCTIONS

- Warning: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket adapter or similar.
- The accessibility of the plug must always be ensured, in order to disconnect the tumble dryer from the mains.
- If the appliance appear high temperature abnormally, please draw the mail plug immediately.

Injury danger

- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Do not disassemble or install the dryer without any instruction or supervision.
- Do not stack this dryer on washing machine without stacking kits. (If you want to stack this dryer on a washing machine, please purchase the independent parts. Installation shall be done by the manufacturer, its service agent or similarly qualified persons to avoid any hazards.)
- Do not lean on the opened door of the dryer.
- Condensed water is not drinking water. It can cause health problems in both people and animals if consumed.

Damage danger

- Do not put more load than rated in this user manual. See the related chapter in the user manual.

SAFETY INSTRUCTIONS

- Do not operate the dryer without the lint filter.
- Do not dry the clothes before being spun.
- Do not expose the dryer directly under the sun.
- Do not install the dryer in humid and drenching environment.
- While cleaning and maintenance, please do remember to pull out the power plug and do not directly spray the dryer with water.
- The appliance should not be overturned during normal use or maintenance.

Warning!

Explosion & Fire danger

- Please do not dry the clothes with any flammable substances such as kerosene or alcohol. Otherwise, there may be explosion.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

SAFETY INSTRUCTIONS

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Remove all objects from pockets such as lighters and matches.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Openings must not be obstructed.
- The lint trap has to be cleaned frequently.
- Lint must not to be allowed to accumulate around the tumble dryer.

SAFETY INSTRUCTIONS

Safety with children

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Always close the door after use. In this way you will avoid the danger of:
 1. Children climbing onto or into the dryer or hiding things in it.
 2. Pets or other small animals climbing into it.

SAFETY INSTRUCTIONS

Correct Disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Disposal of packaging material

- The packaging is designed to protect the appliance from damage during transportation. The packaging materials are environmentally friendly and should be recycled. Recycling the packaging can reduce the use of raw materials in the manufacturing process and the amount of waste in landfill sites.

Model	Rated capacity
Serie 1-8C	8.0kg

INSTALLATION

■ Product Description

Top board

Water container

Power cord

Drum


Lint filter

Control panel

Door

Air inlet

Maintenance cover

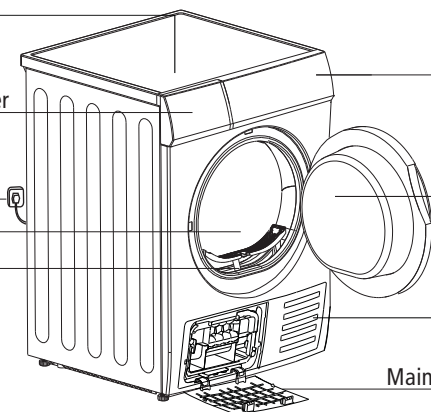


Note: The actual model you purchased might differ. Please see the product you purchased in kind prevail.

Accessories

The following parts are optional for specific models.

If your dryer has following parts, please wear gloves and install them following the instruction below .

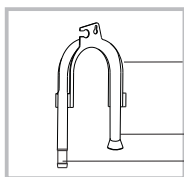

Hose holder(optional)

Condensing drain hose(optional)

 
Connector (optional)

Note:


If you own the direct drain set, please remove the connector from the hose to use it. The direct drain hose can be installed directly on this model without use of the connector.

■ Installation

• Packing the dryer machine




• Unpacking the dryer machine

 

⚠ Warning!

- Packaging material (e.g. Foils, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.

INSTALLATION

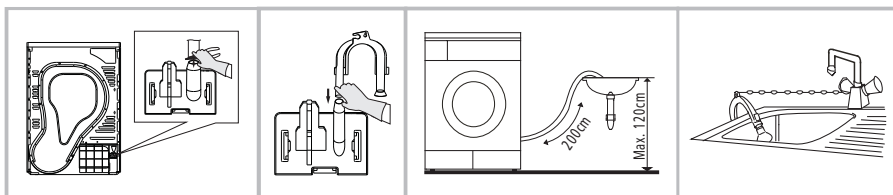

Use a pliers to remove the drain hose from the hose connector.

Insert the external drainage hose.

Put the hose holder in the washing basin or any other sink.

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for transport.

Risk of injury and damage!

Improper handling of the appliance may result in injury.

- The appliance is very heavy. Never transport or carry the appliance alone; always with the assistance of another person.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Do not use the open door as a handhold.
- Remove all package material before using the appliance.
- Before setting up the tumble dryer, check it for any externally visible damage. Do not install or use a damaged tumble dryer.
- Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.


Installation Position

⚠ Warning!

- Children can become entangled in the packaging film or swallow small parts and suffocate. Do not allow children to play with the packaging.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.


INSTALLATION

- Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.
1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
 2. Do not stack this dryer on washing machine without stacking kits. (If you want to stack this dryer on a washing machine, please purchase the independent parts. Installation shall be done by the manufacturer, its service agent or similarly qualified persons to avoid any hazards.)
 3. The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.
 4. To keep vibration and noise within minimum level when the dryer is in use, it must be placed on a firm and level surface.
 5. The feet must never be removed.

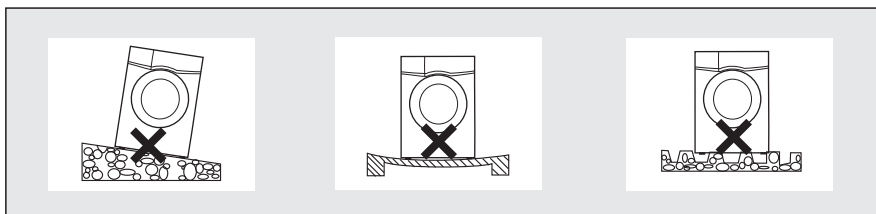

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet by hand or using a tool.

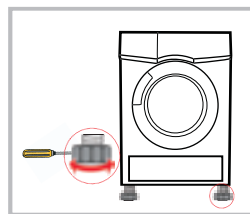

Power Supply Connection

1. Make sure that the voltage of the power supply is the same as the electric specification.
2. Do not connect the dryer with the power connection board, a universal plug or socket, do not use multi-plug adapters and extension cables.


OPERATION

■ Quick Start


Note!

Before using, make sure the tumble dryer is installed correctly.

Before Drying

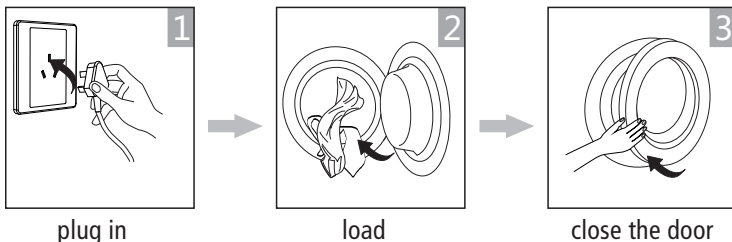


Drying

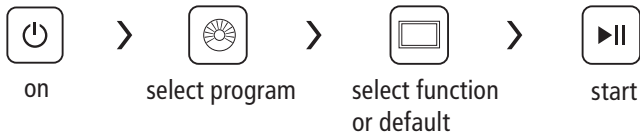

After Drying

Buzzer beep and "0:00" on display.

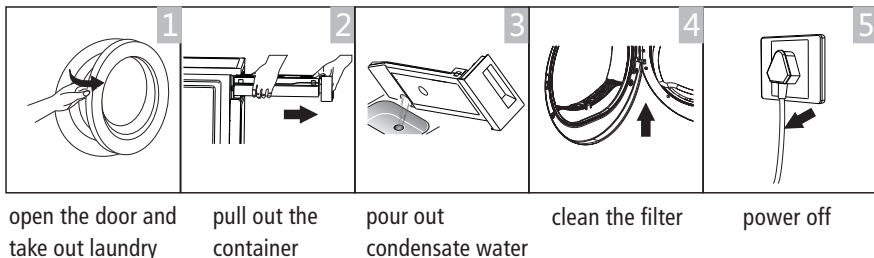

Note!

- If the socket with a switch is used, please press the switch to turn off the power directly.

OPERATION

■ Before each Drying

Note!

- Before first use, please use a soft fabric to clean the inside drum.
 1. Put some clean rags into the drum.
 2. Plug the power plug, press **【On/Off】**.
 3. Select the **【Refresh】** Programme, press **【Start/Pause】** button.
 4. After finishing this programme, please follow the "cleaning and care" instructions (refer to page 20) to clean the lint filter.
- During drying, the airflow and the pump will generate some noise which is entirely normal.

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
2. For uniform drying result, sort the laundry according to fabric type and select the appropriate drying programme.
3. Before drying, please close zips, hooks and eyelets, button, tie fabric belts, etc.
4. Remove all objects from pockets such as lighters and matches.
5. Sew in or remove underwiring from bras.
6. Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Do not over dry the clothes, because over dried clothes can easily get creases.
9. Do not dry the articles containing rubber or similar elastic materials.
10. Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.
11. The door shall be opened only after the programme of the tumble dryer is finished to avoid being scalded by hot steam or over heated drying machine.
12. Clean the lint filter and empty water container after each use to avoid extension of drying time and increase of energy consumption.
13. Do not dry clothes after dry-clean process.

OPERATION

The reference weight of dry clothes (weight per item)

 Sweater (mixed 800g)	 Jacket (cotton 800g)	 Jeans (800g)	 Bath Towel (cotton 900g)
 Single bedsheet (cotton 600g)	 Work clothes (1120g)	 Pyjamas (200g)	 Shirt (cotton 300g)
 T-Shirt (cotton 180g)	 Underwear (cotton 70g)	 Socks (mixed-weave 50g)	

Note!

- Do not put more load than rated.
- Do not dry dripping wet laundry. The dryer might get damaged

Only dry laundry suitable for tumble drying. Regard the laundry care labels:



Suitable for tumble drying



Normal drying process: Drying in the tumbler is possible under normal load and temperature 80°.




Mild drying process: Caution is appropriate when tumble drying. Select mild process with reduced thermal action.



Do not tumble dry: Articles unsuitable for drying in the tumbler.

OPERATION

■ Control Panel

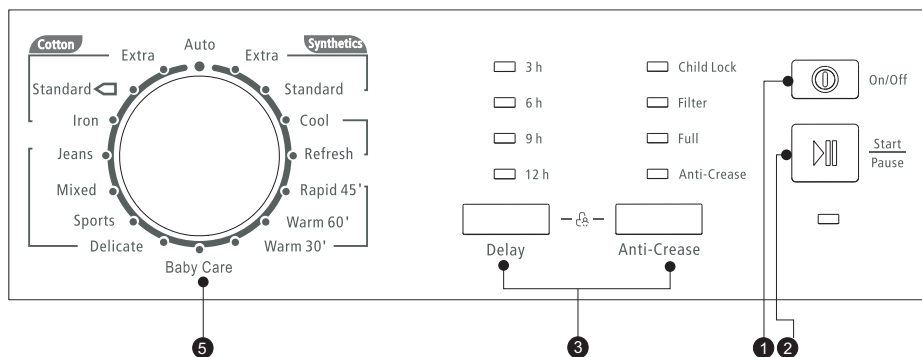

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Option

These buttons are used for setting additional functions.

4 Display

The display shows the setting, estimated program time remaining and status messages of your dryer.

5 Programmes

Different drying cycles can be selected according to the users need and the type of laundry to be dried.

OPERATION

■ Option

Delay

Delay

This function is used for delaying the start of the drying programme up to 24 hours. When the delayed programme starts, the time starts to countdown on the display and the delay icon blinks.

1. Load your laundry and make sure the machine door is closed.
 2. Press the **【On/Off】** button, then use the programme selector knob to select the desired programme.
 3. You can additionally select the **【Anti-Crease】** function according to your need.
 4. Press the **【Delay】** button.
 5. Repeatedly press the **【Delay】** button to select the desired delay time.
 6. After the **【Start/Pause】** button is pressed, the Dryer is at the running condition. The drying procedure will be automatically performed when the delay time is over.
 7. If you press the **【Start/Pause】** button again, the delay function will be paused.
 8. If you want to cancel the "Delay" function, please press the **【On/Off】** button.
-

Anti-Crease

Anti-Crease

At the end of the drying cycle, the anti-crease time is 30 minutes (default) or 120 minutes (selected). This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except **【Cool】**, and **【Refresh】**, all the other programmes have this function.

Child Lock

Child Lock

1. This machine incorporates a special child safety lock, which can prevent children from carelessly pressing buttons or making the faulty operation.
 2. When the drying cycle is running, press the **【Anti-Crease】** and **【Delay】** buttons at the same time for 3 seconds to start child lock function.
 3. When child lock function is set, the display will show Child lock icon and all button are deactivated, except **【On/Off】** button.
 4. To deactivate the child lock function, the **【Anti-Crease】** and **【Delay】** buttons shall be pressed at the same time for 3 seconds.
-

■ Display



Child lock

OPERATION

■ Programmes

Programme selector

1. When the LED display screen brightens up, rotate the programme knob to select the desired programme.
2. Select the **【Delay】**, **【Anti-Crease】** functions for additional options.
3. Press the **【Start/Pause】** button.
4. Press the **【On/Off】** button after the programme has completed.

Programme start

The drum will rotate after the programme starts. The cycle phase LED in the display will light up and the remaining programme time will be displayed.

Programme end

1. The drum will stop rotating after the programme ends. The display will show "0:00", also the cycle phase LED showing "End" and related LED will illuminate. The dryer will start **【Anti-Crease】** function if user doesn't remove the load. (Refer to page 16). Please press **【On/Off】** button after unloading the tumble dryer to cut off power and pull out the plug.
2. Deal with the problems according to "Trouble Shooting" section, if there is an unexpected stop during the drying procedure or the dryer shows an Error Code (Refer to page 22).



Note!

- During drying, water may collect between the window and the seal. This does not affect the function of your dryer!

OPERATION

■ Drying Programmes Table

Programme		Weight (max)	Application/Properties
		8.0kg	
Auto	Auto	5.0kg	To dry unknown material clothes automatically.
Cotton	Extra	8.0kg	For single or multi-layer cotton laundry to be dried completely for direct storage.
	Standard □		
	Iron		For single layer cotton laundry to remain damp for ironing.
Jeans	Jeans	4.0kg	To dry jeans or leisure clothes that are spun at high speed in the washing machine.
Mixed	Mixed	3.5kg	For mixed fabrics from cotton and synthetics.
Sports	Sports	3.0kg	To dry sportswear and thin fabrics from polyester, which are not ironed.
Delicate	Delicate	1.0kg	For delicate laundry that is suitable for drying or laundry advised to be hand washed at low temperature.
Baby Care	Baby Care	1.0kg	To dry small amount of baby clothing.
Synthetics	Extra	3.5kg	For thick or multi-layer synthetic fabrics to be dried completely .
	Standard	3.5kg	To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby cloths or socks.
Cool	Cool	—	To air items without heating. Min. 10 min to max. 30 min.(in 10 min. steps)
Refresh	Refresh	—	To refresh clothes kept at closed environment for a long time or to remove odors. Min. 20 min to max. 150 min.(in 10 min. steps)
Rapid 45'	Rapid 45'	0.6kg	To quickly dry up to 3 laundry items for direct wear.
Warm 60'	Warm 60'	—	To dry individual items or complete the drying process of multi-layer fabrics with different drying behavior, such as jackets, pillows or voluminous items.
Warm 30'	Warm 30'	—	

Note!

- Test programme in accordance with Regulation 392/2012/EU for energy labelling, measured in accordance with EN 61121 and suitable for drying normal cotton load at rated load capacity.
- Thick or multi-layered fabrics, e.g. bedlinen, jeans, jackets etc, are not easy to dry. You'd better choose Cotton Extra programme.
- As the uneven material, thick and multi-layered clothes are not easy to dry, it is better to choose the appropriate time drying programme to dry them if some parts of the clothes still damp after programme finished.

OPERATION

■ Consumption Data ①

Model	Program	Capacity	Spin Speed / Residual Humidity	Drying Time	Energy Consumption
Serie 1-8C	Cotton Standard	8kg	1000rpm / 60%	140min	4.74kWh
	Cotton Standard	4.0kg	1000rpm / 60%	90min	2.57kWh
	Synthetic Standard	3.5kg	800rpm / 40%	57min	1.65kWh

Note!

- Thick or multi-layered fabrics, e.g. jackets etc., are not easy to dry. You had better choose Cotton Extra programme.
- As uneven material, thick and multi-layered clothes are not easy to dry, it is better to choose the appropriate time drying programme to completely dry them if some parts of the clothes are still damp after programme finishes.

① All data are measured in accordance with EN 61121.



The actual consumption may differ from the values given in the table, depending on the amount of the laundry, type of fabric, residual moisture and any additional functions selected.

MAINTENANCE

■ Cleaning and Care

Empty the water container

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensate water into the basin.
3. Install the water container.


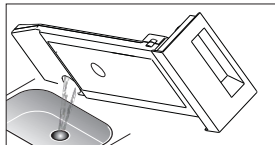
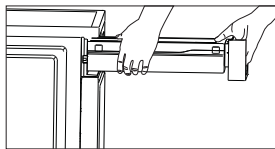


⚠ Warning!

- Empty the water container after each use. Once the water container is filled completely, the programme will be paused and the "Full" icon will light. After the container is emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
- Do not drink the condensate water.
- Do not use the dryer without the water container.

Clean the lint filter

1. Open the door.
2. Take out the filter.
3. Open the filter and remove the fluff on the filter. You can clean it in water.
4. Dry the filter thoroughly before installing it back.

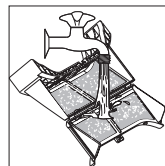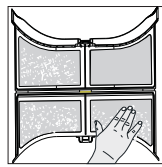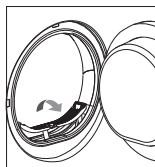

📌 Note!

- The lint accumulated on the filter will block the air circulation, which will cause the extension of drying time and increase energy consumption. Therefore the lint filter shall be cleaned after each use.
- Take notice of the correct orientation before to insert the lint filter.
- Do not operate the dryer without the lint filter!
- Clean the lint filter after each use to prevent lint accumulation inside the dryer.

MAINTENANCE

Cleaning the heat exchange





Leave the dryer to cool down.

Residual water may leak out, place an absorbent cloth under the maintenance cover.

1. Unlock the maintenance cover.
 2. Completely open maintenance cover.
 3. Turn both locking levers towards each other.
 4. Pull out the heat exchanger.
 5. Flush the heat exchanger with water to remove lint; let the water drain properly.
 6. Clean the seals.
 7. Re-insert the heat exchanger, the handle at the bottom.
 8. Turn both locking levers.
 9. Close the maintenance cover until it locks into position.
- Please clean the heat exchanger approximately, once every 3 months if frequently used.
Do not damage the heat exchanger!

Warning!

- Clean with water only; do not use hard/sharp-edged objects!
Do not operate the dryer without the heat exchanger!

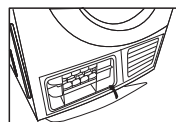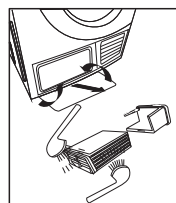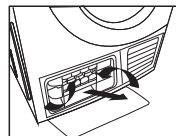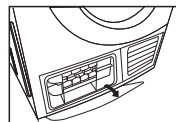

MAINTENANCE

■ Trouble Shooting

Many malfunctions and faults that might occur in daily operation can be easily remedied. Time and money will be saved because a service call won't be needed. The following guide may help you to find the reason for a malfunction and correct it.

Display	Reason	Solutions
"Child Lock+3h"	Heating problem	Please contact your local service center if the problem occurs.
"Child Lock+6h"	Humidity sensor error	
"Child Lock+9h"	Temperature sensor error	
"Full" LED on permanently	Water pump failure or water level sensor failure	Empty container
	Container is full	

Warning!

- Only authorised technicians can carry out repairs.
- If the LED displays other prompt and the dryer does not work, please call the service.

MAINTENANCE

Note!

Before you call the service, please check if you have dealt with the problems yourself consulting the user instructions.

Problem	Solution
• Display is not on	• Check if the power supply works. • Check if the mains plug is inserted. • Check the selected programme . • Press the 【On/Off】 button.
• “Full” is lighting	• Empty water container. • If the light still remains on, please call the service.
• “Filter” is lighting	• Clean the lint filter.
• Dryer does not start	• Connect the tumble dryer to the mains. • Turn on the tumble dryer. • Check the the door is closed. • Check the programme is set. • Press the 【Start/Pause】 button.
• Degree of dryness was not reached or drying time too long	• Clean lint filter and heat exchanger. • Empty the water container. • Check the drain hose. • Check installation place is appropriate. • Keep the air inlet clean. • Use higher drying intensity level programme or time programme.
• The dryer switches off at the end of the programme	• The dryer switches off automatically for energy saving. This is not an error but a normal function.

Warning!

If you cannot deal with the problems by yourself and need help

- Press the **【On/Off】** button.
- Pull out the mains plug and call the service.

MAINTENANCE

■ Technical Specifications

Model Parameter	Serie 1-8C
Dimension(L*W*H)	615*595*845(mm)
Ambient temperature	+5°C ~ +35°C
Rated input power	2700W
Rated voltage	220-240V~
Rated frequency	50Hz
Weight of product	41kg
Rated capacity	8.0kg



Note!

- The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensate water is allowed to freeze in the pump, hoses and / or condensate water container.

MAINTENANCE

■ Product Fiches

Model	Serie 1-8C
Rated Capacity	8kg
Dryer Type	Condenser
Energy efficiency class	B
Weighted annual energy consumption (AE _d)	560.9kWh / year
Automatic or non-automatic	Automatic
EU Ecolabel	N/A
Energy consumption of the standard cotton programme	
Weighted energy consumption of the standard cotton programme at full and partial load	3.50kWh
Energy consumption of the standard cotton programme at full load	4.74kWh
Energy consumption of the standard cotton programme at partial load	2.57kWh
Power consumption of the off-mode (Po)	0.1 W
Power consumption of the left-on mode (Pl)	0.8 W
Duration of the left-on mode	10 min
Programme time of the 'standard cotton programme'	
Weighted programme time of the standard cotton programme at full and partial load	111min
Programme time of the standard cotton programme at full load	140min
Programme time of the standard cotton programme at partial load	90min
Condensation efficiency class A (most efficient) to G (least efficient)	B
Average condensation efficiency of the standard cotton programme at full load	81%
Average condensation efficiency of the standard cotton programme at partial load	81%
Weighted condensation efficiency for the standard cotton programme at full and partial load	81%
Sound power level for the standard cotton programme at full load	69dB
Remarks:	

- ① Energy consumption per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used. The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.