

Changing the direction of the valve actuator

1. Unscrew the fixation ring:



2. Lift the interior up:



Westbaan 240 - 2841 MC Moordrecht - The Netherlands
P.O. Box 450 - 2800 AL Gouda - The Netherlands
T. +31 (0) 172 427 800 - F. +31 (0) 172 427 801
info@geomil.com - www.geomil.com

3. Take the fixation ring off:



4. Take the interior out of the housing:



5. Reverse the interior and put back in housing:



6. Screw the fixation ring back on:

