SDM120CT 40mA Smart Power Sensor


Quick Guide



Please scan the QR code to obtain the electronic version of the quick guide and user manual

Add: No.52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China.
Tel: 0086-573-83698881/83698882
Fax: 0086-573-83698883
Web: www.eastron.com.cn

Single Phase (1P2W)

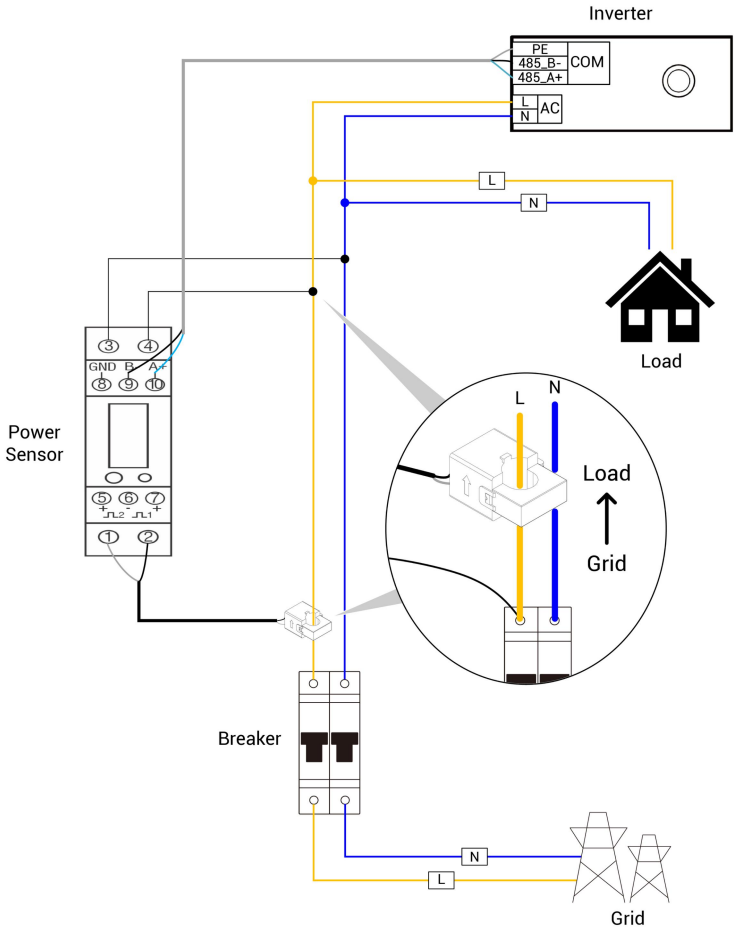

Notes:

1. Power sensor has been pre-connected with CTs and voltage sampling wires, please check whether the wiring is tight before and after installation.
2. Please ensure that CT and voltage sampling wires on the same phase. Phase line and N line cannot be mixed.
3. Make sure the direction of the arrow on CT point from grid to load.
4. Power sensor requires circuit breaker for protection, otherwise the voltage sampling wires need to be connected with a fuse in each phase. Recommended fuse specification: 400Vac/1A