

# INSTALLATION INSTRUCTION







ITEM NO: 4202

DESCRIPTION: Rugged B2 Side Steps For Ford Ranger – 2012 Onwards T6 /T7 /T8

Attention:


- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

Part List

No.	NAME	QTY	REMARK	No.	NAME	QTY	REMARK
1	Side Bar (left)	1		7	Spring Washer	30	M10x35
2	Side Bar (right)	1		8	Spring Washer	30	φ 10
3	Front Bracket (left)	1		9	Large Washer	30	φ 10x30x2.5
4	Front Bracket (right)	1					
5	Rear Bracket (left)	2					
6	Rear Bracket(right)	2					

Note: The following is the installation method of the right side bar, and the left one can also refer to this.


## INSTALLATION PICTURE

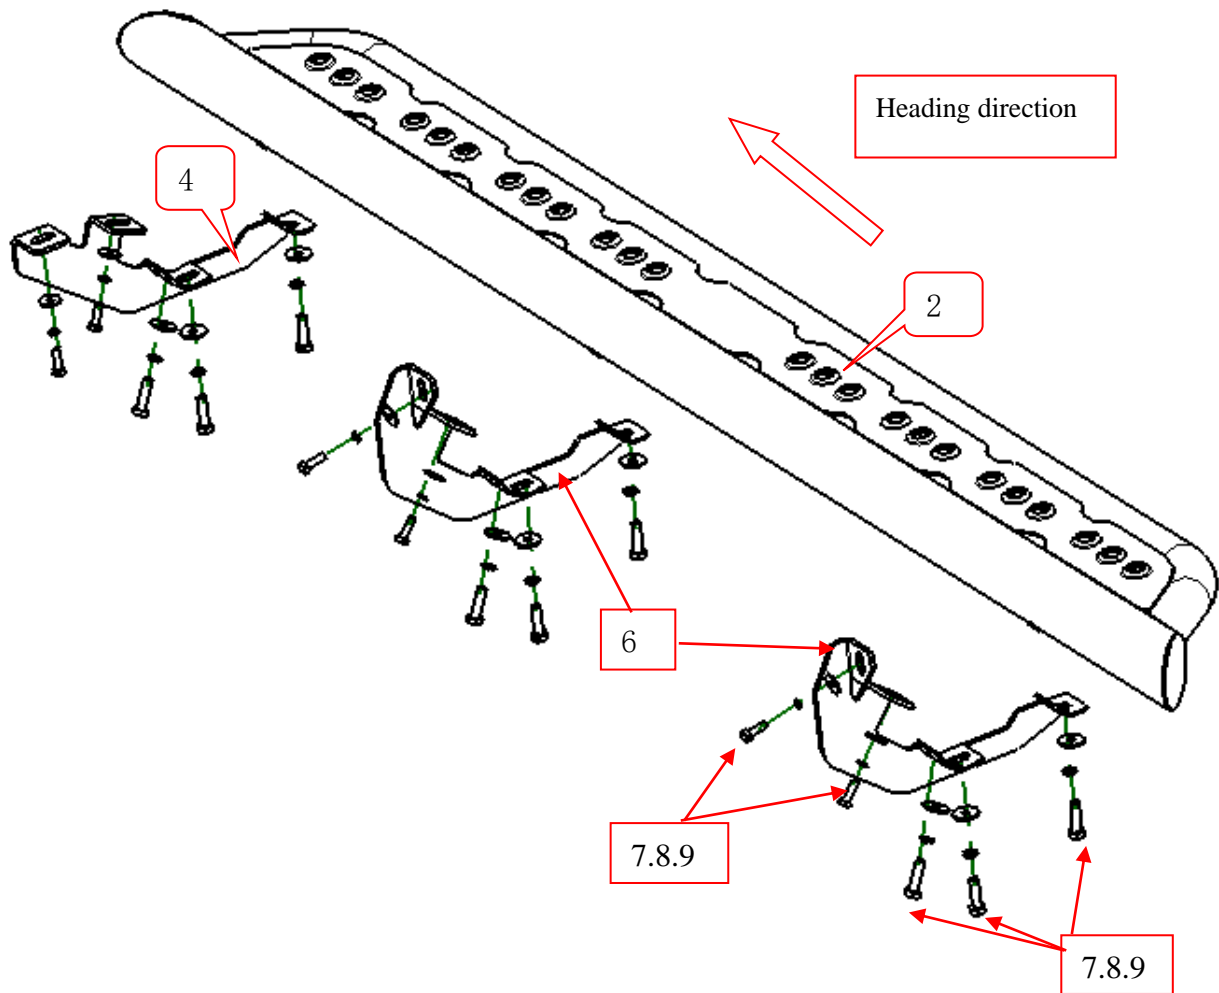

Installation Steps:

Step 1: Check all hardware with part list to make sure it is completed.


Step 2: Ref original hole fit front and rear brackets (ref pic 1).

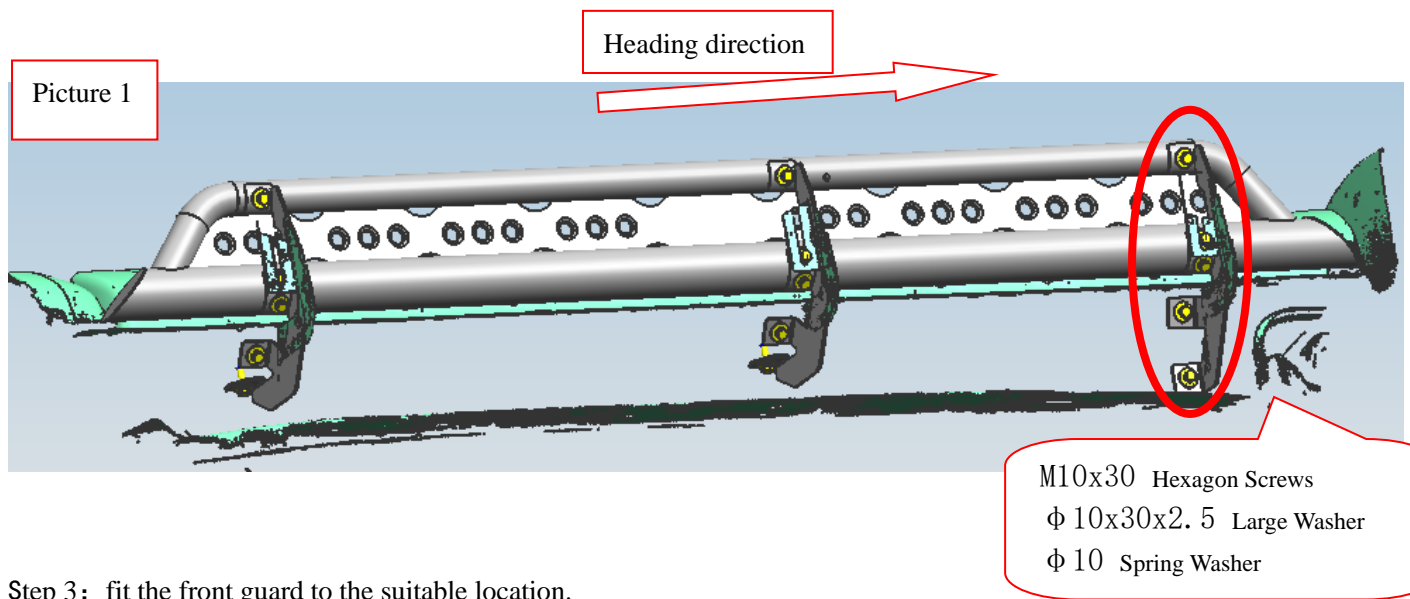

Step 3: fit the front guard to the suitable location.

Step 4: check all the bolts in case any leak, then tighten all bolts.

Step 5: installation easy completed.

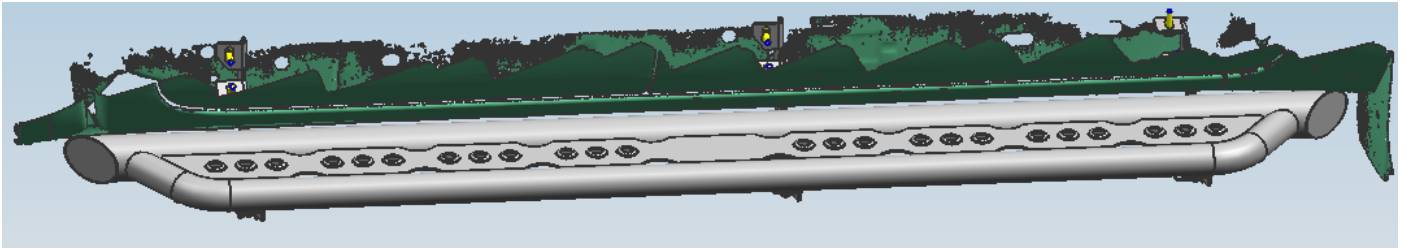

Disclaimer: Caused due to improper installation initiates some related problem and losses, are beyond our company's quality assurance.