



How to use the bassoon tip cutter

Related products : Bassoon tip cutter and bagpipe tip cutter.

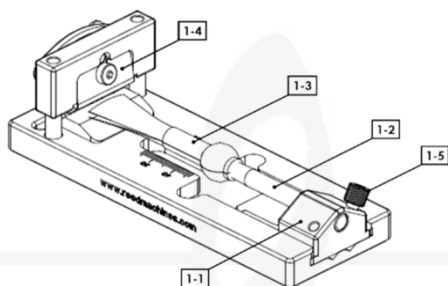


Image 1

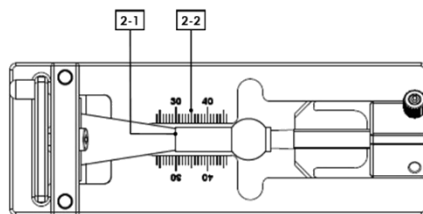


Image 2



Warning

Never touch the cutting edge of the knife because it can cause injury.

How to position the reed

1. Pull back reed holder base block [1-1] with reed holder pin [1-2] so there is enough space for reed [1-3].
2. Place the reed on the reed holder pin and turn the reed so the reed tip is parallel to knife [1-4].
3. Position collar [2-1] at the value of scale [2-2] that corresponds with the length of the blade you want. To do this, you have to move the reed holder base block.
4. Tighten clamp screw [1-5].



Note

To accurately read the position of the collar, you must look exactly above the collar and perpendicular to the base plate.



Note

You can change the position of the reed holder pin by untightening the clamp screw at the bottom of the reed holder base block.

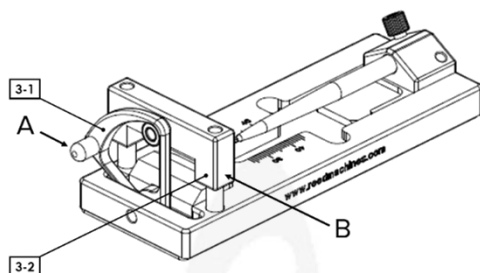


Image 3

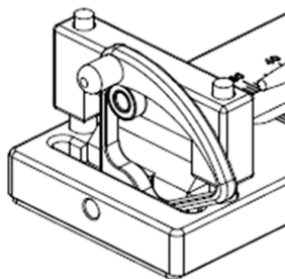


Image 4

How to cut the tip

1. Put the tip cutter on a flat surface and hold it with one hand.
2. Put the index finger and thumb of the other hand on position A of lever set [3-1] and position B of knife set [3-2].
3. Cut the tip by making a pinch movement with the index finger and thumb till the lever set and knife set are in the position as shown in image 4.