




Make sure that you are connected to the Internet and logged in to XpertEye. If not, see sheet 1. Check if you are on the same server region. If not, see sheet 11.

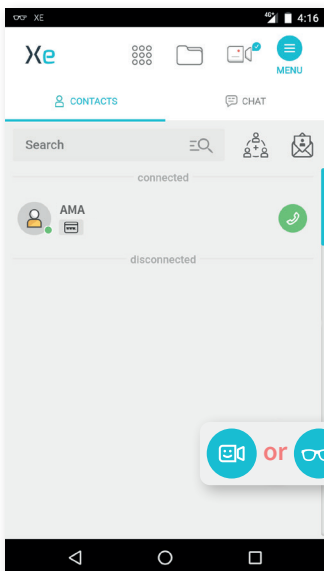


Make a video with the Standalone mode

1

Tap  or  icons depending if you are using smartglasses or not.

2

1 Record videos using the  icon.

2 You can then view your files via the  My files menu on the home page. The record is a .webm file.

Download your videos on your computer

Connect your XpertEye smartphone to your computer via cable.

The videos are available in the following folder:

[AMA-XPERTEYE-MOBILE\Internal\sharedstorage\DCIM\AMA\records](#)

The pictures are available in the following folder:

[AMA-XPERTEYE-MOBILE\Internal\sharedstorage\DCIM\AMA\pictures](#)