

Nederlandse norm

NEN-EN-ISO 20236 (en)

Waterkwaliteit - Bepaling van totale organische koolstof (TOC), opgeloste organische koolstof (DOC), totaal gebonden stikstof (TNb) en opgelost gebonden stikstof (DNb) na katalytische oxidatieve verbranding bij hoge temperatuur (ISO 20236:2024,IDT)

Water quality - Determination of total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) after high temperature catalytic oxidative combustion (ISO 20236:2024,IDT)

Vervangt NEN-EN-ISO 20236:2021

ICS 13.060.50
december 2024

Als Nederlandse norm is aanvaard:

- EN ISO 20236:2024,IDT

- ISO 20236:2024,IDT

Normcommissie 390020 'Milieukwaliteit'



THIS PUBLICATION IS COPYRIGHT PROTECTED

DEZE PUBLICATIE IS AUTEURSRECHTELIJK BESCHERMD

Apart from exceptions provided by the law, nothing from this publication may be duplicated and/or published by means of photocopy, microfilm, storage in computer files or otherwise, which also applies to full or partial processing, without the written consent of Stichting Koninklijk Nederlands Normalisatie Instituut.

Stichting Koninklijk Nederlands Normalisatie Instituut shall, with the exclusion of any other beneficiary, collect payments owed by third parties for duplication and/or act in and out of law, where this authority is not transferred or falls by right to Stichting Reprerecht.

Auteursrecht voorbehouden. Behoudens uitzondering door de wet gesteld mag zonder schriftelijke toestemming van Stichting Koninklijk Nederlands Normalisatie Instituut niets uit deze uitgave worden veeelvoudigd en/of openbaar gemaakt door middel van fotokopie, microfilm, opslag in computerbestanden of anderszins, hetgeen ook van toepassing is op gehele of gedeeltelijke bewerking.

Stichting Koninklijk Nederlands Normalisatie Instituut is met uitsluiting van ieder ander gerechtigd de door derden verschuldigde vergoedingen voor veeelvoudiging te innen en/of daartoe in en buiten rechte op te treden, voor zover deze bevoegdheid niet is overgedragen c.q. rechtens toekomt aan Stichting Reprerecht.

Although the utmost care has been taken with this publication, errors and omissions cannot be entirely excluded. Stichting Koninklijk Nederlands Normalisatie Instituut and/or the members of the committees therefore accept no liability, not even for direct or indirect damage, occurring due to or in relation with the application of publications issued by Stichting Koninklijk Nederlands Normalisatie Instituut.

Hoewel bij deze uitgave de uiterste zorg is nagestreefd, kunnen fouten en onvolledigheden niet geheel worden uitgesloten. Stichting Koninklijk Nederlands Normalisatie Instituut en/of de leden van de commissies aanvaarden derhalve geen enkele aansprakelijkheid, ook niet voor directe of indirecte schade, ontstaan door of verband houdend met toepassing van door Stichting Koninklijk Nederlands Normalisatie Instituut gepubliceerde uitgaven.

EUROPEAN STANDARD
NORME EUROPÉENNE
EUROPÄISCHE NORM

EN ISO 20236

November 2024

ICS 13.060.50

Supersedes EN ISO 20236:2021

English Version

Water quality - Determination of total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) after high temperature catalytic oxidative combustion (ISO 20236:2024)

Qualité de l'eau - Dosage du carbone organique total (COT), carbone organique dissous (COD), azote lié total (TNb) et azote lié dissous (DNb) après combustion catalytique oxydante à haute température (ISO 20236:2024)

Wasserbeschaffenheit - Bestimmung des gesamten organischen Kohlenstoffs (TOC), des gelösten organischen Kohlenstoffs (DOC), des gebundenen Stickstoffs (TNb) und des gelösten gebundenen Stickstoffs (DNb) nach katalytischer oxidativer Hochtemperaturverbrennung (ISO 20236:2024)

This European Standard was approved by CEN on 3 October 2024.

CEN members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration. Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the CEN-CENELEC Management Centre or to any CEN member.

This European Standard exists in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CEN member into its own language and notified to the CEN-CENELEC Management Centre has the same status as the official versions.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Republic of North Macedonia, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Türkiye and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION
COMITÉ EUROPÉEN DE NORMALISATION
EUROPÄISCHES KOMITEE FÜR NORMUNG

CEN-CENELEC Management Centre: Rue de la Science 23, B-1040 Brussels

© 2024 CEN All rights of exploitation in any form and by any means reserved worldwide for CEN national Members.

Ref. No. EN ISO 20236:2024 E

Contents	Page
European foreword.....	3

European foreword

This document (EN ISO 20236:2024) has been prepared by Technical Committee ISO/TC 147 "Water quality" in collaboration with Technical Committee CEN/TC 230 "Water analysis" the secretariat of which is held by DIN.

This European Standard shall be given the status of a national standard, either by publication of an identical text or by endorsement, at the latest by May 2025, and conflicting national standards shall be withdrawn at the latest by May 2025.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. CEN shall not be held responsible for identifying any or all such patent rights.

This document supersedes EN ISO 20236:2021.

Any feedback and questions on this document should be directed to the users' national standards body/national committee. A complete listing of these bodies can be found on the CEN website.

According to the CEN-CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Republic of North Macedonia, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Türkiye and the United Kingdom.

Endorsement notice

The text of ISO 20236:2024 has been approved by CEN as EN ISO 20236:2024 without any modification.



International Standard

ISO 20236

Water quality — Determination of total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) after high temperature catalytic oxidative combustion

*Qualité de l'eau — Dosage du carbone organique total (COT),
carbone organique dissous (COD), azote lié total (TNb) et azote
lié dissous (DNb) après combustion catalytique oxydante à haute
température*

**Second edition
2024-11**



COPYRIGHT PROTECTED DOCUMENT

© ISO 2024

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
CP 401 • Ch. de Blandonnet 8
CH-1214 Vernier, Geneva
Phone: +41 22 749 01 11
Email: copyright@iso.org
Website: www.iso.org

Published in Switzerland

© ISO 2024 – All rights reserved

Dit document is door NEN onder licentie verstrekt aan: / This document has been supplied under license by NEN to:
Waterschap Limburg l.hermans@waterschaplimburg.nl 2025-01-07 13:05:26

ISO 20236:2024(en)

Contents

Page

Foreword	iv
Introduction	v
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Principle	3
5 Interferences	3
5.1 General	3
5.2 TOC or DOC	4
5.3 TNb or DNb	4
6 Reagents	4
7 Apparatus	7
8 Quality requirements for the analytical system	8
8.1 System check	8
8.2 Particle processing control	8
9 Sampling and sample preparation	9
10 Procedure	9
10.1 General	9
10.2 Calibration	10
10.3 Validity check of the calibration function	10
10.4 Measurement	10
10.4.1 General	10
10.4.2 Determination	10
11 Evaluation	12
12 Expression of results	12
13 Test report	12
Annex A (normative) Determination of TOC applying the difference method	13
Annex B (informative) Performance data for TOC or DOC, and TNb or DNb	16
Annex C (informative) Alternative detection techniques for TNb and DNb	18
Bibliography	19

ISO 20236:2024(en)

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular, the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

ISO draws attention to the possibility that the implementation of this document may involve the use of (a) patent(s). ISO takes no position concerning the evidence, validity or applicability of any claimed patent rights in respect thereof. As of the date of publication of this document, ISO had not received notice of (a) patent(s) which may be required to implement this document. However, implementers are cautioned that this may not represent the latest information, which may be obtained from the patent database available at www.iso.org/patents. ISO shall not be held responsible for identifying any or all such patent rights.

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation of the voluntary nature of standards, the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT), see www.iso.org/iso/foreword.html.

This document was prepared by Technical Committee ISO/TC 147, *Water quality*, Subcommittee SC 2, *Physical, chemical and biochemical methods*, in collaboration with the European Committee for Standardization (CEN) Technical Committee CEN/TC 230, *Water analysis*, in accordance with the Agreement on technical cooperation between ISO and CEN (Vienna Agreement).

This second edition cancels and replaces the first edition (ISO 20236:2018), which has been technically revised.

The main changes are as follows:

- the method to determine concentrations <1 mg/l of C and N has been expanded;
- the normative references have been updated;
- the method to apply single component standard calibration solutions e.g. based on as ammonium sulfate or potassium nitrate, has been expanded;
- [Clause A.5](#) has been added in order to require referencing the difference methods with the results report.

Any feedback or questions on this document should be directed to the user's national standards body. A complete listing of these bodies can be found at www.iso.org/members.html.

ISO 20236:2024(en)

Introduction

Total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) are an analytical convention, whose characteristic is a parameter used for water quality control purposes. These parameters represent the sum of organically bound carbon as well as the sum of inorganic and organic nitrogen (but not nitrogen gas), which can be dissolved in water or bonded to dissolved or suspended matter under specified conditions and, if the sample is not filtered, includes that associated with suspended matter. It does not give information on the nature of the substances. The abbreviations TOC, DOC, TNb, DNb, TC and TIC refer to values determined by the high temperature method.

Details of a validation interlaboratory trial with the performance data for TOC or DOC and TNb or DNb, all using the high temperature method in this document, are given in [Annex B](#).

Water quality — Determination of total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) after high temperature catalytic oxidative combustion

WARNING — Persons using this document should be familiar with normal laboratory practice. This document does not purport to address all of the safety problems, if any, associated with its use. It is the responsibility of the user to establish appropriate safety and health practices.

IMPORTANT — It is absolutely essential that tests conducted in accordance with this document be carried out by suitably qualified staff.

1 Scope

This document specifies a method to determine the total organic carbon (TOC), dissolved organic carbon (DOC), total bound nitrogen (TNb) and dissolved bound nitrogen (DNb) in the form of free ammonia, ammonium, nitrite, nitrate and organic compounds capable of conversion to nitrogen oxides.

Cyanide, cyanate and particles of elemental carbon (soot), when present in the sample, can be determined together with the organic carbon.

Dissolved nitrogen gas (N_2) is not determined.

NOTE Generally, the method can be applied for the determination of total carbon (TC) and total inorganic carbon (TIC) – see [Annex A](#).

The method is applicable to water samples (e.g. drinking water, raw water, ground water, surface water, sea water, waste water, leachates).

This document is applicable to determination of TOC and $DOC \geq 1$ mg/l and TNb and $DNb \geq 1$ mg/l. The upper working range is restricted by instrument-dependent conditions (e.g. injection volume). Higher concentrations can be determined after appropriate dilution of the sample. The determination of concentrations < 1 mg/l is dependent on instrument conditions applying appropriate calibration.

For samples containing volatile organic compounds (e.g. industrial waste water), the application of the difference method can be considered – see [Annex A](#).

The procedure is carried out by automated analysis.

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 8466-1, *Water quality — Calibration and evaluation of analytical methods — Part 1: Linear calibration function*

3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

ISO 20236:2024(en)

ISO and IEC maintain terminology databases for use in standardization at the following addresses:

- ISO Online browsing platform: available at <https://www.iso.org/obp>
- IEC Electropedia: available at <https://www.electropedia.org/>

**3.1
total carbon**

TC
sum of measured organically and inorganically bound carbon present in water, including elemental carbon

Note 1 to entry: The total carbon is defined as measured under the conditions of the method described in this document.

**3.2
total inorganic carbon**

TIC
sum of measured inorganic carbon present in water

Note 1 to entry: The total inorganic carbon is defined as measured under the conditions of the method described in this document.

Note 2 to entry: The total inorganic carbon is measured as CO₂ originating only from carbonates, hydrogen carbonates and dissolved carbon dioxide.

**3.3
total organic carbon**

TOC
sum of measured organically bound carbon present in water, bonded to dissolved or suspended matter, including cyanate, thiocyanate and elemental carbon

Note 1 to entry: The total organic carbon is defined as measured under the conditions of the method described in this document.

Note 2 to entry: Volatile organic carbon cannot be guaranteed to be determined by the method.

Note 3 to entry: Generally, total organic carbon includes organic compounds in water that cannot be purged under the conditions of this method, also known as non-purgeable organic carbon (NPOC).

**3.4
dissolved organic carbon**

DOC
sum of measured organically bound carbon present in water originating from compounds passing through a membrane filter of 0,45 µm pore size, including cyanate and thiocyanate

Note 1 to entry: The dissolved organic carbon is defined as measured under the conditions of the method described in this document.

**3.5
total bound nitrogen**

TNb
sum of measured organically bound and inorganically bound nitrogen present in water or suspended matter

Note 1 to entry: The total bound nitrogen is defined as measured under the conditions of the method described in this document.

ISO 20236:2024(en)**3.6**
dissolved bound nitrogen
DNb

sum of measured organically and inorganically bound nitrogen present in water originating from compounds passing through a 0,45 µm membrane filter

Note 1 to entry: The dissolved bound nitrogen is defined as measured under the conditions of the method described in this document.

3.7
chemiluminescence

emission of light by an atom or molecule that is in an excited state as the result of a chemical reaction

4 Principle

Thermal catalytic combustion of organic carbon, and inorganic and organic nitrogen in an oxygen-containing atmosphere is done at ≥ 680 °C to determine TOC or DOC and at ≥ 720 °C to determine TNb or DNb.

The TOC or DOC determination is carried out according to the direct measurement method.

Prior to combustion, remove inorganic carbon by acidification and purging with a carrier gas ([6.7](#)).

NOTE Platinum and cerium(IV), for example, can be used as catalyst material for combustion. The catalyst serves to accelerate the oxidation process of carbon containing water constituents in excess of oxygen to produce the required carbon dioxide gas for the detection process. Depending on combustion temperature and temperatures in the combustion zone, different catalysts can be used, e.g. metals or metal oxides for temperatures ≥ 680 °C or sintered alumina for temperatures around 1 200 °C, according to specifications of different suppliers.

The oxidation of organic carbon (TOC and DOC) present in the sample to carbon dioxide is carried out with oxygen or synthetic air followed by the detection of the formed CO₂ by means of infrared (IR) spectrometry.

The combustion and conversion of inorganic and organic nitrogen present in the sample to nitric oxide is carried out with oxygen or synthetic air. The reaction with ozone gives electronically excited nitrogen oxides (NO). The detection of the formed NO is carried out by a chemiluminescence detector (CLD). See [Annex C](#) for alternative detection techniques.

This document can be applied for the determination of TOC or DOC and TNb or DNb separately or for simultaneous TOC or DOC and TNb or DNb determinations, for example connecting the IR detector with a chemiluminescence detector in series.

Quality control is necessary to check the validity of the calibration function (see [10.3](#)). Repeating sample measurement can be necessary. The method of standard addition can be required if matrix interferences are expected (see [5.3](#) and [10.4.2.1](#)).

5 Interferences**5.1 General**

Interferences with the determination of TOC or DOC and TNb or DNb can arise from memory effects. Replicate injections are necessary (see [10.4.1](#)).

Detergents, oils and fats can influence the surface tension of the sample, causing erroneous data. A dilution of the sample can reduce such risk.

Samples with extreme pH values, highly buffered samples and samples with high salt contents can cause interference. Seek advice from the instrument manufacturer to solve these interferences.

Suspended material can lead to a loss of quality of the analytical result. If a homogenized sample containing suspended material produces results obtained from injections of independent aliquots in different vials that deviate by more than 10 %, an accurate TOC or TNb result cannot be obtained on the sample (see [Annex B](#)).

ISO 20236:2024(en)**5.2 TOC or DOC**

Inorganic carbon (e.g. CO₂ or ions of carbonic acid) present in the sample interferes with the determination of TOC or DOC. Inorganic carbon is removed by acidification and purging with a gas that is free from CO₂ and organic compounds prior to TOC or DOC determination (see [10.4.2.2](#) and [10.4.2.3](#)).

NOTE 1 Alternatively, the differential method determining the TC and TIC separately can be applied (see [Annex A](#)). The TOC can be calculated by subtracting TIC from TC. This calculation leads to correct results only as long as carbon monoxide, cyanide, cyanate and thiocyanate are present in negligible concentrations.

NOTE 2 Purgeable organic carbon substances, such as benzene, toluene, cyclohexane and chloroform, can partly escape upon stripping (see [10.4.2.2](#) and [10.4.2.3](#)). In the presence of these substances, the TOC concentration can be determined separately, for example, by applying the differential method (see [Annex A](#)).

5.3 TNb or DNb

High loads of DOC or TOC can lead to poor recovery of TNb or DNb. Suspected problems can be identified by determining the nitrogen before and after suitable dilution, or by using standard addition techniques.

NOTE The phrase “high loads” cannot be quantified as it generally depends on, for example, sample matrix properties, equipment applied or working range chosen.

Not all organic nitrogen compounds are quantitatively converted to nitrogen oxide by the combustion procedure described, and consequently to nitrogen dioxide by the reaction with ozone. Poor recoveries can occur with compounds containing either double- or triple-bonded nitrogen atoms. The use of a calibration function calculated according to [10.2](#) and applying a nitrogen mixed standard solution II ([6.9.3.4](#)) can result in a TNb bias for ammonium-N determinations (e.g. ammonium sulfate solution) and for nitrate-N determinations (e.g. potassium nitrate solution). In this case, a single standard (ammonium sulfate or potassium nitrate) can be used.

The use of sulfuric acid for sample preservation or acidification can lead to reduced TNb or DNb results when the calibration standards are not acidified in the same way as the samples.

6 Reagents

Use reagents of pro analysis grade, if available.

Dry all solid reagents for at least 1 h at (105 ± 5) °C. Store the dried solid in a desiccator before weighing.

NOTE It is not necessary to dry cellulose before usage.

Prepare alternative concentrations and volumes of solutions as described hereafter, if necessary. Alternatively, use commercially available stock solutions of the required concentration.

When applying the simultaneous determination of TNb and TOC, the stock solution ([6.5](#)) or an appropriate mixture of the 1 000 mg/l TOC and TNb stock solutions ([6.5](#) or [6.8.2](#) with [6.9.3.1](#) or [6.9.3.2](#) or [6.9.3.3](#)) for the preparation of standard, calibration and system check solutions can be used.

6.1 Water.

The contents of carbon and bound nitrogen in water used for the preparation of samples and solutions shall be sufficiently low to be negligible in comparison with the lowest TOC and TNb concentration to be determined.

6.2 Sulfuric acid, (H₂SO₄) ρ = 1,84 g/ml.

6.3 Hydrochloric acid, (HCl) ω = 30 % to 32 %.

6.4 Nicotinic acid, (C₆H₅NO₂), >99,5 %.

ISO 20236:2024(en)**6.5 TOC and TNb stock solution for system check.**

Place 8,793 g of nicotinic acid (6.4) in a 1 000 ml volumetric flask. Dissolve and dilute to volume with water (6.1).

The solution contains 5 147 mg/l of carbon and 1 000 mg/l of nitrogen.

The solution is stable for six months if stored at $(3 \pm 2) ^\circ\text{C}$.

6.6 Blank solution.

Fill a 100 ml volumetric flask with water (6.1).

6.7 Oxygen or synthetic air, free from impurities (e.g. carbon dioxide, organic carbon, nitrogen compounds) with influence of the determinant.

Use gases in accordance with the manufacturer's specifications, e.g. a volume fraction of oxygen of 99,7 %.

6.8 Reagents for the TOC or DOC determination.

6.8.1 Potassium hydrogen phthalate, $\text{C}_8\text{H}_5\text{KO}_4$.

6.8.2 Potassium hydrogen phthalate stock solution, $\rho(\text{C}) = 1\,000\text{ mg/l}$.

Place 2,125 g of potassium hydrogen phthalate (6.8.1) in a 1 000 ml volumetric flask. Dissolve and dilute to volume with water (6.1).

The solution is stable for six months if stored at $(3 \pm 2) ^\circ\text{C}$.

6.8.3 Potassium hydrogen phthalate standard solution, $\rho(\text{C}) = 100\text{ mg/l}$.

Pipette 100 ml of the potassium hydrogen phthalate stock standard solution (6.8.2) into a 1 000 ml volumetric flask and dilute to volume with water (6.1).

The solution is stable for one month if stored at $(3 \pm 2) ^\circ\text{C}$.

6.8.4 TOC and DOC calibration solutions.

Depending on the TOC or DOC concentration expected in the sample, use the potassium hydrogen phthalate standard solution (6.8.3) to prepare 5 to 10 calibration solutions distributed over the expected working range as evenly as possible.

For example, proceed as follows for the range 1,0 mg/l C to 10,0 mg/l C.

Pipette the following volumes into a series of 100 ml volumetric flasks: 1,0 ml, 2,0 ml, 3,0 ml, 4,0 ml, 5,0 ml, 6,0 ml, 7,0 ml, 8,0 ml, 9,0 ml or 10,0 ml of the potassium hydrogen phthalate standard solution (6.8.3) and dilute to volume with water (6.1).

The concentrations of carbon in these calibration solutions are: 1,0 mg/l, 2,0 mg/l, 3,0 mg/l, 4,0 mg/l, 5,0 mg/l, 6,0 mg/l, 7,0 mg/l, 8,0 mg/l, 9,0 mg/l or 10,0 mg/l, respectively.

Prepare the calibration solutions on the day of use.

6.8.5 Hydrochloric acid TIC stripping solution, e.g. $c(\text{HCl}) = 3\text{ mol/l}$.

ISO 20236:2024(en)

6.8.6 Cellulose ($C_6H_{10}O_5$)_n, microcrystalline of particle size ranging from 0,02 mm to 0,1 mm.

6.8.6.1 Cellulose test suspension for particle processing control, $\rho(C) = 100 \text{ mg/l}$.

Place 225 mg of cellulose (6.8.6) in a 1 000 ml volumetric flask, moist with water (6.1) and dilute to volume with water (6.1).

The mixture is stable for one month if stored at $(3 \pm 2)^\circ\text{C}$.

Homogenize the suspension with a magnetic stirrer until the suspension is homogeneous before use. Ultrasonic treatment shall not be used because it reduces the particle size.

NOTE It can be helpful to stir the suspension continuously.

6.9 Reagents for the TNb and DNb determination.

6.9.1 Ammonium sulfate, $(NH_4)_2SO_4$.

6.9.2 Potassium nitrate, KNO_3 .

6.9.3 Nitrogen stock standard solutions for calibration.

6.9.3.1 Ammonium sulfate stock solution, $\rho(N) = 1\,000 \text{ mg/l}$.

Place 4,717 g of ammonium sulfate (6.9.1) in a 1 000 ml volumetric flask. Dissolve in 500 ml of water (6.1) and dilute to volume with water (6.1).

The solution is stable for six months if stored at $(3 \pm 2)^\circ\text{C}$.

6.9.3.2 Potassium nitrate stock solution, $\rho(N) = 1\,000 \text{ mg/l}$.

Place 7,219 g of potassium nitrate (6.9.2) in a 1 000 ml volumetric flask. Dissolve and dilute to volume with water (6.1).

The solution is stable for six months if stored at $(3 \pm 2)^\circ\text{C}$.

6.9.3.3 Nitrogen mixed standard solution I, $\rho(N) = 1\,000 \text{ mg/l}$.

Mix equal volumes of the solutions 6.9.3.1 and 6.9.3.2 to produce a nitrogen mixed standard solution.

The solution is stable for one month if stored at $(3 \pm 2)^\circ\text{C}$.

6.9.3.4 Nitrogen standard solution II, $\rho(N) = 100 \text{ mg/l}$.

Pipette 100 ml of nitrogen mixed standard solution I (6.9.3.3) into a 1 000 ml volumetric flask and dilute to volume with water (6.1).

The solution is stable for one month if stored at $(3 \pm 2)^\circ\text{C}$.

6.9.4 TNb and DNb calibration solutions.

An example for appropriate mixed nitrogen calibration solutions is given as follows.

Depending on the nitrogen concentration expected in the sample, use the nitrogen standard solution II (6.9.3.4) to prepare 5 to 10 calibration solutions distributed over the expected working range as evenly as possible.

For example, proceed as follows for the range 1,0 mg/l N to 10 mg/l N.

ISO 20236:2024(en)

Pipette the following volumes into a series of 100 ml volumetric flasks: 1,0 ml, 2,0 ml, 3,0 ml, 4,0 ml, 5,0 ml, 6,0 ml, 7,0 ml, 8,0 ml, 9,0 ml or 10,0 ml of the nitrogen mixed standard solution II ([6.9.3.4](#)) and dilute to volume with water ([6.1](#)).

The concentrations of nitrogen in these calibration solutions are: 1,0 mg/l, 2,0 mg/l, 3,0 mg/l, 4,0 mg/l, 5,0 mg/l, 6,0 mg/l, 7,0 mg/l, 8,0 mg/l, 9,0 mg/l or 10,0 mg/l, respectively.

Prepare the calibration solutions on the day of use.

Alternatively, single component standard calibration solutions can be applied. Prepare appropriate concentrations of ammonium sulfate ([6.9.3.1](#)) or potassium nitrate ([6.9.3.2](#)) accordingly.

NOTE The application of a mixed calibration solution can cause losses in the TNb signal. In such cases, applying a single component calibration (e.g. $\text{NH}_4\text{-N}$ calibration solutions) can avoid such effects.

7 Apparatus

The usual laboratory apparatus and, in particular, the following.

7.1 Homogenization and particle size reducing device, for the homogenization of dispersed matter, for example a suitable ultrasonic apparatus or a rotor-stator homogenizer (see [Clause 9](#)) ensuring a resulting particle size smaller than the sample injection device, to have dimensions of suspended solids lower than the aspirating needle/hydraulics, if necessary.

NOTE An ultrasonic device is suitable for the homogenization of samples, but it is not suitable for the homogenization of the cellulose test suspension ([6.8.6.1](#)) for particle processing control.

7.2 High temperature combustion system, see [Figure 1](#), conforming to the quality requirements given in [Clause 8](#).

When measuring water samples containing particulate material, the instrument shall be capable of injecting the particulate material.

NOTE If using a system for simultaneous determination of TOC and TNb, the particle procession can be checked using the TOC cellulose test suspension ([6.8.6.1](#)). Chemicals for a suitable TNb test suspension were not available at the time of method development.

In general, the high temperature combustion system shall consist of the following components.

7.2.1 Sample injection device, for automated or manual operation.

The use of an autosampler shall include a device to homogenize samples (e.g. magnetic stirrer) before injection.

7.2.2 Reaction vessel for the combustion of TOC or DOC and to 720 °C for TNb or DNb compounds. It generally consists of an oven heatable to at least 680 °C for TOC or DOC and to 720 °C for TNb or DNb determinations.

7.2.3 Detector.

7.2.3.1 IR detector for TOC or DOC determination.

7.2.3.2 Chemiluminescence detector for TNb or DNb determination.

NOTE See [Annex C](#) for alternative detectors.

7.2.4 Recording device, e.g. PC with software for data acquisition and evaluation.

ISO 20236:2024(en)

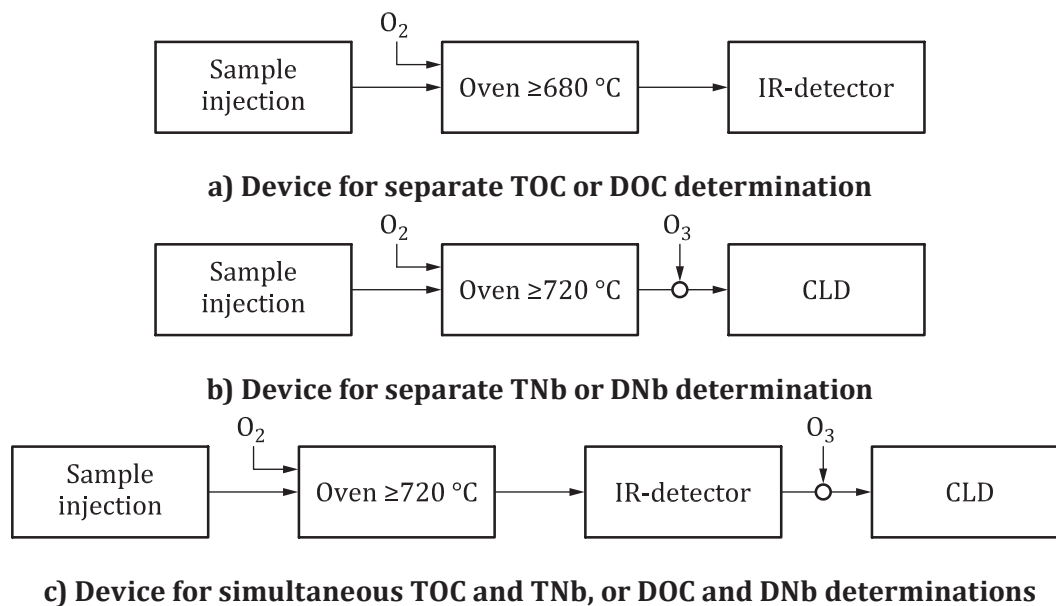


Figure 1 — Examples of high temperature combustion system configurations with a detector

8 Quality requirements for the analytical system

8.1 System check

The system check serves to identify significant deviations of calculated recoveries from known concentrations of measured standard solutions as well as unacceptable high variation coefficients. For example, the catalyst properties can become exhausted due to changes in the surface structure (e.g. precipitates) leading to reduced recoveries or increased variation coefficients.

System check determinations shall be carried out using an independent solution. Carry out system check determinations using at least two dilutions of the nicotinic acid standard solution (6.5) covering approximately 20 % to 80 % in the appropriate working range to identify any deviations of the response values obtained during the combustion stage. Deviations up to either ± 10 % or ± 1 mg/l, whichever is greater of the theoretical value, may be tolerated.

A minimum of two injections from one vial shall be carried out (see 10.4.1). The calculated deviation from the mean or the repeatability variation coefficient shall not exceed ± 5 % or ± 1 mg/l, whichever is greater. At concentrations of less than 10 mg/l, the individual values cannot differ more than 1 mg/l.

NOTE 1 Repeatability variation coefficient means the variation coefficient of replicate injections obtained with the same method on an identical sample.

NOTE 2 The equipment used usually calculates the repeatability automatically.

8.2 Particle processing control

This test is necessary for the determination of TOC and the simultaneous determination of TOC and TNb.

A minimum of three injections from one vial of the cellulose test suspension (6.8.6.1) shall be carried out (see 10.4.1). The mean value from a triple measurement shall not exceed ± 10 % of the theoretical value. The repeatability variation coefficient shall be ≤ 10 % (see Annex B).

If the instrument fails the particle processing control test, the instrument is not appropriate for particle containing samples.

ISO 20236:2024(en)

If using a system for simultaneous determination of TOC and TNb, the particle procession can be checked using the TOC cellulose test suspension (6.8.6.1) for the determination of TOC or the simultaneous determination of TOC and TNb need to check particle processing only for carbon.

NOTE A recommendation for an appropriate reagent to check particle processing for nitrogen cannot be given.

9 Sampling and sample preparation

When sampling, ensure that the samples being collected are representative (particularly in the presence of undissolved substances), and take care not to contaminate the samples with organic substances.

Use clean polyethene or glass bottles for sampling.

For the determination of dissolved carbon or dissolved bound nitrogen, filter the sample through a 0,45 µm membrane filter at the sampling site before applying any other preparation step. The absence of contamination coming from the filter shall be checked regularly.

Transport the sample at $(5 \pm 3) ^\circ\text{C}$. Store the sample at $(3 \pm 2) ^\circ\text{C}$ in the dark and analyse it within 48 h.

Alternatively, stabilize the sample by the addition of sulfuric acid (6.2) or hydrochloric acid (6.3) to achieve a pH-value of ≤ 2 , store it at $(3 \pm 2) ^\circ\text{C}$ in the dark and analyse it within 8 d. Do not acidify the sample when the difference method is applied (see Annex A).

NOTE 1 The use of sulfuric acid as a stabilizer can cause precipitation of sulfate on the catalyst. Information can be obtained from the catalyst supplier.

NOTE 2 The use of sulfuric acid for sample preservation can lead to reduced TNb or DNb results if sulfuric acid is not added to the calibration standards.

In some cases, the loss of volatile substances can occur upon acidification of the sample with the stripping of carbon dioxide. If volatile organic compounds are suspected, carry out the TNb or DNb measurement without acidification and the TOC or DOC measurement in accordance with Annex A within 8 h of sampling.

Otherwise, store the acidified sample in polyethene bottles at $(-18 \pm 3) ^\circ\text{C}$ and analyse it within three months. Take into account the possible formation of irreversible and inhomogeneous precipitation (e.g. proteins) when adjusting the sample to ambient temperature.

Homogenize the sample and, if necessary, reduce the particle size with an efficient device (7.1) for the determination of TOC and TNb.

Prepare and measure the blank solution (6.6) and calibration solutions (6.8.4 and 6.9.4) in the same way as the sample solution.

10 Procedure

10.1 General

The analyser system shall fulfil the requirements described in Clause 8 for filtered samples and for homogenized samples containing particulate material.

Set up the high temperature combustion system (7.2) in accordance with the instrument manufacturer's instructions. Once the analytical system is stable, analysis can begin.

Perform the calibration as described in 10.2. Use the calibration function to determine the concentration of TOC or DOC and/or TNb or DNb in the sample.

Prepare and measure the blank solution (6.6), quality control samples (6.5) and calibration solutions (6.8 and 6.9) in the same way as the sample solution.

ISO 20236:2024(en)**10.2 Calibration**

When the analytical system is first started up, and at intervals afterwards, establish a calibration function in accordance with ISO 8466-1 for the measurement as follows.

Prepare the calibration solutions as described in [6.8](#), [6.9](#) and [Clause 9](#).

Analyse the calibration solutions in accordance with [Clause 10](#).

10.3 Validity check of the calibration function

Confirm the validity of the data obtained in accordance with [8.1](#) and calculate the regression function in accordance with ISO 8466-1.

Carry out this check in accordance with [8.1](#).

NOTE The data obtained from the system check (see [8.1](#)) can be used for this check.

Recalibrate, if necessary.

10.4 Measurement**10.4.1 General**

Adjust the sample to ambient temperature before analysis.

After establishing the calibration function, inject the treated sample (see [Clause 9](#)) into the analyser system and measure the samples as described in [10.1](#).

Determine the TOC or DOC and/or TNb or DNb concentrations of the samples in accordance with the instrument manufacturer's instructions.

Measure the samples and the blank solution ([6.6](#)), carrying out at least two injections from the same vial. Calculate the mean. At least two values shall be confirmed in accordance with [8.1](#).

Repeat the sample measurement, if necessary.

10.4.2 Determination**10.4.2.1 General**

When applying the determination of TOC and TNb, proceed in accordance with [10.4.2.2](#) and [10.4.2.4](#).

The instrumental specifications for TOC and TNb measurement shall be suitable for measuring samples containing particles. The use of an autosampler shall include a device to homogenize samples (e.g. magnetic stirrer) before injection.

If the calculated concentration of the analyte in the sample exceeds the calibration range, dilute the sample and re-analyse it.

If the calculated concentration of the analyte in the sample is below the lower calibration standard of the calibration range, establish a separate calibration function for the lower working range, if necessary.

If matrix interferences are suspected, dilute the sample, if possible, or use the method of standard addition to confirm the results.

Analyse a control solution at the beginning and at the end of each batch and after every 20th sample. The recovery of the checked concentration shall be within $\pm 10\%$ or ± 1 mg/l, whichever is greater.

Measure the blank solution ([6.6](#)) in the same manner.

ISO 20236:2024(en)**10.4.2.2 TOC determination (direct method)**

Acidify the homogenized sample to $\text{pH} \leq 2$ using hydrochloric acid ([6.8.5](#)) or sulfuric acid ([6.2](#)). Stir and purge the sample in order to remove inorganic carbon from the sample.

NOTE It is not necessary to stir drinking water samples.

Inject the TOC sample into the analyser.

Calculate the TOC results in accordance with [Clause 11](#).

10.4.2.3 DOC determination (direct method)

Acidify the filtered sample to $\text{pH} \leq 2$ using hydrochloric acid ([6.8.5](#)) or sulfuric acid ([6.2](#)). Purge the sample to remove inorganic carbon from the sample.

Inject the 0,45 μm membrane filtered (see [Clause 9](#)) sample into the analyser.

Calculate the DOC results in accordance with [Clause 11](#).

10.4.2.4 TNb determination

Inject the homogenized sample into the analyser for the determination of TNb.

Calculate the TNb results in accordance with [Clause 11](#).

10.4.2.5 DNb determination

Inject the 0,45 μm membrane filtered sample (see [Clause 9](#)) into the analyser for the determination of DNb.

Calculate the DNb results in accordance with [Clause 11](#).

10.4.2.6 Testing for particle processing control

For analyses of samples containing solids, the homogenization and recovery of suspended sample components (particle processing capability of the instrument) shall be verified using the cellulose test suspension ([6.8.6.1](#)) on each day of system operation.

Depending on the TOC concentration expected in the sample, use the cellulose test suspension ([6.8.6.1](#)) to prepare a control suspension. For example, proceed as follows for a 10 mg/l C solution.

- Stir the suspension with a magnetic stirrer until the suspension is homogeneous.
- Ultrasonic treatment shall not be used because it reduces the particle size.
- Pipette 10 ml of the homogenized cellulose test suspension ([6.8.6.1](#)) into a 100 ml volumetric flask and dilute to volume with water ([6.1](#)).
- The concentration of C in this solution is 10 mg/l.
- Prepare the suspension on the day of use. It is advisable to pipette the aliquot during the homogenizing of the suspension by stirring the suspension with a magnetic stirrer.
- Inject at least two samples of the control suspension into the analyser. It is advisable to withdraw an aliquot while stirring the sample. If an autosampler is used, samples shall be stirred during sampling. The mean value from a triple measurement shall be between 9,0 mg/l and 11,0 mg/l. The repeatability variation coefficient shall be $\leq 10\%$. For this test, particle size is important.

NOTE Optimal homogenization without particle segregation can be provided, for example, by an oscillating stirrer.

ISO 20236:2024(en)**11 Evaluation**

Calculate the mass concentration, ρ , in milligrams per litre in the sample using the mean values of the replicates (see [10.4.1](#)) obtained in accordance with ISO 8466-1.

Take into account all of the dilution steps.

12 Expression of results

The analysis results obtained when applying this document are subject to a measurement uncertainty that is to be considered in the interpretation of the results.

The results shall be reported in milligrams per litre to a maximum of two significant figures.

EXAMPLE	TOC (C)	12 mg/l
	TNb (N)	3,2 mg/l

13 Test report

The test report shall contain at least the following information:

- a) the test method used, together with a reference to this document, i.e. ISO 20236:2024;
- b) the identity of the sample;
- c) the expression of the results in accordance with [Clause 12](#);
- d) any deviation from this method;
- e) all circumstances that can have affected the results;
- f) the date of the test.

ISO 20236:2024(en)

Annex A
(normative)**Determination of TOC applying the difference method****A.1 General**

The general information of [Clauses 1 to 3](#) and the requirements of [Clauses 4 to 13](#) remain valid for the TOC determination applying the difference method.

The results according to this procedure cannot be ensured to be equivalent to those of the direct method.

In contrast to the direct determination of TOC or DOC (see [10.4.2.2](#) and [10.4.2.3](#)), the difference method always requires two measurements (see [A.2.3](#) and [Clause A.3](#)).

Transfer an aliquot of the sample into the TIC reactor of the analyser device. Carbonates and hydrogen carbonates react in an acid medium to CO_2 and will be transferred to the IR detector by means of carrier gas passed through and detected as TIC. In a further step, all of the carbon (TC) is determined by injecting another aliquot of the sample into the reactor. In this case, both organic and inorganic carbon compounds are converted to carbon dioxide.

To avoid possible carry over effects, the TIC measurement should be done first.

From both single results, the TOC is then calculated by the difference method (TOC is equal to TC minus TIC, see [Clause A.4](#)).

When using the differential method, the value of the TOC should be higher than the TIC, or at least of similar concentration.

The difference method is especially suitable for samples in which purgeable organic substances, such as benzene, toluene, cyclohexane and chloroform, are suspected, which may partly escape upon stripping.

In order to determine the TIC value, it is necessary to establish a calibration curve by analysing calibration solutions made from the TIC standard solution (see [A.2.1.4](#)).

A.2 TIC determination (difference method)**A.2.1 Reagents**

A.2.1.1 Sodium carbonate, Na_2CO_3 .

A.2.1.2 Sodium hydrogen carbonate, NaHCO_3 .

A.2.1.3 TIC stock standard solution, $\rho(\text{C}) = 1\,000\text{ mg/l}$.

Place 4,415 g of sodium carbonate ([A.2.1.1](#)), dried for 1 h at $(285 \pm 5)^\circ\text{C}$, in a 1 000 ml volumetric flask and add 3,500 g of sodium hydrogen carbonate ([A.2.1.2](#)) dried for 2 h over silica gel. Dissolve in water ([6.1](#)) and dilute to volume with water.

Store the solution in a polyethylene or a glass bottle. The solution is stable for several months if stored at $(3 \pm 2)^\circ\text{C}$.

ISO 20236:2024(en)**A.2.1.4 TIC standard solution, $\rho(\text{C}) = 100 \text{ mg/l}$.**

Pipette 100 ml of the TIC stock standard solution ([A.2.1.3](#)) into a 1 000 ml volumetric flask and dilute to volume with water ([6.1](#)).

Store the solution in a polyethene or a glass bottle. The solution is stable for several months if stored at $(3 \pm 2) ^\circ\text{C}$.

A.2.1.5 TIC calibration solutions.

Depending on the TIC concentration expected in the sample, use the TIC standard solution ([A.2.1.4](#)) to prepare 5 to 10 calibration solutions distributed over the expected working range as evenly as possible.

For example, proceed as follows for the range of 1,0 mg/l C to 10,0 mg/l C.

Pipette the following volumes into a series of 100 ml volumetric flasks: 1,0 ml, 2,0 ml, 3,0 ml, 4,0 ml, 5,0 ml, 6,0 ml, 7,0 ml, 8,0 ml, 9,0 ml or 10,0 ml of the TIC standard solution ([A.2.1.4](#)) and dilute to volume with water ([6.1](#)).

The concentrations of carbon in these calibration solutions are: 1,0 mg/l, 2,0 mg/l, 3,0 mg/l, 4,0 mg/l, 5,0 mg/l, 6,0 mg/l, 7,0 mg/l, 8,0 mg/l, 9,0 mg/l or 10,0 mg/l, respectively.

Prepare the calibration solutions on the day of use.

A.2.2 Sampling

See [Clause 9](#) and the following.

Use glass bottles for sampling.

Sample bottles shall be completely filled. Avoid transferring the samples to another container, if possible.

NOTE Any remaining air between bottle stopper and sample or the transfer of samples to another container can influence the TIC concentration.

The sample should be analysed on the day of sampling. If storage is required, refrigerate samples to approximately $(3 \pm 2) ^\circ\text{C}$ and analyse within 48 h.

A.2.3 TIC determination

Carry out a calibration in accordance with [10.2](#) using the TIC calibration solutions ([A.2.1.5](#)).

Analyse the sample applying the TIC device of the analyser in accordance with [Clause 10](#).

Use the data obtained to calculate the analytical result for TIC.

A.2.4 Evaluation of TIC

Calculate the TIC mass concentration, ρ , in milligrams per litre in the sample using the mean signal values of the injections from one vial (see [10.4.1](#)) obtained in accordance with ISO 8466-1.

Take into account all of the dilution steps.

Use the data obtained to calculate the analytical result for TIC.

A.3 TC determination (difference method)**A.3.1 Operation**

Apply the system check procedure in accordance with [Clause 9](#).

Apply the TOC calibration (see [10.2](#)).

ISO 20236:2024(en)

Inject the sample without acidification, stirring and purging (as described in [10.4.2.2](#)) into the TOC device of the analyser in accordance with [Clause 10](#).

Use the data obtained to calculate the analytical result for TC.

When applying the simultaneous determination of TC and TIC, in accordance with the instrument manufacturer's instructions, use an appropriate mixture of the 1 000 mg/l TOC and TIC stock solutions ([6.8.2](#) and [A.2.1.3](#)) for the preparation of standard and calibration solution of TC and TIC, distributed over the expected working range as evenly as possible.

A.3.2 Evaluation of TC

Calculate the TC mass concentration, ρ , in milligrams per litre in the sample using the mean values of the replicates (see [10.4.1](#)) obtained in accordance with ISO 8466-1.

Take into account all of the dilution steps.

Use the data obtained to calculate the analytical result for TC.

A.4 Evaluation of TOC (difference method)

Calculate the TOC concentration using TIC ([Clause A.2](#)) and TC ([Clause A.3](#)) results in accordance with [Formula \(A.1\)](#):

$$TOC = TC - TIC \quad (A.1)$$

A.5 Test report

The test report shall contain at least the following information:

- a) the difference method used, together with a reference to this document, i.e. ISO 20236:2024;
- b) the identity of the water sample;
- c) the expression of the results in accordance with [Clause 12](#);
- d) any deviation from this method;
- e) all circumstances that can have affect the results;
- f) the date of the test.

ISO 20236:2024(en)

Annex B

(informative)

Performance data for TOC or DOC, and TNb or DNb

An interlaboratory trial was organized in 2017 by AQS Baden-Wuerttemberg, Stuttgart, Germany and Hessian State Laboratory, Wiesbaden, Germany, along with participating laboratories from Belgium, Finland, France, Germany, Hungary, Italy, Japan, the Republic of Korea, Sweden, the Netherlands and the United Kingdom. The performance data met the requirements of ISO/TS 7013. The variety of instruments and other analytical conditions used conformed to the quality parameters specified in the method in this document. The statistical data evaluated according to ISO 5725-2^[1] are presented in [Tables B.1](#) and [B.2](#).

Table B.1 — Performance data TOC and DOC determination

Analyte	Matrix	l	n	o %	X mg/l	$\bar{\bar{X}}$ mg/l	η %	s_R mg/l	$C_{V,R}$ %	s_r mg/l	$C_{V,r}$ %
TOC difference method	Synthetic	11	43	15,7	8,9	7,18	80,76	1,363	19,0	0,240	3,3
	Drinking water	10	40	16,7		5,55		0,476	8,6	0,149	2,7
	Surface water	13	51	0,0		9,70		2,298	23,7	0,440	4,5
	Waste water 1	11	43	15,7		12,02		2,143	17,8	0,500	4,2
	Waste water 2	13	51	0,0		20,63		3,755	18,2	0,718	3,5
TOC direct	Synthetic	42	163	12,8	8,9	8,09	91,01	1,304	16,1	0,385	4,8
	Drinking water	44	171	8,6		5,58		0,467	8,4	0,141	2,5
	Surface water	46	178	4,3		9,39		1,353	14,4	0,451	4,8
	Waste water 1	44	170	6,6		13,61		2,366	17,4	0,656	4,8
	Waste water 2	42	161	13,0		22,92		2,569	11,2	0,554	2,4
DOC difference method ^a	Synthetic ^a	7	27	25,0		7,08		0,608	8,6	0,086	1,2
	Drinking water	9	36	0,0		6,66		1,807	27,1	0,51	7,7
	Surface water	9	36	0,0		9,29		2,144	23,1	0,469	5,0
	Waste water 1 ^a	7	28	22,2		11,04		1,065	9,6	0,385	3,5
	Waste water 2	9	36	0,0		20,29		3,816	18,8	0,492	2,4
DOC direct	Synthetic	43	169	8,6		6,74		0,542	8,0	0,174	2,6
	Drinking water	41	161	13,0		5,56		0,656	11,8	0,133	2,4
	Surface water	43	169	8,6		7,92		0,685	8,7	0,281	3,6
	Waste water 1	44	172	6,5		10,64		0,874	8,2	0,217	2,0
	Waste water 2	39	152	16,9		20,09		1,157	5,8	0,340	1,7

Key

l number of laboratories after outlier rejection

n number of individual test results after outlier rejection

o percentage of outliers

X assigned value

$\bar{\bar{X}}$ overall mean of results (without outliers)

η recovery rate

s_R reproducibility standard deviation

$C_{V,R}$ coefficient of variation of reproducibility

s_r repeatability standard deviation

$C_{V,r}$ coefficient of variation of repeatability

NOTE All samples (except drinking water matrix) contained microcrystalline cellulose.

^a For these data sets, the number of laboratories after outlier rejection was below eight due to the small number of participants applying the difference method. Therefore, the estimates for s_R and s_r have a higher uncertainty and should be used with care.

ISO 20236:2024(en)

Table B.2 — Performance data TNb and DNb determination

Analyte	Matrix	<i>l</i>	<i>n</i>	<i>o</i> %	<i>X</i> mg/l	$\bar{\bar{x}}$ mg/l	η %	<i>s_R</i> mg/l	<i>C_{V,R}</i> %	<i>s_r</i> mg/l	<i>C_{V,r}</i> %
TNb	Synthetic	44	173	2,3	3,3	3,27	98,5	0,282	8,6	0,073	2,2
	Drinking water	43	170	2,3		4,21		0,405	9,6	0,082	1,9
	Surface water	43	169	2,3		5,52		0,454	8,2	0,086	1,6
	Waste water 1	42	165	4,6		14,25		1,302	9,1	0,216	1,5
	Waste water 2	44	173	2,3		18,66		2,017	10,8	0,276	1,5
DNb	Synthetic	41	163	2,4		3,28		0,348	10,6	0,061	1,9
	Drinking water	41	163	2,4		4,18		0,408	9,8	0,075	1,8
	Surface water	41	162	2,4		5,43		0,501	9,2	0,094	1,7
	Waste water 1	41	163	0,0		14,03		1,373	9,8	0,221	1,6
	Waste water 2	37	146	9,9		18,29		2,100	11,5	0,190	1,0

For an explanation of the symbols, see [Table B.1](#).

NOTE All samples (except drinking water matrix) contained microcrystalline cellulose.

Annex C (informative)

Alternative detection techniques for TNb and DNb

C.1 General

In addition to chemiluminescence detection, other techniques are available for the quantification of NO. All these techniques are based on catalytic high temperature combustion as described in [Clause 7](#). Instead of the chemiluminescence detector mentioned in [7.2.3](#), electrochemical or infrared detection can be used. Two participants in the interlaboratory trial used an electrochemical detector (these data were not considered for the statistical evaluation for [Table B.2](#)) but no one used an IR detector.

It cannot be ensured that the results using alternative detection techniques are equivalent with those applying chemiluminescence detection.

C.2 Electrochemical detector

The NO molecules diffuse through a capillary, potentially through a subsequent filter, and then through a hydrophobic membrane to reach the surface of the sensing electrode. There, the molecules are immediately oxidized or reduced, consequently producing or consuming electrons, and thus generating an electric current.

C.3 IR detector

The NO is detected by means of a suitable infrared detector by measuring the absorption band of NO at a wavelength of 1 800 nm to 1 950 nm.

Bibliography

- [1] ISO 5725-2, *Accuracy (trueness and precision) of measurement methods and results — Part 2: Basic method for the determination of repeatability and reproducibility of a standard measurement method*
- [2] ISO/TS 7013, *Water quality — Guidance and requirements for designing an interlaboratory trial for validation of analytical methods*
- [3] ISO/TS 13530, *Water quality — Guidance on analytical quality control for chemical and physicochemical water analysis*



ICS 13.060.50

Price based on 19 pages

© ISO 2024
All rights reserved

iso.org

Dit document is door NEN onder licentie verstrekt aan: / This document has been supplied under license by NEN to:
Waterschap Limburg l.hermans@waterschaplimburg.nl 2025-01-07 13:05:26

Why do you have to pay for a standard?

Standards are agreements for and by the market. They are agreements about matters that concern everyone, e.g. about healthcare, financial services, safety and corporate social responsibility. Life would be a lot more complex without these agreements. Standards improve products, services and processes in the workplace, in our interactions with each other, and in society as a whole.

The agreements are made by interested parties. An interested party can be a producer, entrepreneur, service provider or user, but it can also be a government authority, a consumer association or a research organization. Broad support is important. The agreements are made with support from NEN, and they must not conflict with any other valid NEN standards.

NEN is a non-profit foundation. The services provided by NEN – from bringing parties together and making and recording the agreements, to providing assistance when applying the standards – cost money. That is why all the participating parties pay for the standardization process and you, as a user, pay for the standards, training courses and other products.

