

 ecocare

 ecoblue

 smart

# sauber

Lavadora Serie 5-7140 / I Serie 5-8140 / I Serie 5-1015 / I Manual de usuario  
Washing machine Serie 5-7140 / I Serie 5-8140 / I Serie 5-1015 / I User manual.

 efficient

 **sauber**

# CONTENIDO

---

## PRECUACIONES DE SEGURIDAD

|                                  |   |
|----------------------------------|---|
| ■ Precauciones de seguridad..... | 2 |
|----------------------------------|---|

## INSTALACIÓN

|                                 |    |
|---------------------------------|----|
| ■ Descripción del producto..... | 9  |
| ■ Instalación.....              | 10 |

## FUNCIONAMIENTO

|                                     |    |
|-------------------------------------|----|
| ■ Inicio rápido .....               | 13 |
| ■ Antes de cada lavado .....        | 15 |
| ■ Dispensador del detergente.....   | 16 |
| ■ Panel de control.....             | 17 |
| ■ Funciones.....                    | 18 |
| ■ Programas.....                    | 22 |
| ■ Tabla de programa de lavados..... | 23 |

## MANTENIMIENTO

|                                   |    |
|-----------------------------------|----|
| ■ Limpieza y cuidados .....       | 25 |
| ■ Resolución de problemas.....    | 28 |
| ■ Especificaciones técnicas ..... | 29 |
| ■ Ficha del producto.....         | 30 |

## PRECAUCIONES DE SEGURIDAD

---

### ■ Precauciones de seguridad

- Este aparato no está destinado a ser utilizado por personas (incluidos los niños) con una reducción de la capacidades físicas, sensoriales o mentales o la falta de experiencia y conocimientos, a menos que hayan sido supervisados o instruidos en el uso del aparato por una persona responsable de su seguridad.
- Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.
- Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante, su agente de servicio o personas cualificadas similares, a fin de evitar un peligro.
- Los nuevos juegos de mangueras suministrados con el aparato deben ser utilizados y los viejos no deben ser reutilizados.
- Las aberturas no deben estar obstruidas por una alfombra.
- Este aparato está destinado a ser utilizado en aplicaciones domésticas y similares, tales como:
  - Áreas de cocina del personal en tiendas, oficinas y otros entornos de trabajo;
  - Casas de campo;
  - Por clientes en hoteles, moteles y otros entornos de tipo residencial;
  - Ambientes de tipo cama y desayuno;
  - Áreas de uso común en bloques de pisos o en lavanderías.

## PRECAUCIONES DE SEGURIDAD

---

### ■ Precauciones de seguridad

Por su seguridad, debe seguir la información recogida en este manual para minimizar el riesgo de incendio, explosión, descarga eléctrica y para prevenir daños a la propiedad.

#### Explicación de símbolos:

##### Advertencia

Indica una situación potencialmente peligrosa que puede provocar la muerte o lesiones graves.

##### Precaución

Indica una situación potencialmente peligrosa que puede dar lugar a lesiones leves o daños a la propiedad y al medio ambiente.

##### Nota

Indica una situación potencialmente peligrosa que puede dar lugar a lesiones leves o menores.

##### Advertencia

#### Descarga eléctrica

- Si el cable de alimentación está dañado, debe ser sustituido por el fabricante, por un profesional o personas cualificadas similares para evitar cualquier peligro.

## PRECAUCIONES DE SEGURIDAD

---

- Los nuevos juegos de mangueras suministrados con el aparato son las que deben ser utilizadas, nunca se debe reutilizar un juego viejo de mangueras.
- Antes de realizar cualquier tipo de mantenimiento, desenchufe el aparato de la red eléctrica.
- Desenchufe siempre el aparato y cierre el suministro de agua después de su uso.
- Para garantizar su seguridad, el enchufe debe estar insertado en una toma de corriente con conexión a tierra de tres polos. Compruebe cuidadosamente y asegúrese de que su enchufe está correctamente conectado a tierra.
- Asegúrese de que el agua y los dispositivos eléctricos son conectados por un técnico cualificado de acuerdo con las instrucciones del fabricante y las normas de seguridad locales.

### Riesgos para los niños

- El aparato puede ser utilizado por niños de 8 años o más y por personas con capacidades físicas, sensoriales o mentales reducidas o con falta de experiencia y conocimientos, si se les ha supervisado o instruido sobre el uso del aparato de forma segura y si comprenden los peligros que conlleva. Los niños no deberán jugar con el aparato. La limpieza y el mantenimiento del usuario no serán realizados por niños sin supervisión.
- Los niños menores de 3 años deben ser supervisados para asegurarse de que no jueguen con el aparato.
- Los animales y los niños podrían subirse a la máquina. Revise la máquina antes de cada operación.
- Los niños deben ser supervisados para que no jueguen con el aparato.

## PRECAUCIONES DE SEGURIDAD

- La puerta de cristal puede estar muy caliente durante el funcionamiento, mantenga a los niños y a los animales domésticos lejos de la máquina durante el lavado en habitaciones muy húmedas, así como en las habitaciones con gas explosivo o cáustico.
- Retire todos los paquetes y pernos de transporte antes de utilizar el aparato. De lo contrario, pueden producirse daños graves.

## RIESGO DE EXPLOSIÓN

- No lavar o secar los artículos que han sido limpiados, lavados, remojados o rociados con sustancias combustibles o explosivos (como cera, aceite, pintura, gasolina, desengrasantes, disolventes de limpieza en seco). Esto puede resultar en un incendio o una explosión.
- No se debe utilizar la lavadora-secadora si se han utilizado productos químicos industriales para la limpieza.
- El aire de escape no debe descargarse en un conducto de humos que sirva para expulsar los gases de los aparatos que queman gas u otros combustibles.
- Antes de lavar a mano, enjuague bien los objetos a lavar a mano.

## ⓘ PRECAUCIÓN

### Cuando instale el producto

- Esta lavadora es sólo para uso interno.
- No está pensada para ser usada en interiores.
- Las aberturas no deben ser obstruidas por una alfombra.
- La lavadora no debe instalarse en cuartos de baño o habitaciones muy húmedas, así como en las habitaciones con gases explosivos o cáusticos.
- La lavadora con una sola válvula de entrada sólo puede ser conectada al suministro de agua fría. El producto con doble válvula de entrada debe ser conectado correctamente al suministro de agua caliente y de agua fría.
- El enchufe debe ser accesible después de la instalación.

## PRECAUCIONES DE SEGURIDAD

- El aparato no debe instalarse detrás de una puerta con cerradura, una puerta corrediza o una puerta con una bisagra en el lado opuesto al de la lavadora-secadora.
- El aparato no debe instalarse en un lugar húmedo.
- El aparato doméstico no está destinado a ser incorporado.
- Quitar todos los paquetes y pernos de transporte antes de usar el aparato! De lo contrario, pueden producirse daños graves.

### Riesgo de dañar el aparato

- Su producto es sólo para uso doméstico y sólo está diseñado para los textiles adecuados para el lavado a máquina.
  - No suba ni se siente en la cubierta superior de la máquina.
  - No se apoye en la puerta de la máquina.
  - Precauciones durante el manejo de la máquina:
1. Los pernos de transporte serán reinstalados en la máquina por una persona especializada.
  2. El agua acumulada será drenada fuera de la máquina.
  3. Maneje la máquina con cuidado. Nunca sostenga cada parte sobresaliente de la máquina mientras la levanta. La puerta de la máquina no puede ser utilizada como asa durante el transporte.
  4. Este aparato es pesado. Transportarlo con cuidado.
  5. Que no se introduzcan las manos en la bañera de extracción de agua corriente.
    - Por favor, no cierre la puerta con fuerzas excesivas. Si encuentra dificultades para cerrar la puerta, por favor, compruebe si la ropa está bien puesta o distribuida.
    - Está prohibido lavar las alfombras.

## PRECAUCIONES DE SEGURIDAD

---

### Funcionamiento del aparato

- Antes de usar la lavadora, el producto deberá ser calibrado.
- Antes de lavar la ropa por primera vez, el producto debe ser operado en una ronda de todos los procedimientos sin la ropa dentro.
- Los disolventes inflamables, explosivos o tóxicos están prohibidos. La gasolina y el alcohol, etc. no se utilizarán como detergentes. Por favor, seleccione sólo los detergentes adecuados para el lavado a máquina, especialmente para el tambor.
- Asegúrese de que todos los bolsillos estén vacíos. Los artículos afilados y rígidos como monedas, broches, clavos, tornillos o piedras, etc. pueden causar serios daños a esta máquina.
- Por favor, compruebe que el agua del interior del tambor se ha vaciado antes de abrir su puerta. Por favor no abra la puerta si hay agua visible.
- Tenga cuidado de no quemarse cuando el producto drene el agua caliente de lavado.
- Después de que el programa se complete, por favor espere dos minutos para abrir la puerta (algún modelo).
- Nunca rellene el agua a mano durante el lavado.
- Si es inevitable que las telas que contienen aceite vegetal o de cocina o que han sido contaminadas por productos para el cuidado del cabello. se coloquen en una secadora, deben ser lavadas primero en agua caliente con detergente extra, esto reducirá, pero no eliminará, el peligro.
- Se debe proporcionar una ventilación adecuada para evitar el reflujo de gases hacia la habitación desde los aparatos que queman otros combustibles, incluyendo las chimeneas abiertas.
- No se deben secar los artículos sin lavar en el aparato.
- Los artículos que se hayan ensuciado con sustancias como aceite de cocina, acetona, alcohol, gasolina, queroseno, quitamanchas, trementina, ceras y eliminadores de cera deben lavarse en caliente con una cantidad extra de detergente antes de utilizadas en el aparato.

## PRECAUCIONES DE SEGURIDAD

- Los artículos como la gomaespuma (espuma de látex), los gorros de ducha, los textiles impermeables, los artículos con respaldo de goma y la ropa o las almohadas equipadas con almohadillas de gomaespuma no deben utilizarse en la máquina.
- Deben utilizarse suavizantes de ropa, o productos similares, según lo especificado en las instrucciones del suavizante.
- La máquina cuya tapa puede abrirse durante la extracción de agua, que tarda 15s o más en detener completamente la tina de la cámara de extracción de agua.
- La parte final del ciclo de una lavadora-secadora se produce sin calor (ciclo de enfriamiento) para garantizar que los artículos se dejen a una temperatura que asegure que no se dañen.
- Retire todos los objetos de los bolsillos, como los encendedores y los fósforos, antes de usar el aparato.

**ADVERTENCIA:** Nunca detenga una lavadora-secadora antes del final del ciclo de secado a menos que todos los artículos se quiten rápidamente y se extiendan para que el calor se disipe.

### Disposición de eliminación




**ELIMINACIÓN:** No elimine este producto como residuos municipales sin clasificar. Es necesario recoger estos residuos por separado para un tratamiento especial.

En base a la directiva europea 2012/19/UE de residuos de aparatos eléctricos y electrónicos (RAEE), los electrodomésticos no pueden ser arrojados en los contenedores municipales habituales; tienen que ser recogidos selectivamente para optimizar la recuperación y reciclado de los componentes y materiales que los constituyan y reducir el impacto en la salud humana y el medio ambiente.

El símbolo del cubo de basura tachado se marca sobre todos los productos para recordar al consumidor la obligación de separarlos para la recogida selectiva. El consumidor debe contactar con la autoridad local o con el vendedor para informarse en relación a la correcta eliminación de su electrodoméstico.

# INSTALACIÓN

## ■ Descripción del producto

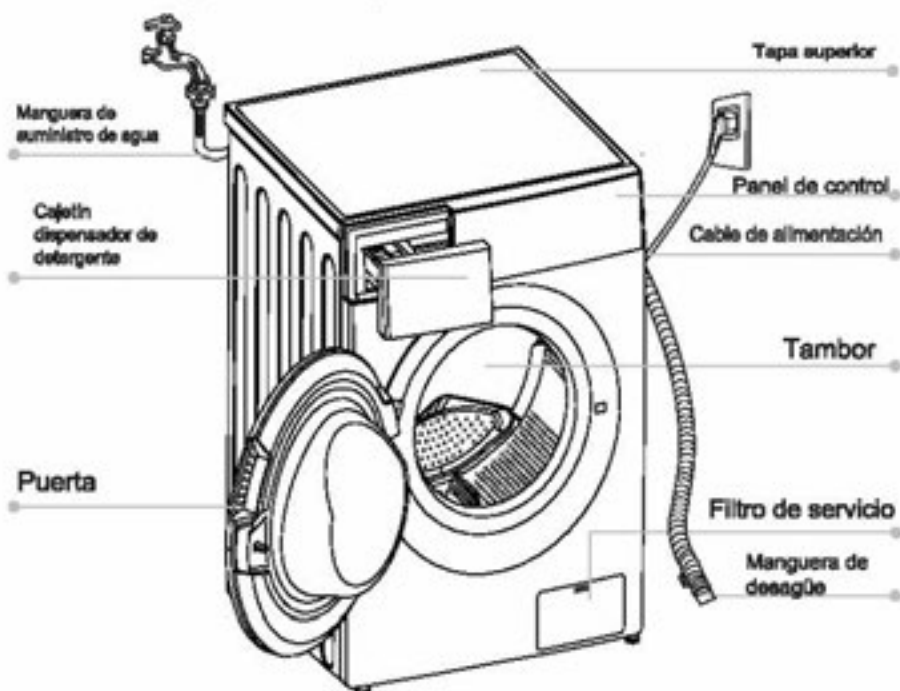

### Nota

- El dibujo es sólo para referencia, por favor refiérase siempre al producto real como estándar.

## Accesorios



Tapones de sujeción para el transporte

Tubo de admisión de agua fría

Manual de instrucciones

# INSTALACIÓN

## ■ Instalación

### Área de instalación

#### ⚠ Advertencia

- La estabilidad es muy importante para evitar que el producto se desplace.
- Asegúrese de que el producto no se apoye en el cable de alimentación.



Antes de instalar la máquina, se debe elegir el lugar de instalación que se caracterice por:

1. Una superficie rígida, seca y nivelada
2. Que no de la luz solar directa
3. Que exista suficiente ventilación
4. Que la temperatura ambiente sea superior a 0°C
5. Que esté alejado de fuentes de calor como el carbón o el gas.



### Desembalar la lavadora

#### ⚠ Advertencia

- El material de embalaje (por ejemplo, películas, espuma de poliestireno) puede ser peligroso para los niños.
- Existe riesgo de asfixia. Mantenga todos los embalajes alejados de los niños.



1. Retire la caja de cartón y el embalaje de espuma de poliestireno.
2. Levante la lavadora y retire la empaquetadura de la base. Asegúrese de quitar la espuma triangular pequeña con la inferior unida. De lo contrario, coloque la unidad con la superficie lateral, luego retire la espuma pequeña de la parte inferior de la unidad manualmente.
3. Retire la cinta que sujeta el cable de alimentación y la manguera de drenaje.
4. Retire la manguera de entrada del tambor.


### Retire el embalaje de la lavadora

#### ⚠ Advertencia

- El material de embalaje (por ejemplo, películas, espuma de poliestireno) puede ser peligroso para los niños.
- ¡Existe el riesgo de asfixia! Mantenga todo el embalaje lejos del alcance de los niños.

Siga los siguientes pasos para quitar los tornillos:

1. Afloje los 4 pernos con una llave y luego retírelos.
2. Tape los orificios con tapones para orificios de transporte.
3. Conserve los pernos de transporte adecuadamente para su uso futuro.

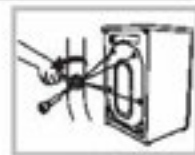

V.2


# INSTALACIÓN

## Nivelar la lavadora

### ⚠ Advertencia

- Las tuercas de seguridad en los cuatro pies deben atomillarse firmemente contra la carcasa.

- Compruebe si las patas están bien sujetas al cajón. Si no es así, por favor gírelas a su posición original y apriete las tuercas.
- Afije la tuerca de seguridad, gire las patas hasta que hagan contacto con el suelo.
- Ajuste las patas y fíjelas con una llave, compruebe que la máquina está estable.

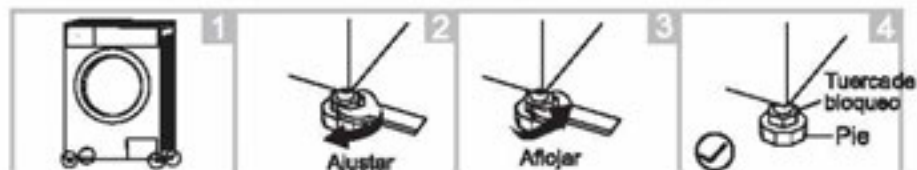


## Conectar la manguera al suministro de agua

### ⚠ Advertencia

- Para evitar fugas o daños causados por el agua, siga las instrucciones de este manual.
- No doble, apriete, modifique o corte la manguera de entrada de agua.
- Para el modelo que incorpora la válvula caliente, hay que conectarse al grifo de agua caliente con la manguera de suministro de agua caliente. El consumo de energía se reducirá automáticamente para algunos programas.


Conecte el tubo de entrada como se indica. Hay dos maneras de conectar el tubo de entrada.

Conexión entre el grifo de tomillo y la manguera de entrada.

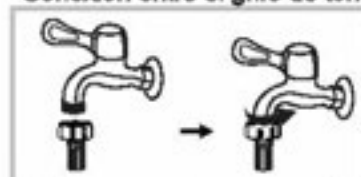

Grifo con rosca y manguera de entrada

Conecte el otro extremo del tubo de entrada a la válvula de entrada en la parte posterior del producto y fije el tubo firmemente en el sentido de las agujas del reloj.

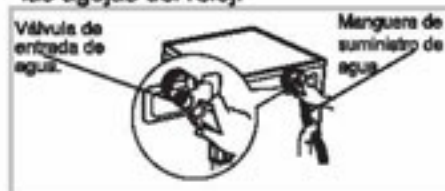

# INSTALACIÓN

## Manguera de desagüe



### ⚠ Atención

- No doble o prolongue la manguera de drenaje.
- Coloque la manguera de desagüe correctamente, de lo contrario podría dañarse por la fuga de agua.

Existen dos formas para colocar la manguera de desagüe



1. Conectándolo al desagüe

2. Conectándolo al tubo de desagüe de la cañería de desagüe.

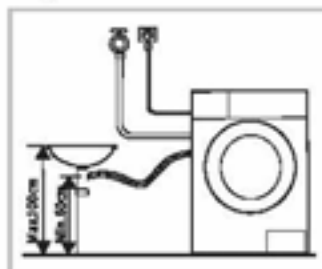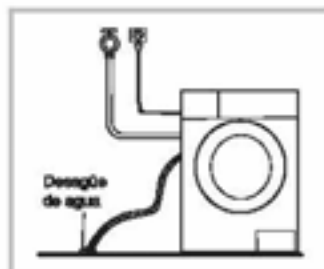

### 🔧 Nota

- Si la máquina tiene un soporte para la manguera de desagüe, por favor instálela de la siguiente manera:

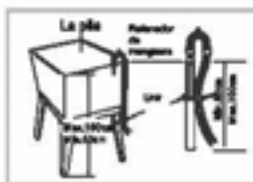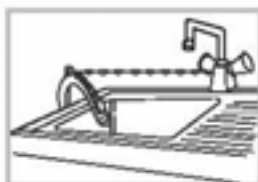

### ⚠ Advertencia!

- Cuando instale la manguera de desagüe, fíjela correctamente con una cuerda.
- Si la manguera de desagüe es demasiado larga, no la fuerce a meter en la lavadora ya que causará ruidos anormales.

# FUNCIONAMIENTO

## ■ Inicio Rápido

### ① ¡Atención!

- Antes de lavar, por favor, asegúrese de que está instalado correctamente.
- Antes de lavar la ropa por primera vez, la lavadora debe operar una vez en todos los programas sin ropa.

### 🔧 Calibración

Se recomienda calibrar la lavadora para que le sirva mejor.

1- Vaciar la lavadora;

2- Enchúfala;

3- Encienda la lavadora y pulse "Centrifug." e "Inicio diferido" al mismo tiempo dentro de los 10 segundos y luego se muestra "t19".

Pulse ▷|| para poner en marcha la lavadora y espere hasta que aparezca la pantalla "meca".

## 1. Antes de lavado



Enchufe



Abra el grifo



Cargue la ropa



Cierre la puerta



Añada el detergente


### 🔧 Note!

- En el caso de que añada detergente en "Pre Lavado", debe seleccionar un programa que contenga esta opción.

# FUNCIONAMIENTO

---

## 2. Lavado

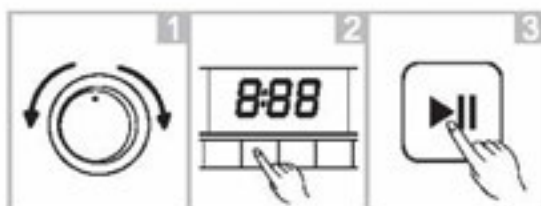

Seleccione programa

Seleccione función o por defecto

Pulse Iniciar



### Nota

- Si se selecciona el valor predeterminado, se puede omitir el paso 3.

## 3. Después del lavado

Señal sonora o "Fin" en pantalla.

# FUNCIONAMIENTO

## ■ Antes de cada lavado

- La condición de funcionamiento de la lavadora debe ser entre 0-40°C. Si se utiliza -0°C, la válvula de entrada y el sistema de drenaje pueden estar dañados. Si la máquina se coloca en condiciones de 0°C o menos, entonces debe ser transferida a la temperatura ambiente normal para asegurar que la manguera de suministro de agua y la manguera de drenaje no se congelen antes de su uso.
- Por favor, compruebe las etiquetas y las explicaciones de uso del detergente antes de lavar. Utilice un detergente que no produzca espuma o que produzca poca espuma y que sea adecuado para un lavado adecuado.



Revise la etiqueta




Saque los objetos de los bolsillos



Anude las tiras largas, las cremalleras o los botones



Ponga las cosas más pequeñas en fundas para lavado

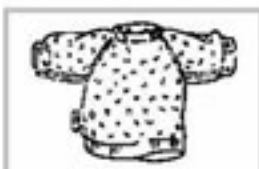

Ponga del revés las prendas con tejidos más densos o tejidos que se puedan desprender fácilmente.



Separe la ropa de diferentes texturas


### ⚠ ¡Atención!

- Al lavar una sola prenda, puede fácilmente causar excentricidad y activar la alarma debido a un gran desequilibrio. Por lo tanto se sugiere añadir una o dos ropas más para ser lavadas juntas, de modo que el drenaje pueda hacerse sin problemas.
- No lavar la ropa en contacto con queroseno, gasolina, alcohol y otros materiales inflamables.

# FUNCIONAMIENTO

## ■ Dispensador del detergente

- I Detergente de prelavado o detergente en polvo
- II Detergente de lavado principal
- ☼ Suavizante

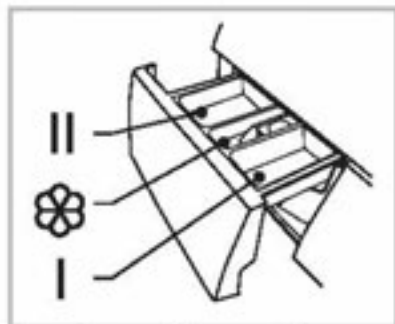

Saque el dispensador

### ⓘ ¡Atención!

- En el caso de que añada detergente en "Prelavado" (I), debe seleccionar un programa que contenga esta opción.

| Programa                | I | II | ☼ | Programa          | I | II | ☼ |
|-------------------------|---|----|---|-------------------|---|----|---|
| Algodón                 | ○ | ●  | ○ | Solo centrifugado |   |    |   |
| Sintéticos              | ○ | ●  | ○ | Ropa Voluminosa   | ○ | ●  | ○ |
| Mix                     | ○ | ●  | ○ | Lana              |   | ●  | ○ |
| Ropa de deporte         | ○ | ●  | ○ | Express 15'       |   | ●  | ○ |
| Ropa bebé               | ○ | ●  | ○ | Rápido 45'        | ○ | ●  | ○ |
| Vaqueros                | ○ | ●  | ○ | 20°C              |   | ●  | ○ |
| Aclarado y centrifugado |   |    | ○ | Intensivo         |   | ●  | ○ |
| ECO 40-60               |   |    |   |                   |   |    |   |

● Obligatorio


○ Opcional

### 📌 Nota

- En cuanto al detergente o aditivo aglomerado o enroscado, antes de verterlo en la caja de detergente, se sugiere utilizar un poco de agua para diluirlo, a fin de evitar que la entrada de la caja de detergente se bloquee y se desborde mientras se llena de agua.
- Elija el tipo de detergente adecuado para las distintas temperaturas de lavado para obtener el mejor rendimiento de lavado con un menor consumo de agua y energía.

# FUNCIONAMIENTO

## ■ Panel de control

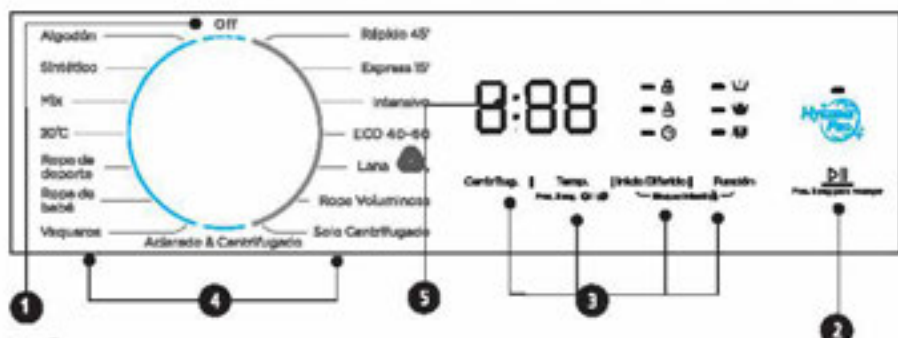

### NOTA

- La tabla es sólo de referencia. Por favor, refiérase al producto real como estándar.

#### 1 Off

La lavadora se apaga

#### 3 Ajustes

Esto le permite seleccionar una función adicional, la función escogida se iluminará cuando se seleccione.

#### 5 Pantalla


La pantalla muestra los ajustes, el tiempo restante estimado, las opciones y los mensajes de estado de la lavadora. La pantalla permanecerá encendida durante todo el ciclo.

#### 2 Inicio/Pausa

Presione el botón para iniciar o pausar el ciclo de lavado

#### 4 Programas

Es aconsejable que el usuario lave la ropa de acuerdo al programa adecuado

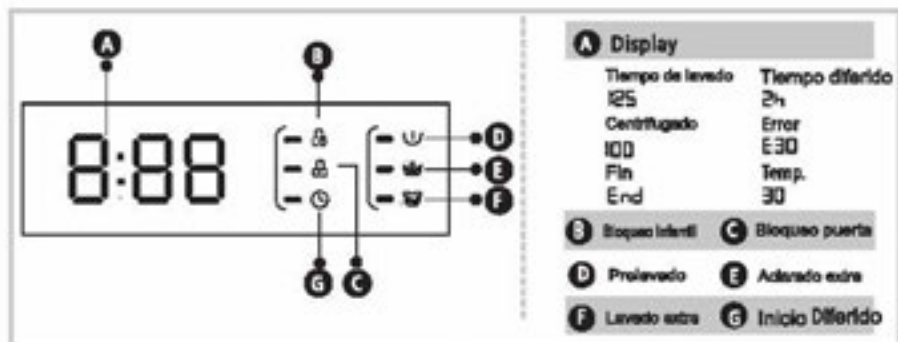

# FUNCIONAMIENTO

## ■ Funciones



### Pre lavado

La función de pre lavado puede obtener un lavado extra antes del lavado principal, es adecuado para lavar el polvo, en este caso, es necesario poner detergente en el caso (I) cuando se seleccione.



### Aclarado Extra

Este programa realizará un aclarado extra una vez que se seleccione.



### Lavado extra

La ropa muy sucia puede elegirlo, seleccionarlo puede aumentar el tiempo y la intensidad de lavado para aumentar el efecto del lavado.



### Hygiene Function

Esta función se activa automáticamente en el programa, cuando la luz de Hygiene Function está encendida, la función de autolimpieza se activará automáticamente durante cada ciclo de lavado.

Hygiene Function mantendrá su ropa siempre limpia.

| Programa                | Función   |                |               | Programa          | Función   |                |               |
|-------------------------|-----------|----------------|---------------|-------------------|-----------|----------------|---------------|
|                         | Prelavado | Aclarado extra | Lavado fuerte |                   | Prelavado | Aclarado extra | Lavado fuerte |
| Algodón                 | ○         | ○              | ○             | Solo centrifugado |           |                |               |
| Sintético               | ○         | ○              | ○             | Ropa Voluminosa   | ○         | ○              | ○             |
| Mix                     | ○         | ○              | ○             | Lana              |           | ○              |               |
| 20°C                    |           | ○              |               | ECO 40-60         |           |                |               |
| Ropa de deporte         | ○         | ○              |               | Intensivo         |           |                |               |
| Ropa bebé               | ○         | ○              | ○             | Express 15'       |           |                |               |
| Vaqueros                | ○         | ○              |               | Rápido 45'        | ○         | ○              |               |
| Aclarado y centrifugado |           | ○              |               |                   |           |                |               |

○ Opcional

# FUNCIONAMIENTO

Centrifugado

## Centrifugado

Presione el botón para cambiar la velocidad de lavado. 1400 :

0-400-600-800-1000-1200-1400 1500:

0-400-600-800-1000-1200-1400-1500

| Programa               | Velocidad por defecto (rpm) |      | Programa          | Velocidad por defecto (rpm) |      |
|------------------------|-----------------------------|------|-------------------|-----------------------------|------|
|                        | 1400                        | 1500 |                   | 1400                        | 1500 |
| Algodón                | 1400                        | 1500 | Solo centrifugado | 1000                        | 1000 |
| Sintético              | 1200                        | 1200 | Ropa Voluminosa   | 1000                        | 1000 |
| Mix                    | 800                         | 800  | Lana              | 600                         | 600  |
| 20°C                   | 1000                        | 1000 | ECO 40-60         | --                          | --   |
| Ropa de deporte        | 800                         | 800  | Intensivo         | 800                         | 800  |
| Ropa bebé              | 800                         | 800  | Express 15'       | 800                         | 800  |
| Vaqueros               | 1000                        | 1000 | Rápido 45'        | 800                         | 800  |
| Acinado y centrifugado | 1000                        | 1000 |                   |                             |      |

Temp.

## Temp.

Presiona el botón para regular la temperatura (Frio,20°C,30°C, 40°C,60°C,90°C)

Inicio Diferido

## Diferido

Para seleccionar esta función

1. Seleccione un programa
2. Presione el botón de inicio diferido para elegir el tiempo (el tiempo de retraso es de 0-24 H.)
3. Pulse [Inicio/Pausa] para iniciar la operación de inicio diferido



Elja el programa



Seleccione el tiempo



Inicio

Cancelar la función de inicio diferido:

Pulse el botón [Inicio diferido] hasta que la pantalla esté en 0H. Debe pulsarse antes de iniciar el programa. Si el programa ya se ha iniciado, debería apagar la máquina para reiniciar el programa.

## ⚠ Precaución

- Si hay alguna interrupción en el suministro de energía mientras la máquina está funcionando, una memoria especial almacena el programa seleccionado y cuando se reinicia la energía, al pulsar el botón [▶||] el programa continuará.

# FUNCIONAMIENTO

## ■ Bloqueo infantil



**Bloqueo infantil.**

Para evitar una mala operación por parte de los niños



Elegir programa



Inicio



Presione [Inicio diferido] y [Función] 3 segundos hasta que oiga un pitido.

### ⚠ Precaución

- Presione el botón dos 3seg. también para ser liberado la función.
- El "Bloqueo infantil" bloqueará todos los botones excepto [ Off ].
- El bloqueo infantil permanecerá efectivo cuando se reanude la alimentación .



**Recarga**

Esta operación puede ser ejecutada durante el progreso del lavado.

Cuando el tambor aún está rodando y hay una gran cantidad de agua con alta temperatura en el tambor. El estado es inseguro y la puerta no puede abrirse con fuerza. Para pulsar [Inicio/Pausa] durante 3 seg. para recargar, y empezar a añadir la ropa en la función intermedia. Por favor, siga los pasos que se indican a continuación :

- 1.Espere hasta que el tambor deje de girar.
- 2.La cerradura de la puerta está desbloqueada.
- 3.Cierre la puerta cuando la ropa esté cargada y pulse el botón [▶||]



Pulse [▶||] 3seg.



Cargue la ropa



Inicio

### ⚠ Precaución

- No use la función de recarga cuando el nivel del agua sobre el borde de la bañera o la temperatura sea más alta.

# FUNCIONES

---



Silenciar los avisos



Inicio



Pulse [Temp.] durante 3 segundos, el pitido pasará a mute.

Para activar la función de timbre, pulse los dos botones de nuevo durante 3 segundos. El ajuste se mantendrá hasta el próximo reinicio.

## Precaución

- Después de silenciar la función del timbre, los sonidos ya no se activarán.

# FUNCIONES

## ■ Programas

Programas disponibles de acuerdo al tipo de lavadora

| Programas                      |                                                                                                                                                                                                                                 |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Algodón</b>                 | Tejidos resistentes, tejidos resistentes al calor hechos de algodón o lino.                                                                                                                                                     |
| <b>Sintético</b>               | Lavar artículos sintéticos, por ejemplo: camisas, abrigos, mezclas. Mientras se lavan los textiles de punto, la cantidad de detergente se reducirá debido a su composición de hilos sueltos y a la fácil aparición de burbujas. |
| <b>Mix</b>                     | Carga mixta consistente en textiles de algodón y sintéticos.                                                                                                                                                                    |
| <b>20°C</b>                    | 20°C por defecto, puede elegir agua fría.                                                                                                                                                                                       |
| <b>Ropa de deporte</b>         | Lavar la ropa activa.                                                                                                                                                                                                           |
| <b>Ropa bebé</b>               | Lavar la ropa del bebé, puede hacer que el bebé se vista más limpio, y hacer que el enjuague funcione mejor para proteger la piel del bebé.                                                                                     |
| <b>Vaqueros</b>                | Especialmente para vaqueros                                                                                                                                                                                                     |
| <b>Aclarado y centrifugado</b> | Enjuague extra con agua y centrifugado                                                                                                                                                                                          |
| <b>Solo centrifugado</b>       | Centrifugado extra con velocidad seleccionable                                                                                                                                                                                  |
| <b>Ropa Voluminosa</b>         | Este programa está especialmente diseñado para lavar abrigos de edredón.                                                                                                                                                        |
| <b>Lana</b>                    | Lana lavable a mano o a máquina o textiles de lana enriquecida. Programa de lavado especialmente suave para evitar el encogimiento, pausas de programa más largas (los textiles descansan en el licor de lavado).               |
| <b>ECO 40-60</b>               | Por defecto 40°C, no seleccionable, lava la ropa entre los 40°C - 60°C.                                                                                                                                                         |
| <b>Intensivo</b>               | Para los textiles delicados y lavables, por ejemplo de seda, satén, fibras sintéticas o tejidos mixtos.                                                                                                                         |
| <b>Express 15'</b>             | Programa extra corto, adecuado para lavar la ropa ligeramente sucia o una pequeña cantidad de ropa.                                                                                                                             |
| <b>Rápido 45'</b>              | Lavar pocas y no muy sucias ropas rápidamente.                                                                                                                                                                                  |

# FUNCIONES

## ■ Programas

Modelo: Serie 5-7140/Serie 5-7140 I /Serie 5-1015/Serie 5-1015 I

| Programa                | Carga(kg) |      | Temp.(°C) | Tiempo por defecto |      |
|-------------------------|-----------|------|-----------|--------------------|------|
|                         | 7.0       | 10.0 |           | 7.0                | 10.0 |
| Algodón                 | 7.0       | 10.0 | 40        | 3:49               | 3:49 |
| Sintéticos              | 3.5       | 5.0  | 40        | 3:28               | 3:28 |
| Mix                     | 7.0       | 10.0 | 40        | 1:30               | 1:30 |
| 20°C                    | 3.5       | 5.0  | 20        | 1:11               | 1:11 |
| Ropa de deporte         | 3.5       | 5.0  | 40        | 1:16               | 1:16 |
| Ropa bebé               | 7.0       | 10.0 | 60        | 1:52               | 1:52 |
| Vaqueros                | 7.0       | 10.0 | 60        | 1:56               | 1:56 |
| Aclarado y centrifugado | 7.0       | 10.0 | —         | 0:30               | 0:30 |
| Solo centrifugado       | 7.0       | 10.0 | —         | 0:12               | 0:12 |
| Ropa Voluminosa         | 7.0       | 10.0 | 40        | 1:48               | 1:48 |
| Lana                    | 2.0       | 2.0  | 40        | 1:07               | 1:07 |
| ECO 40-60               | 2.0       | 2.0  | —         | 3:13               | 3:53 |
| Intensivo               | 7.0       | 10.0 | 40        | 3:48               | 3:48 |
| Express 15'             | 2.0       | 2.0  | Cold      | 0:15               | 0:15 |
| Rápido 45'              | 2.0       | 2.0  | 40        | 0:45               | 0:45 |

- Con respecto a la EN 60456:2016 Con (EU)No.1061/2010, La clase de eficiencia energética de la UE es: A+++

Programa de prueba de energía: Intensivo 60/40 °C;

Velocidad: La velocidad más alta; Otra como la predeterminada. La mitad de la carga para la máquina de 7.0Kg:3.5Kg.

Con respecto a EN 60456:2016/prA2019 Con (EU)2019/2014, (EU)2019/2023, La clase de eficiencia energética de la UE es: B

Programa de prueba de energía: ECO 40-60. Otro como el predeterminado.

Media carga para una máquina de 7.0Kg:3.5Kg.

Un cuarto de carga para una máquina de 7.0Kg:2.0Kg.

### 📌 ¡Nota!

- Los parámetros de esta tabla son sólo para referencia del usuario. Los parámetros reales pueden ser diferentes a los de la tabla anterior.

# FUNCIONES

## ■ Programas

Modelo: Serie 5-8140 Serie 5-8140 I

| Programa                | Carga(kg) | Temp.(°C) | Tiempo por defecto |
|-------------------------|-----------|-----------|--------------------|
|                         | 8.0       |           | 8.0                |
| Algodón                 | 8.0       | 40        | 3:49               |
| Sintéticos              | 4.0       | 40        | 3:28               |
| Mix                     | 8.0       | 40        | 1:30               |
| 20°C                    | 4.0       | 20        | 1:11               |
| Ropa de deporte         | 4.0       | 40        | 1:16               |
| Ropa bebé               | 8.0       | 60        | 1:52               |
| Vaqueros                | 8.0       | 60        | 1:56               |
| Aclarado y centrifugado | 8.0       | —         | 0:30               |
| Solo centrifugado       | 8.0       | —         | 0:12               |
| Ropa Voluminosa         | 8.0       | 40        | 1:48               |
| Lana                    | 2.0       | 40        | 1:07               |
| ECO 40-60               | 2.0       | —         | 3:32               |
| Intensivo               | 8.0       | 40        | 3:48               |
| Express 15'             | 2.0       | Cold      | 0:15               |
| Rápido 45'              | 2.0       | 40        | 0:45               |

- Con respecto a la EN 60456:2016 Con (EU)No.1061/2010, La clase de eficiencia energética de la UE es: A+++

Programa de prueba de energía: Intensivo 60/40 °C;

Velocidad: La velocidad más alta; Otra como la predeterminada. La mitad de la carga para la máquina de 8.0Kg: 4.0Kg.

Con respecto a EN 60456:2016/prA2019 Con (EU)2019/2014, (EU)2019/2023, La clase de eficiencia energética de la UE es: B

Programa de prueba de energía: ECO 40-60. Otro como el predeterminado.

Media carga para una máquina de 8.0Kg: 4.0Kg.

Un cuarto de carga para una máquina de 8.0Kg: 2.0Kg.

### 📌 ¡Nota!

- Los parámetros de esta tabla son sólo para referencia del usuario. Los parámetros reales pueden ser diferentes a los de la tabla anterior.

# MANTENIMIENTO

## ■ Limpieza y cuidado

### ⚠ Advertencia!

- Antes de empezar el mantenimiento, desenchufe la máquina y cierre el grifo.

### Limpiar el armario de la lavadora

- El mantenimiento adecuado de la lavadora puede prolongar su vida útil.
- La superficie puede ser limpiada con detergentes neutros no abrasivos cuando sea necesario.
- Si hay algún desbordamiento de agua, use el paño húmedo para limpiarlo inmediatamente.
- No use ningún objeto punzante ni golpee la lavadora.



### 📌 Nota

- No utilice ácido fórmico ni disolventes diluidos o equivalentes como el alcohol o los productos químicos.

### Limpieza del tambor interno

Limpie inmediatamente con detergente sin cloro el óxido que dejan en el tambor los objetos metálicos. No utilice nunca un estropajo de aluminio.

### 📌 Nota

- No coloque ropa en la lavadora durante la limpieza del tambor.

### Limpieza de la junta de la puerta y el cristal

Limpie el cristal y la junta después de cada lavado para quitar la pelusa y las manchas. Si la pelusa se acumula puede causar fugas. Retire las monedas, botones u otros objetos después de cada lavado.



# MANTENIMIENTO

## Limpieza del filtro y de la bomba de desagüe

### Nota

- El filtro de entrada debe ser limpiado si hay menos agua.

### Limpieza del filtro del grifo:

1. Cierre el grifo
2. Extraiga el tubo de admisión de agua
3. Limpie el filtro con agua
4. Vuelva a conectar la tubería de admisión



### Limpieza del filtro de la lavadora:

1. Desenrosque el tubo de admisión de la parte trasera.
2. Extraiga el filtro con unas pinzas largas y vuelva a colocarlo en su sitio después de limpiarlo.
3. Use un cepillo para limpiar el filtro
4. Reconecte la tubería de entrada.



### Nota

- Si el cepillo no está limpio, puede sacar el filtro y limpiarlo por separado.
- Reconecte, vuelva a abrir el grifo.

## Limpieza del cajetín de detergente

1. Presione hacia abajo la flecha que se encuentra en la cubierta del suavizante dentro del cajón dispensador.
2. Levante el clip y saque la tapa de suavizante. Lave todas las ranuras con agua.
3. Vuelva a colocar la cubierta del suavizante y empuje el cajón hasta su posición.



Presione el dispensador hacia abajo pulsando A



Limpia el dispensador bajo el agua



Limpie el interior con un cepillo de dientes



Inserte de nuevo el dispensador

### Nota


No utilice alcohol, disolventes o productos químicos para limpiar la lavadora.

# MANTENIMIENTO

## Limpieza del filtro de la bomba de desagüe

### ⚠ Advertencia

- ¡Tenga cuidado con el agua caliente!
- Deje que la solución de detergente se enfríe.
- Desenchufe la máquina para evitar una descarga eléctrica antes de limpiar.
- En el filtro de la bomba de desagüe pueden entrar hilos y pequeños objetos procedentes del lavado.
- Limpie el filtro periódicamente para asegurar el funcionamiento normal de la lavadora.

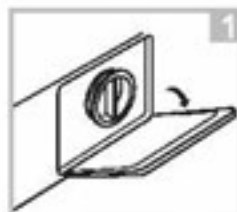

Abra la tapa inferior de la cubierta



Gire 90°C y esque la manguera de desagüe de emergencia, y quite la tapa de la manguera




Cuando deje de correr el agua, reajuste la manguera de desagüe



Abra el filtro girando en el sentido contrario a las agujas del reloj



Elimine cualquier objeto extraño

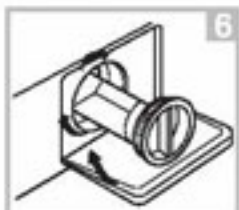

Cierre la tapa inferior

### ⚠ Atención

- Asegúrese de que la tapa de la válvula y la manguera de desagüe de emergencia se reinstalen correctamente, las placas de la tapa deben insertarse alineadas con las placas del orificio, de lo contrario el agua puede filtrarse.
- Algunas máquinas no tienen manguera de drenaje de emergencia, así que el paso 2 y el paso 3 pueden saltarse. Gire la tapa inferior de la cubierta directamente para hacer que el agua corra hacia la cuenca.
- Cuando el aparato está en uso y dependiendo del programa seleccionado puede haber agua caliente en la bomba. Nunca quite la tapa de la bomba durante un ciclo de lavado, espere siempre hasta que el aparato haya terminado el ciclo y esté vacío. Cuando vuelva a colocar la tapa, asegúrese de que esté correctamente cerrada.

# MANTENIMIENTO

## ■ Resolución de problemas

Si la máquina no funciona o se detiene durante el funcionamiento. Primero trate de encontrar una solución al problema, si no consiguiera solucionarlo, póngase en contacto con el centro de servicio.

| Descripción                               | Razón                                                                                                                                    | Solución                                                                                                               |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| La lavadora no se pone en marcha          | La puerta no está bien cerrada                                                                                                           | Cierre la puerta y compruebe que la ropa no está atascada.                                                             |
| La puerta no se abre                      | Se ha activado el bloqueo de seguridad diseñado para la lavadora                                                                         | Desconecte la lavadora                                                                                                 |
| Fuga de agua                              | La conexión entre el tubo de admisión o el de desagüe y el grifo o la lavadora no está bien conectado. El tubo de desagüe está atascado. | Compruebe y apriete las tuberías de agua. Limpie el tubo de desagüe, si es necesario consulte con un especialista      |
| Restos de detergente en el cajetín        | El detergente se humedece o se aglomera                                                                                                  | Limpie y seque la caja de detergente                                                                                   |
| El indicador o la pantalla o se encienden | Desconecte la placa de la computadora o el arnés tiene un problema de conexión                                                           | Compruebe si la corriente está apagada y el enchufe de alimentación está conectado correctamente                       |
| Ruido anormal                             |                                                                                                                                          | Compruebe si la fijación (los pernos) han sido retirados<br>Compruebe que está instalado en un suelo sólido y nivelado |

| Descripción | Razón                                          | Solución                                                                                                                                             |
|-------------|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>E30</b>  | La puerta no se ha cerrado correctamente       | Reinicie después de cerrar la puerta. Compruebe que la ropa no está atascada.                                                                        |
| <b>E10</b>  | Problema de admisión de agua durante el lavado | Compruebe si la presión de agua es demasiado baja.<br>Enderece la tubería de agua.<br>Compruebe si el filtro de la válvula de entrada está bloqueado |
| <b>E21</b>  | Problema de desagüe                            | Compruebe que el desagüe está bloqueado                                                                                                              |
| <b>E12</b>  | Pérdida de agua                                | Reinicie la lavadora                                                                                                                                 |
| <b>EXX</b>  | Otros                                          | Inténtelo de nuevo, de lo contrario, llame al servicio técnico                                                                                       |



### Nota

- Después de la comprobación, active el dispositivo. Si el problema se produce muestra otros códigos de alarma de nuevo, póngase en contacto con el servicio técnico.


# MANTENIMIENTO

## ■ Especificaciones técnicas

Fuente de alimentación 220-240V~,50Hz(EU)

Corriente Máx. 10A

Presión estándar de agua 0.05MPa-1MPa

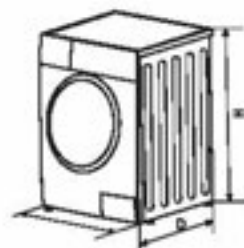

| Model                       | Capacidad de lavado | Dimensiones (An*Fon*Alt) | Peso neto | Potencia |
|-----------------------------|---------------------|--------------------------|-----------|----------|
| Serie 5-7140/Serie 5-7140 I | 7.0kg               | 595*495*850              | 60kg      | 2000W    |
| Serie 5-8140/Serie 5-8140 I | 8.0kg               | 595*470*850              | 63kg      | 1950W    |
| Serie 5-1015/Serie 5-1015 I | 10.0kg              | 595*565*850              | 72kg      | 1950W    |

# MANTENIMIENTO

Nombre de la marca:

Dirección de la marca: (\*)

Modelo: Serie 5-7140/Serie 5-7140 I

Parámetros generales del producto:

| Parámetro                                                                                                                                 | Valor            | Parámetro                                                                                                                                                      | Valor         |    |
|-------------------------------------------------------------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Capacidad nominal (*) (kg)                                                                                                                | 7,0              | Dimensión (en cm)                                                                                                                                              | Altura        | 85 |
|                                                                                                                                           |                  |                                                                                                                                                                | Anchura       | 60 |
|                                                                                                                                           |                  |                                                                                                                                                                | Profundidad   | 50 |
| ES <sub>W</sub> (*)                                                                                                                       | 59,9             | Clase de eficiencia energética (*)                                                                                                                             | B (*)         |    |
| Índice de eficiencia de lavado                                                                                                            | 1,891            | Eficiencia del lavado (g/kg)(*)                                                                                                                                | 5,0           |    |
| Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía dependerá de cómo se utilice el aparato. | 0,516            | Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua. | 45            |    |
| Temperatura máxima en el interior del cajón tratado (°C)                                                                                  | Capacidad normal | Contenido de humedad residual (%) (*)                                                                                                                          | 53,9          |    |
|                                                                                                                                           | Máx.             |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Velocidad de centrifugado (rpm)                                                                                                           | Capacidad normal | Clase de eficiencia de secado por centrifugado                                                                                                                 | B (*)         |    |
|                                                                                                                                           | Máx.             |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Durada del programa (min)                                                                                                                 | Capacidad normal | Tipo                                                                                                                                                           | Independiente |    |
|                                                                                                                                           | Máx.             |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Emisiones de ruido acústico aerotransportado en la fase de centrifugado (dB (A) re 1 pW)                                                  | Capacidad normal | Clase de emisión de ruido acústico aerotransportado (*) (Fase de giro)                                                                                         | B (*)         |    |
|                                                                                                                                           | Máx.             |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Modo ahorro (w)                                                                                                                           | 0,50             | Modo de espera (w)                                                                                                                                             | N/A           |    |
| Inicio diferido (w) (si procede)                                                                                                          | 4,00             | Apaga en red (W) (si es aplicable)                                                                                                                             | N/A           |    |

Duración mínima de la garantía ofrecida por el proveedor : Dos años

Este producto ha sido diseñado para tener una vida útil durante el ciclo de lavado.

NO

Información adicional

Enlace a la página web del proveedor, donde se encuentre la información del punto 9 del Anexo II del Reglamento de la Comisión (UE) 2019/2023 (\*) [www.aseslabedricas.es](http://www.aseslabedricas.es)

(\*) Para el programa eco 40-60.

(b) Los cambios en estos elementos no se considerarán pertinentes a los efectos del párrafo 4 del artículo 4 del Reglamento (UE) 2017/1365.

(c) Si la base de datos de productos genera automáticamente el contenido definitivo de este ciclo, el proveedor no introducirá estos datos.

# MANTENIMIENTO

Nombre de la marca:

Dirección de la marca: 

Modelo Serie 5-8140 Serie 5-8140 I

Parámetros generales del producto:

| Parámetro                                                                                                                                 | Valor            | Parámetro                                                                                                                                                      | Valor         |    |
|-------------------------------------------------------------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Capacidad nominal (*) (kg)                                                                                                                | 8.0              | Dimensión (en cm)                                                                                                                                              | Altura        | 85 |
|                                                                                                                                           |                  |                                                                                                                                                                | Anchura       | 60 |
|                                                                                                                                           |                  |                                                                                                                                                                | Profundidad   | 47 |
| ES <sub>W</sub> (°)                                                                                                                       | 60.0             | Clase de eficiencia energética (*)                                                                                                                             | B (°)         |    |
| Índice de eficiencia de lavado (°)                                                                                                        | 1.031            | Eficiencia del lavado (g/kg)(°)                                                                                                                                | 5.0           |    |
| Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía dependerá de cómo se utilice el aparato. | 0.545            | Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua. | 48            |    |
| Temperatura máxima en el interior del cajón tratado (°C)                                                                                  | Capacidad normal | Contenido de humedad residual (%) (°)                                                                                                                          | 53.9          |    |
|                                                                                                                                           | Mixta            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Velocidad de centrifugado (rpm)                                                                                                           | Capacidad normal | Clase de eficiencia de secado por centrifugado                                                                                                                 | B (°)         |    |
|                                                                                                                                           | Mixta            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Duración del programa (min)                                                                                                               | Capacidad normal | Tipo                                                                                                                                                           | Independiente |    |
|                                                                                                                                           | Mixta            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Queda            |                                                                                                                                                                |               |    |
| Emissiones de ruido acústico aerotransportado en la fase de centrifugado (dB (A) re 1 pW)                                                 | 76               | Clase de emisión de ruido acústico aerotransportado (*) (Fase de giro)                                                                                         | B (°)         |    |
| Modo ahorro (w)                                                                                                                           | 6.50             | Modo de espera (w)                                                                                                                                             | N/A           |    |
| Inicio diferido (w) (si procede)                                                                                                          | 4.00             | Espera en red (W) (si es aplicable)                                                                                                                            | N/A           |    |

Duración mínima de la garantía ofrecida por el proveedor : Dos años

Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado.

NO

Información adicional

Enlace a la página web del proveedor, donde se encuentre la información del punto 8 del Anexo I del Reglamento de la Comisión (UE) 2019/2023 (°) [www.aseslabedricas.com](http://www.aseslabedricas.com)

(\*) Para el programa eco 40-60.

(b) Los cambios en estos elementos no se considerarán pertinentes a los efectos del párrafo 4 del artículo 4 del Reglamento (UE) 2017/1365.

(c) Si la base de datos de productos genera automáticamente el contenido definitivo de este ciclo, el proveedor no introducirá estos datos.

# MANTENIMIENTO

Nombre de la marca:

Dirección de la marca:

Modelo Serie 5-1015/Serie 5-1015 I

Parámetros generales del producto:

| Parámetro                                                                                                                                 | Valor            | Parámetro                                                                                                                                                      | Valor         |    |
|-------------------------------------------------------------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Capacidad nominal (*) (kg)                                                                                                                | 10,0             | Dimensión (en cm)                                                                                                                                              | Altura        | 85 |
|                                                                                                                                           |                  |                                                                                                                                                                | Anchura       | 60 |
|                                                                                                                                           |                  |                                                                                                                                                                | Profundidad   | 57 |
| EE <sub>12</sub>                                                                                                                          | 60,0             | Clase de eficiencia energética (*)                                                                                                                             | B             |    |
| Índice de eficiencia de lavado                                                                                                            | 1,031            | Eficiencia del lavado (g/kg)(*)                                                                                                                                | 5,0           |    |
| Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía dependerá de cómo se utilice el aparato. | 0,593            | Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua. | 52            |    |
| Temperatura máxima en el interior del tambor tratado (°C)                                                                                 | Capacidad normal | Contenido de humedad residual (%) (*)                                                                                                                          | 53,9          |    |
|                                                                                                                                           | Mixto            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Quinto           |                                                                                                                                                                |               |    |
| Velocidad de centrifugado (rpm)                                                                                                           | Capacidad normal | Clase de eficiencia de secado por centrifugado                                                                                                                 | B             |    |
|                                                                                                                                           | Mixto            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Quinto           |                                                                                                                                                                |               |    |
| Duración del programa (horas)                                                                                                             | Capacidad normal | Tipo                                                                                                                                                           | Independiente |    |
|                                                                                                                                           | Mixto            |                                                                                                                                                                |               |    |
|                                                                                                                                           | Quinto           |                                                                                                                                                                |               |    |
| Emisiones de ruido acústico aerotransportado en la fase de centrifugado (dB (A) re 1 pW)                                                  | 80               | Clase de emisión de ruido acústico aerotransportado (*) (Fase de giro)                                                                                         | C             |    |
| Modo apagado (w)                                                                                                                          | 0,50             | Modo de espera (w)                                                                                                                                             | N/A           |    |
| Inicio diferido (w) (si procede)                                                                                                          | 4,00             | Espera en red (w) (si es aplicable)                                                                                                                            | N/A           |    |

Duración mínima de la garantía ofrecida por el proveedor : Dos años

Este producto ha sido diseñado para tener menos de cinco años de vida útil.

NO

Información adicional

Visite la página web del proveedor, donde se encuentra la información del punto 8 del Anexo II del Reglamento de la Comisión (UE) 2019/9020 (\*) <http://www.asseltech.es>

(\*) Para el programa eco 40-60.

(\*) Los cambios en estos elementos no se considerarán pertinentes a los efectos del párrafo 4 del artículo 4 del Reglamento (UE) 2017/1365.

(\*) Si la base de datos de productos genera automáticamente el contenido definitivo de este código, el proveedor no introducirá estos datos.

 ecocare

 ecoblue

 smart

# sauber

Lavadora Serie 5-7140 / I Serie 5-8140 / I Serie 5-1015 / I Manual de usuario  
Washing machine Serie 5-7140 / I Serie 5-8140 / I Serie 5-1015 / I User manual.

 efficient

 **sauber**

# CONTENTS

---

## SAFETY INSTRUCTIONS

- Safety Instructions ..... 2

## INSTALLATION

- Product Description ..... 9
- Installation ..... 10

## OPERATION

- Quick Start ..... 13
- Before Each Washing ..... 15
- Detergent Dispenser ..... 16
- Control Panel ..... 18
- Programmes..... 19
- Option..... 26

## MAINTENANCE

- Cleaning and Care ..... 30
- Trouble Shooting ..... 33
- Technical Specifications ..... 34
- Product Fiche ..... 35

## SAFETY INSTRUCTIONS

---

### ■ Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

#### Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

#### Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

#### Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

#### Warning!

### ELECTRIC SHOCK HAZARD

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!

## SAFETY INSTRUCTIONS

---

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

### INSTALLATION LOCATION AND SURROUNDING

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washing machine.

## SAFETY INSTRUCTIONS

---

- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see „Maintenance - Cleaning of drain pump filter“) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

### INSTALLATION

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washing machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

### ELECTRICAL CONNECTION

- Make sure the supply cable is not trapped by the machine, it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the “Technical specifications” table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

## SAFETY INSTRUCTIONS

---

•Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

### **Warning!**

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

## WATER CONNECTIONS

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

# SAFETY INSTRUCTIONS

---

## OPERATION AND MAINTENANCE

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.

## SAFETY INSTRUCTIONS

---

- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of not authorized persons.

### TRANSPORT

- Before Transport:
  - Bolts shall be reinstalled to the machine by a specialized person
  - Accumulated water shall be drained out of the machine
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

### INTENDED USE

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Areas for communal use in blocks of flats or in launderettes.


### Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

# INSTALLATION

## ■ Product Description

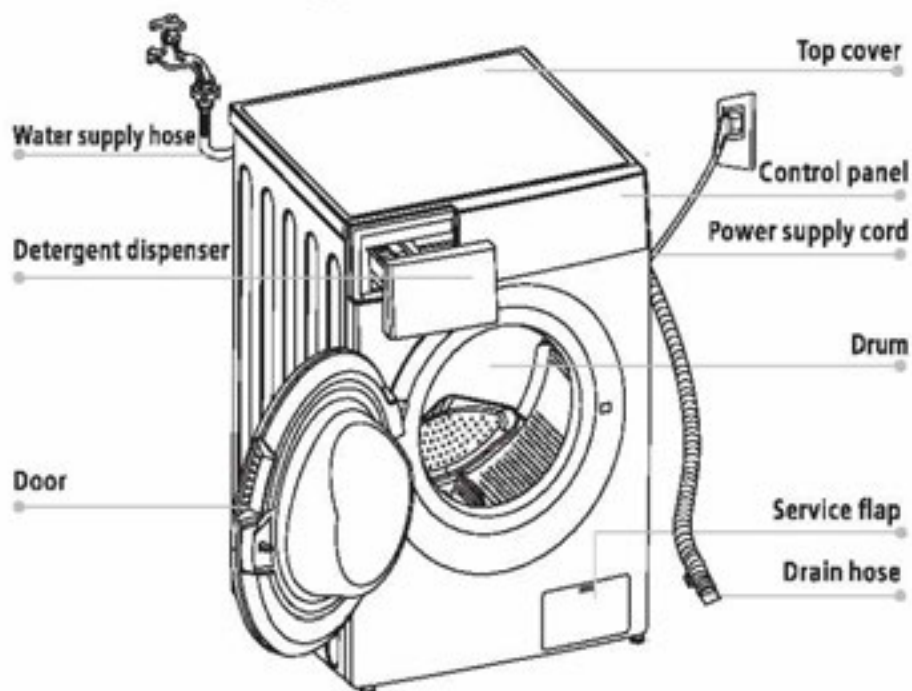

### Note!

- The product picture is for illustration only, please refer to real product as reference.

## Accessories



4 x Cover caps

1 x Supply hose  
cold water

1 x Owner's manual

# INSTALLATION

## ■ Installation

### Installation area

#### Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture



Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C
5. Keep far away from the heat sources such as coal or gas burning appliances.



### Unpacking the washing machine

#### Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.



1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

# INSTALLATION

## Remove transport bolts

### Warning!

- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.



Remove the bolts including the rubber parts and keep them for future use.



Close the holes using the cover caps.

## Levelling the washing machine

### Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.



1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

## Connect the water supply hose

### Warning!

To prevent leakage or water damage, follow the instructions in this chapter

- Do not kink, crush or modify water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



### Note!

- Connect manually, do not use tools. Check if the connections are tight.

# INSTALLATION

## Drain Hose



### Warning!

- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

2.Connect it to the branch drain pipe of the trough.

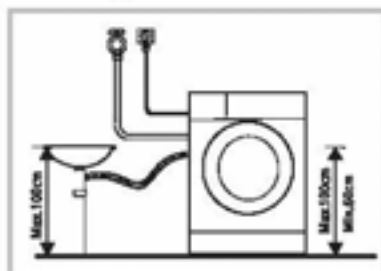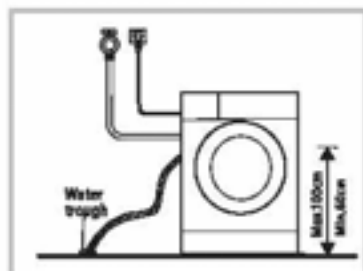

## OPERATION

---

### ■ Quick Start

#### ⚠ Caution!

- Before washing, please make sure the washing machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.

#### 🔧 Calibration


It's recommended to calibrate the washing machine, so that provide the best performance.

The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

- 1- Remove all accessories from the drum and close the door;
- 2- Insert the mains plug to the socket;
- 3- Switch on the washing machine and press "Speed" and "Delay" simultaneously for 10 seconds until "t19" is displayed;
- 4- Press [▷||] to start the appliance and wait till "\*\*\*\*\*" is displayed.

# OPERATION

## 1. Before Washing

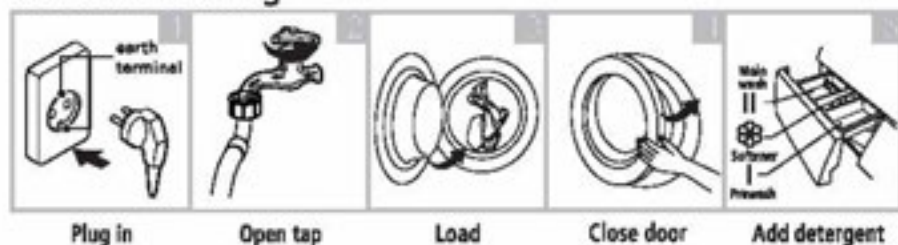

### Note!

- Detergent need to be added in compartment I if the pre-wash function is selected.

## 2. Washing



Select programme    Select function or  
remain default  
settings

Press  
Start/Pause to  
start the program

## 3. After Washing

Buzzer beep and "End" on display.

## OPERATION

### ■ Before Each Washing

- The ambient temperature of the washing machine should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.



Check the care label



Sort laundry according to color and textile type



Take all items out of the pockets



Tie together long textile strips and belts, close zips and button



Put small items into a laundry bag



Turn easy-pilling and long-pile fabric inside out


### ⚠ Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

# OPERATION

## Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ☼ Release button to pull out the dispenser

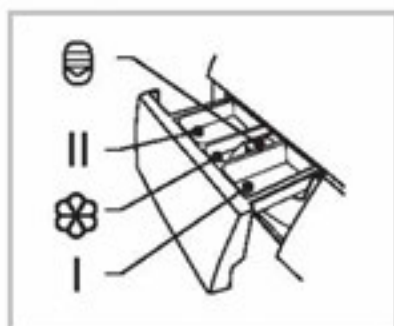

### ⚠ Caution!

- Detergent only need to be added in \*compartment I \*after selecting pre-wash function.

| Programme    | I | II | ☼ | Programme | I | II | ☼ |
|--------------|---|----|---|-----------|---|----|---|
| Cotton       | ○ | ●  | ○ | Spin Only |   |    |   |
| Synthetic    | ○ | ●  | ○ | Bulky     | ○ | ●  | ○ |
| Mix          | ○ | ●  | ○ | Wool      |   | ●  | ○ |
| Sportswear   | ○ | ●  | ○ | Quick 15' |   | ●  | ○ |
| Baby Care    | ○ | ●  | ○ | Rapid 45' | ○ | ●  | ○ |
| Jeans        | ○ | ●  | ○ | 20°C      |   | ●  | ○ |
| Rinse & Spin |   |    | ○ | Intensive |   | ●  | ○ |
| ECO 40-60    |   | ●  | ○ |           |   |    |   |

● Means must      ○ Means optional

## Detergent Recommendation

| Recommended washing detergent                                      | Wash cycles                   | Washing temp. | Type of laundry and textile                                        |
|--------------------------------------------------------------------|-------------------------------|---------------|--------------------------------------------------------------------|
| Heavy-duty detergent with bleaching agents and optical brighteners | Cotton, ECO 40-60, Mix, Bulky | 20/30/40/60   | White laundry made from boil-proof cotton or linen                 |
| Colour detergent without bleaching agent and optical brighteners   | Cotton, ECO40-60, Mix, Bulky  | Cold/20/30/40 | Coloured laundry made from cotton or linen                         |
| Color or mild detergent without optical brighteners                | Synthetic                     | Cold/20/30/40 | Coloured laundry made from easy care fibres or synthetic materials |
| Mild washing detergent                                             | Synthetic                     | 20 /30        | Delicate textiles, silk, viscose                                   |
| Special wool detergent                                             | Wool                          | 20/30         | Wool                                                               |

### Note!

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.

Following symptoms are a sign of detergent overdosing:


- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

# OPERATION

## ■ Control Panel

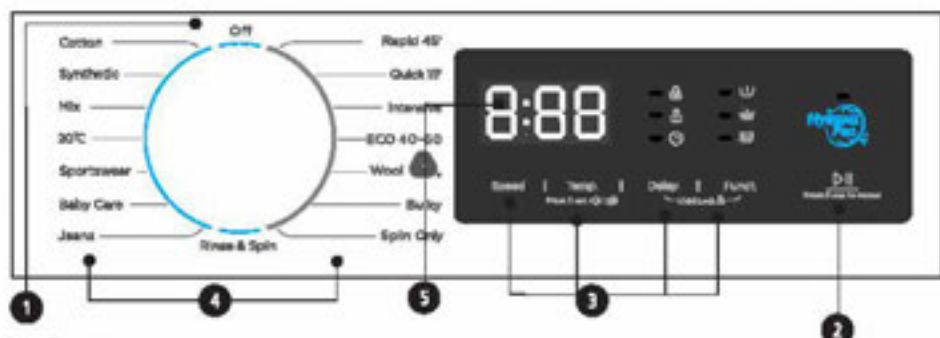

### Note!

- The chart is for reference only. Please refer to real product as standard.

#### 1 Off

Product is switched Off.

#### 3 Option

This allows you to select an additional function and will light when selected.

#### 5 Display


The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

#### 2 Start/Pause

Press the button to start or pause the washing cycle.

#### 4 Programmes

Available according to the laundry type.

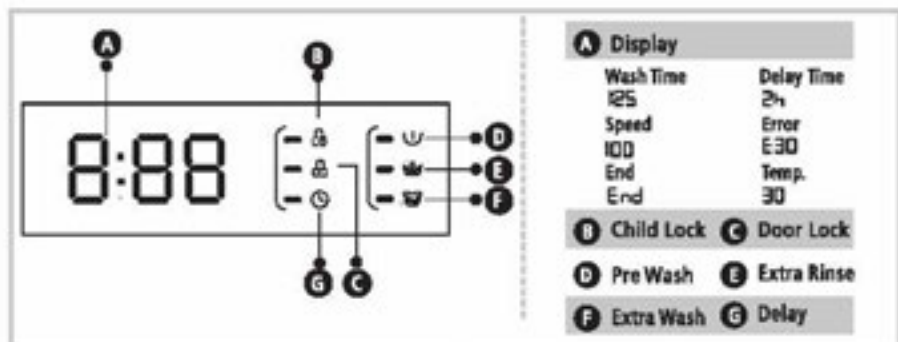

# OPERATIONS

## ■ Programmes

MODEL: Series 5-7140/Serie 5-7140 I /Serie 5-1015/Serie 5-1015 I

| Programme    | Load(kg) |      | Display Time |      |
|--------------|----------|------|--------------|------|
|              | 7.0      | 10.0 | 7.0          | 10.0 |
| Cotton       | 7.0      | 10.0 | <b>3:49</b>  | 3:49 |
| Synthetic    | 3.5      | 5.0  | <b>3:28</b>  | 3:28 |
| Mix          | 7.0      | 10.0 | <b>1:30</b>  | 1:30 |
| 20°C         | 3.5      | 5.0  | <b>1:11</b>  | 1:11 |
| Sportswear   | 3.5      | 5.0  | <b>1:16</b>  | 1:16 |
| Baby Care    | 7.0      | 10.0 | <b>1:52</b>  | 1:52 |
| Jeans        | 7.0      | 10.0 | <b>1:56</b>  | 1:56 |
| Rinse & Spin | 7.0      | 10.0 | <b>0:30</b>  | 0:30 |
| Spin Only    | 7.0      | 10.0 | <b>0:12</b>  | 0:12 |
| Bulky        | 7.0      | 10.0 | <b>1:48</b>  | 1:48 |
| Wool         | 2.0      | 2.0  | <b>1:07</b>  | 1:07 |
| ECO 40-60    | 2.0      | 2.0  | <b>3:13</b>  | 3:53 |
| Intensive    | 7.0      | 10.0 | <b>3:48</b>  | 3:48 |
| Quick 15'    | 2.0      | 2.0  | <b>0:15</b>  | 0:15 |
| Rapid 45'    | 2.0      | 2.0  | <b>0:45</b>  | 0:45 |

### Note!

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

# OPERATIONS

## ■ Programmes

MODEL: Serie 5-8140/Serie 5-8140 I

| Programme    | Load(kg) | Display Time |
|--------------|----------|--------------|
|              | 8.0      | 8.0          |
| Cotton       | 8.0      | 3:49         |
| Synthetic    | 4.0      | 3:28         |
| Mix          | 8.0      | 1:30         |
| 20°C         | 4.0      | 1:11         |
| Sportswear   | 4.0      | 1:16         |
| Baby Care    | 8.0      | 1:52         |
| Jeans        | 8.0      | 1:56         |
| Rinse & Spin | 8.0      | 0:30         |
| Spin Only    | 8.0      | 0:12         |
| Bulky        | 8.0      | 1:48         |
| Wool         | 2.0      | 1:07         |
| ECO 40-60    | 2.0      | 3:35         |
| Intensive    | 8.0      | 3:48         |
| Quick 15'    | 2.0      | 0:15         |
| Rapid 45'    | 2.0      | 0:45         |

### Note!

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

# OPERATION

## ■ Programmes

| Serie 5-7140/Serie 5-7140 I |                        |                     |                                     |                                            |                                             |                                            |                                                  |
|-----------------------------|------------------------|---------------------|-------------------------------------|--------------------------------------------|---------------------------------------------|--------------------------------------------|--------------------------------------------------|
| Cycle                       | Nominal capacity in kg | Temperature setting | Cycle duration in hours and minutes | Energy consumption in kWh/operalling cycle | Water consumption in liter/operalling cycle | Highest temperature ature °C <sup>1)</sup> | residual moisture in % /spin speed <sup>2)</sup> |
| Cotton(60°C)                | 7.0                    | 60                  | 3:54                                | 1.392                                      | 65                                          | 60                                         | 53/1400                                          |
| Mix                         | 7.0                    | 40                  | 1:30                                | 0.713                                      | 65                                          | 40                                         | 70/800                                           |
| 20°C                        | 3.5                    | 20                  | 1:11                                | 0.194                                      | 41                                          | 20                                         | 65/1000                                          |
| Quick 15'                   | 2.0                    | Cold                | 0:15                                | 0.03                                       | 40                                          | Cold                                       | 75/800                                           |
| Intensive                   | 7.0                    | 40                  | 3:48                                | 1.066                                      | 65                                          | 40                                         | 70/800                                           |
| ECO 40-60                   | 3.5                    | —                   | 2:42                                | 0.47                                       | 44                                          | 34                                         | 53/1400                                          |
|                             | 7.0                    | —                   | 3:28                                | 0.775                                      | 54                                          | 36                                         | 53/1400                                          |
|                             | 2.0                    | —                   | 2:42                                | 0.2                                        | 35                                          | 21                                         | 53/1400                                          |

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to EN 60456:2016 With (EU)No.1061/2010,  
The EU energy efficiency class is: A+++  
Energy test program: Intensive 60/40 °C; Speed:The highest speed;  
Other as the default.  
Half load for 7.0Kg machine:3.5Kg.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023,  
The EU energy efficiency class is: B  
Energy test program: ECO 40-60. Other as the default.  
Half load for 7.0Kg machine:3.5Kg.  
Quarter load for 7.0Kg machine:2.0Kg.

# OPERATION

## ■ Programmes

| Serie 5-1015/Serie 5-1015 I |                        |                     |                                     |                                           |                                            |                                            |                                                  |
|-----------------------------|------------------------|---------------------|-------------------------------------|-------------------------------------------|--------------------------------------------|--------------------------------------------|--------------------------------------------------|
| Cycle                       | Nominal capacity in kg | Temperature setting | Cycle duration in hours and minutes | Energy consumption in kWh/operating cycle | Water consumption in liter/operating cycle | Highest temperature ature °C <sup>1)</sup> | residual moisture in % /spin speed <sup>2)</sup> |
| Cotton(60°C)                | 10.0                   | 60                  | 3:54                                | 1.708                                     | 85                                         | 60                                         | 53/1500                                          |
| Mix                         | 10.0                   | 40                  | 1:30                                | 0.889                                     | 85                                         | 40                                         | 70/800                                           |
| 20°C                        | 5.0                    | 20                  | 1:11                                | 0.212                                     | 51                                         | 20                                         | 65/1000                                          |
| Quick 15'                   | 2.0                    | Cold                | 0:15                                | 0.03                                      | 40                                         | Cold                                       | 75/800                                           |
| Intensive                   | 10.0                   | 40                  | 3:48                                | 1.277                                     | 85                                         | 40                                         | 70/800                                           |
| ECO 40-60                   | 5.0                    | —                   | 3:00                                | 0.672                                     | 53                                         | 38                                         | 53/1500                                          |
|                             | 10.0                   | —                   | 3:59                                | 1.062                                     | 73                                         | 38                                         | 53/1500                                          |
|                             | 2.5                    | —                   | 3:00                                | 0.235                                     | 38                                         | 23                                         | 53/1500                                          |

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to EN 60456:2016 With (EU)No.1061/2010,  
The EU energy efficiency class is: A+++  
Energy test program: Intensive 60/40 °C; Speed:The highest speed;  
Other as the default.  
Half load for 10.0Kg machine:5.0Kg.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023,  
The EU energy efficiency class is: B  
Energy test program: ECO 40-60. Other as the default.  
Half load for 10.0Kg machine:5.0Kg.  
Quarter load for 10.0Kg machine:2.5Kg.

# OPERATION

## ■ Programmes

| Serie 5-8140/Serie 5-8140 I |                        |                     |                                     |                                            |                                             |                                            |                                                  |
|-----------------------------|------------------------|---------------------|-------------------------------------|--------------------------------------------|---------------------------------------------|--------------------------------------------|--------------------------------------------------|
| Cycle                       | Nominal capacity in kg | Temperature setting | Cycle duration in hours and minutes | Energy consumption in kWh/operalling cycle | Water consumption in liter/operalling cycle | Highest temperature ature °C <sup>1)</sup> | residual moisture in % /spin speed <sup>2)</sup> |
| Cotton(60°C)                | 8.0                    | 60                  | 3:54                                | 1.498                                      | 71                                          | 60                                         | 53/1400                                          |
| Mix                         | 8.0                    | 40                  | 1:30                                | 0.772                                      | 71                                          | 40                                         | 70/800                                           |
| 20°C                        | 4.0                    | 20                  | 1:11                                | 0.2003                                     | 44                                          | 20                                         | 65/1000                                          |
| Quick 15'                   | 2.0                    | Cold                | 0:15                                | 0.03                                       | 40                                          | Cold                                       | 75/800                                           |
| Intensive                   | 8.0                    | 40                  | 3:48                                | 1.136                                      | 71                                          | 40                                         | 70/800                                           |
| ECO 40-60                   | 4.0                    | --                  | 2:48                                | 0.524                                      | 45                                          | 33                                         | 53/1400                                          |
|                             | 8.0                    | --                  | 3:38                                | 0.87                                       | 61                                          | 37                                         | 53/1400                                          |
|                             | 2.0                    | --                  | 2:48                                | 0.21                                       | 36                                          | 23                                         | 53/1400                                          |

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to EN 60456:2016 With (EU)No.1061/2010,  
The EU energy efficiency class is: A+++  
Energy test program: Intensive 60/40 °C; Speed: The highest speed;  
Other as the default.  
Half load for 8.0Kg machine: 4.0Kg.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023,  
The EU energy efficiency class is: B  
Energy test program: ECO 40-60. Other as the default.  
Half load for 8.0Kg machine: 4.0Kg.  
Quarter load for 8.0Kg machine: 2.0Kg.

## OPERATION

---

- 1) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
- 2) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
- 3) The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washing machine up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

### Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

# OPERATION

## ■ Programmes

Programmes are available according to the laundry type.

| Programmes |                                                                                                                                                                                                          |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cotton     | Hard-wearing textiles, heat-resistant textiles made of cotton or linen.                                                                                                                                  |
| Synthetic  | Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles. |
| Mix        | Mixed load consisting of textiles made of cotton and synthetics.                                                                                                                                         |
| 20°C       | 20°C default, can choose cold water.                                                                                                                                                                     |
| Sportswear | Washing the activewear.                                                                                                                                                                                  |
| Baby Care  | Washing the baby's clothes, it can make the baby's wear cleaner. and make the rinse performance better to protect the baby skin.                                                                         |
| Jeans      | Specially for jeans.                                                                                                                                                                                     |
| Rinse&Spin | Extra rinse with spin.                                                                                                                                                                                   |
| Spin Only  | Extra spin with selectable spin speed.                                                                                                                                                                   |
| Bulky      | This program is specially designed for washing duvet coats.                                                                                                                                              |
| Wool       | Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).                                       |
| ECO 40-60  | Default 40°C, not selectable, suitable for laundry washing at about 40°C-60°C.                                                                                                                           |
| Intensive  | To increase the washing effects, washing time is increased.                                                                                                                                              |
| Quick 15'  | Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.                                                                                                         |
| Rapid 45'  | Washing few and not very dirty clothes quickly.                                                                                                                                                          |

### Note!

- Reference to your product to select the programmes.

# OPERATION

## ■ Option

| Cycle        | Default Temp.(°C) | Default spin speed in rpm |      | Additional functions |
|--------------|-------------------|---------------------------|------|----------------------|
| Wash cycles  |                   | 1400                      | 1500 |                      |
| Cotton       | 40                | 1400                      | 1500 | 🌀, 🌀, 🌀, 🌀           |
| Synthetic    | 40                | 1200                      | 1200 | 🌀, 🌀, 🌀, 🌀           |
| Mix          | 40                | 800                       | 800  | 🌀, 🌀, 🌀, 🌀           |
| 20°C         | 20                | 1000                      | 1000 | 🌀, 🌀                 |
| Sportswear   | 40                | 800                       | 800  | 🌀, 🌀, 🌀              |
| Baby Care    | 60                | 800                       | 800  | 🌀, 🌀, 🌀, 🌀           |
| Jeans        | 60                | 1000                      | 1000 | 🌀, 🌀, 🌀              |
| Rinse & Spin | --                | 1000                      | 1000 | 🌀, 🌀                 |
| Spin Only    | --                | 1000                      | 1000 | 🌀                    |
| Bulky        | 40                | 1000                      | 1000 | 🌀, 🌀, 🌀, 🌀           |
| Wool         | 40                | 600                       | 600  | 🌀, 🌀                 |
| ECO 40-60    | 40                | 1400                      | 1500 | 🌀                    |
| Intensive    | 40                | 800                       | 800  | 🌀                    |
| Quick 15'    | Cold              | 800                       | 800  | 🌀                    |
| Rapid 45'    | 40                | 800                       | 800  | 🌀, 🌀, 🌀              |

### 📌 Note!

- For the maximum spin speed, program time, and other details of the ECO 40-60 program, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.

Temp.

Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold - 20°C - 30°C - 40°C - 60°C - 90°C.

## OPERATION

---

### Speed

#### Spin Speed

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps: 1400 : 0-400-600-800-1000-1200-1400

1500: 0-400-600-800-1000-1200-1400-1500

---

### Delay

#### Delay

1. Select a programme

2. Press the Delay button to choose the delaying time 0-24h

3. Press [Start/Pause] to start the delay operation



Choose programme



Setting time



Start

To cancel the Delay function, press the "Delay" button before starting the program until the display shows 0 h. If the program has already started, switch the appliance off and afterwards on and select a new programme.

---



#### Pre Wash

Extra washing function before the main washing cycle starts to increase the washing performance.

Note: Detergent needs to be added to the compartment I.

---



#### Extra Rinse

The laundry will undergo an extra rinse after selecting this function.

---



#### Extra Wash

To increase the washing time and intensity for a better cleaning effect of heavy soiled laundry.

---



#### HYGIENE PRO

When the Hygiene Pro light is on, this function is automatically activated in the program. The Self-Clean function will be automatically activated during every washing cycle.

Hygiene Pro system will keep your laundry always clean.

---

## OPERATION

---



### Child Lock

This function is meant to keep children from misusing the controls.

Delay

Funct.

Press [Delay] and [Funct.] simultaneously for 3 sec until the buzzer beep. The child lock indicator switches on.

### ⓘ Caution!

When the Child Lock is activated, the display will alternately show "CL" and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash for 3 sec.

When the program ends, "CL" and "END" will alternate on the display for 10 sec, then the indicator will flash for 3 sec.

The Child Lock deactivates the function of all buttons except the On/Off button and the Child lock button!

Only the simultaneous pressing of the two buttons [Delay] and [Funct.] can deactivate the Child Lock!

Please deactivate the Child Lock before selecting a new program!



### Mute the buzzer



Choose the Programme



Temp.



Press the [Temp.] button for 3sec., the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

### ⓘ Caution!

- After Muting the buzzer function, the sounds will not be activated any more.

## OPERATION



### Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press [Start/Pause] for 3 sec. to reload, and start the clothes adding in the midway function. Please follow the steps as bellow:

- 1.Wait until the drum stops rotation.
- 2.The door lock is unlocked.
- 3.Close the door when the clothes are reloaded and press the [▷||] button.



Press[▷||]3sec.

Reload the clothes

Start

### ! Caution!

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

## MAINTENANCE

### ■ Cleaning and Care

#### Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

#### Cleaning the Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.



#### Caution!

- Never use abrasive or caustic agents, formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

#### Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

#### Note!

- Keep any laundry away from the machine while cleaning the drum.

#### Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages. Remove any coins, buttons and other objects from the seal after each wash. Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.



## MAINTENANCE

### Cleaning the Inlet Filter

#### Note!

- Diminishing water flow is a sign that the filter need to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.



### Clean The Detergent Dispenser

1. Press down the release [  ] on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.



Press the release and remove the dispenser drawer



Clean the dispenser drawer and the softener cover under water



Clean the recess with an soft brush



Insert the dispenser drawer

#### Note!


- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.

## MAINTENANCE

### Cleaning the Drain Pump Filter

#### **⚠ Warning!**

- Be careful of the hot water!
- Allow detergent solution to cool down.
- Unplug the machine to avoid electrical shock before washing.
- Drain pump filter can filter the yarns and small foreign matters from the washing.
- Clean the filter periodically every 3 months to ensure the normal operation of washing machine.

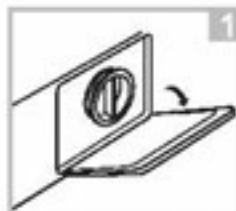


Open the lower cover cap



Open the filter by turning to the counter clockwise



Remove extraneous matter

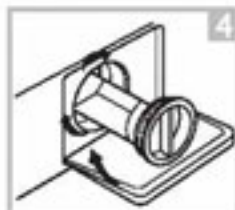

Close the lower cover cap

#### **⚠ Caution!**

- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

## MAINTENANCE

### ■ Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

| Description                                   | Possible cause                                               | Solution                                                                                                        |
|-----------------------------------------------|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Appliance does not start                      | Door is not closed properly.<br>Clothes are stuck.           | Close the door properly and restart.<br>Check the laundry.                                                      |
| Door can't be opened                          | Safety protection is activated.                              | Disconnect the power and restart.                                                                               |
| Water leakage                                 | Connections are not tight enough.                            | Check and fasten the water inlet pipe.<br>Check and clean the outlet hose.                                      |
| Detergent residues in the detergent dispenser | Detergent is damp and/or clotted.                            | Clean and wipe the detergent dispenser dry.                                                                     |
| Indicator or display does not work            | PC board or harness have connection problems.                | Switch off the power and check if the mains plug is connected properly.                                         |
| Abnormal noise                                | Fixing bolts still in place.<br>Floor is not solid or level. | Check if the fixing bolts have been removed<br>Make sure the appliance is installed on a solid and level floor. |

### Error Codes

| Description | Possible cause                             | Solution                                                                                                   |
|-------------|--------------------------------------------|------------------------------------------------------------------------------------------------------------|
| <b>E30</b>  | Door is not closed properly                | Close the door properly and restart.                                                                       |
| <b>E10</b>  | Water injecting problem during wash cycle. | Check if the water pressure is high enough.<br>Straighten the water pipe.<br>Clean the inlet valve filter. |
| <b>E21</b>  | Overtime water draining                    | Check the drain hose for blockage.                                                                         |
| <b>E12</b>  | Water overflow                             | Restart the appliance.                                                                                     |
| <b>EXX</b>  | Others                                     | Restart the appliance. If problem persists, please contact the customer service.                           |

# MAINTENANCE

## ■ Customer service

Spare part for your appliance are available for a minimum of 10 years.  
In case of questions please contact our customer service at:

### Warning!

Risk of electric shock

- Never try repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

## Transport

### IMPORTANT STEPS WHEN MOVING THE APPLIANCE


- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

## ■ Technical Specifications

Power Supply 220-240V~, 50Hz

MAX. Current 10A

Standard Water Pressure 0.05MPa-1 MPa

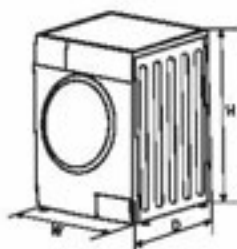

| Model                       | Washing Capacity | Dimension (W*D*H mm) | Net Weight | Rated Power |
|-----------------------------|------------------|----------------------|------------|-------------|
| Serie S-7140/Serie S-7140 I | 7.0kg            | 595*495*850          | 60kg       | 2000W       |
| Serie S-8140/Serie S-8140 I | 8.0kg            | 595*470*850          | 63kg       | 1950W       |
| Serie S-1015/Serie S-1015 I | 10.0kg           | 595*565*850          | 72kg       | 1950W       |

# MAINTENANCES

## ■ Product Information Sheet acc. regulation (EU) 2019/2023

Supplier's name or trade mark:

Supplier's address (†):

Model identifier: Serie S-7140/Serie S-7140 I

General product parameters:

| Parameter                                                                                                                                  | Value          |      | Parameter                                                                                                                                                                   | Value         |    |
|--------------------------------------------------------------------------------------------------------------------------------------------|----------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Rated capacity (†) (kg)                                                                                                                    | 7.0            |      | Dimensions in cm                                                                                                                                                            | Height        | 85 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Width         | 60 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Depth         | 50 |
| ED <sub>W</sub> (†)                                                                                                                        | 59.9           |      | Energy efficiency class (†)                                                                                                                                                 | B (†)         |    |
| Washing efficiency index (†)                                                                                                               | 1.031          |      | Rinsing effectiveness (g/kg) (†)                                                                                                                                            | 5.0           |    |
| Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used. | 0.516          |      | Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water. | 45            |    |
| Maximum temperature inside the treated textile (†) (°C)                                                                                    | Rated capacity | 36   | Weighted remaining moisture content (†) (%)                                                                                                                                 | 53.9          |    |
|                                                                                                                                            | Half           | 34   |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 21   |                                                                                                                                                                             |               |    |
| Spin speed (†) (rpm)                                                                                                                       | Rated capacity | 1400 | Spin-drying efficiency class (†)                                                                                                                                            | B (†)         |    |
|                                                                                                                                            | Half           | 1400 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 1400 |                                                                                                                                                                             |               |    |
| Programme duration (†) (h:min)                                                                                                             | Rated capacity | 3:28 | Type                                                                                                                                                                        | Free-standing |    |
|                                                                                                                                            | Half           | 2:43 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 2:43 |                                                                                                                                                                             |               |    |
| Airborne acoustical noise emissions in the spinning phase (†) (dB(A) re 1 pW)                                                              | 76             |      | Airborne acoustical noise emission class (†) (spinning phase)                                                                                                               | B (†)         |    |
| Off-mode (W)                                                                                                                               | 0.50           |      | Standby mode (W)                                                                                                                                                            | N/A           |    |
| Delay start (W) (if applicable)                                                                                                            | 4.00           |      | Networked standby (W) (if applicable)                                                                                                                                       | N/A           |    |

Minimum duration of the guarantee offered by the supplier (†):

This product has been designed to release silver ions during the washing cycle

NO

Additional information:

Web link to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (†) (6) is found:

(†) for the eco 40-60 programme.

(†) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1368.

(†) If the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

# MAINTENANCE

Supplier's name or trade mark(\*):

Supplier's address(\*):

Model identifier(\*) Serie S-8140/Serie S-8140 I

General product parameters:

| Parameter                                                                                                                                  | Value          |      | Parameter                                                                                                                                                                   | Value         |    |
|--------------------------------------------------------------------------------------------------------------------------------------------|----------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Rated capacity (*) (kg)                                                                                                                    | 8.0            |      | Dimensions in cm (*, *)                                                                                                                                                     | Height        | 85 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Width         | 60 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Depth         | 47 |
| Energy efficiency index (*) (JIE <sub>9</sub> )                                                                                            | 60.0           |      | Energy efficiency class (*)                                                                                                                                                 | B (*)         |    |
| Washing efficiency index (*)                                                                                                               | 1.031          |      | Rinsing effectiveness (g/kg) (*)                                                                                                                                            | 5.0           |    |
| Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used. | 0.545          |      | Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water. | 48            |    |
| Maximum temperature inside the treated textile (*) (°C)                                                                                    | Rated capacity | 37   | Weighted remaining moisture content (*) (%)                                                                                                                                 | 53.9          |    |
|                                                                                                                                            | Half           | 33   |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 23   |                                                                                                                                                                             |               |    |
| Spin speed (*) (rpm)                                                                                                                       | Rated capacity | 1400 | Spin-drying efficiency class (*)                                                                                                                                            | B (*)         |    |
|                                                                                                                                            | Half           | 1400 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 1400 |                                                                                                                                                                             |               |    |
| Programme duration (*) (h:min)                                                                                                             | Rated capacity | 3:38 | Type                                                                                                                                                                        | free-standing |    |
|                                                                                                                                            | Half           | 2:48 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 2:48 |                                                                                                                                                                             |               |    |
| Airborne sound power level in the spinning phase (*) (dB(A) ± 1 pW)                                                                        | 76             |      | Airborne sound power level in the spinning phase (*) (dB(A) ± 1 pW)                                                                                                         | B (*)         |    |
| Off mode (W) (if applicable)                                                                                                               | 0.50           |      | Standby mode (W) (if applicable)                                                                                                                                            | N/A           |    |
| Delay start (W) (if applicable)                                                                                                            | 4.00           |      | Networked standby (W) (if applicable)                                                                                                                                       | N/A           |    |

Minimum duration of the guarantee offered by the supplier (\*) (\*):

This product has been designed to release silver ions during the washing cycle

NO

Additional information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2016/2023 (\*) is found

(\*) This item shall not be considered relevant for the purposes of Article 20(1) of Regulation (EU) 2017/1369.

(\*) for the eco 40-60 programme.

(\*) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

(\*) If the product database automatically generates the definitive content of this cell, the supplier shall not enter these data.

# MAINTENANCE

Supplier's name or trade mark (7)(1):

Supplier's address (7)(1):

Model Identifier (7)(1): Serie S-1015/Serie S-1015 I

General product parameters:

| Parameter                                                                                                                                  | Value          |      | Parameter                                                                                                                                                                   | Value         |    |
|--------------------------------------------------------------------------------------------------------------------------------------------|----------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----|
| Rated capacity (7) (kg)                                                                                                                    | 10.0           |      | Dimensions in cm (7)                                                                                                                                                        | Height        | 85 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Width         | 60 |
|                                                                                                                                            |                |      |                                                                                                                                                                             | Depth         | 57 |
| Energy efficiency index (7) (2014)                                                                                                         | 60.0           |      | Energy efficiency class (7)                                                                                                                                                 | B (7)         |    |
| Washing efficiency index (7)                                                                                                               | 1.051          |      | Rinsing effectiveness (g/kg) (7)                                                                                                                                            | 5.0           |    |
| Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used. | 0.593          |      | Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water. | 52            |    |
| Maximum temperature inside the treated textile (7) (°C)                                                                                    | Rated capacity | 38   | Weighted remaining moisture content (7) (%)                                                                                                                                 | 53.9          |    |
|                                                                                                                                            | Half           | 38   |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 23   |                                                                                                                                                                             |               |    |
| Spin speed (7) (rpm)                                                                                                                       | Rated capacity | 1500 | Spin-drying efficiency class (7)                                                                                                                                            | B (7)         |    |
|                                                                                                                                            | Half           | 1500 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 1500 |                                                                                                                                                                             |               |    |
| Programme duration (7) (h:min)                                                                                                             | Rated capacity | 3:39 | Type                                                                                                                                                                        | free-standing |    |
|                                                                                                                                            | Half           | 3:00 |                                                                                                                                                                             |               |    |
|                                                                                                                                            | Quarter        | 3:00 |                                                                                                                                                                             |               |    |
| Airborne acoustical noise emissions in the spinning phase (7) (dB(A) re 1 pW)                                                              | 80             |      | Airborne acoustical noise emission class (7) (spinning phase)                                                                                                               | C (7)         |    |
| Off-mode (W) (if applicable)                                                                                                               | 0.50           |      | Standby mode (W) (if applicable)                                                                                                                                            | N/A           |    |
| Delay start (W) (if applicable)                                                                                                            | 4.00           |      | Networked standby (W) (if applicable)                                                                                                                                       | N/A           |    |

Minimum duration of the guarantee offered by the supplier (7)(1):

This product has been designed to release silver ions during the washing cycle

NO

Additional information:

Weldlink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) is found:

(7) This item shall not be considered relevant for the purposes of Article 20(1) of Regulation (EU) 2017/1368.

(7) for the eco 40-60 programme.

(7) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1368.

(7) If the product database automatically generates the definitive content of this cell, the supplier shall not enter false data.

## MAINTENANCES

---

- 1) The actual energy consumption will depend on how the appliance is used.
- 2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
- 3) Delivery of the spare parts within 15 working days after having received the order.

### Product Data Sheet concerning (EU) 2019/2014

The product data sheet for your appliance can be found online.

Go to <https://eprel.ec.europa.eu> and enter the model identifier for your appliance to download the data sheet.

The model identifier for your appliance can be found in the technical specifications section.