
 tunable	Doc. No.	Rev	State
	MAN1014	00	Approved

Tunable Service Program

	Doc. No.	Rev	State
	MAN1014	00	Approved

Contents

Revision History	3
Features	3
Accessing the Service Program	3
Network Configuration	4
Serial Configuration	5
Measurement Configuration.....	6
Diagnostics	7
Measurement Results	8
Valve Control.....	8
Calibration.....	9

	Doc. No.	Rev	State
	MAN1014	00	Approved

Revision History

Rev	Date	Author	Description
00	16.08.2021	Filip	Initial release

Features


The Tunable Service Program is accessible as a web application through a browser. No software installation is necessary. The service program can be used for the following

- See information about the analyzer, including software versions, error codes etc.
- Configure network parameters (IP address, subnet mask etc.)
- Configure serial parameters for RS-485 / Modbus RTU (baud rate, slave address etc.)
- Configure measurement options
- See current measurement results and download measurement logs
- Perform field calibrations

Accessing the Service Program

To access the service program for the first time:

1. Connect the analyzer to a computer via Ethernet
2. On the computer, configure the network settings as shown in Figure 1.
3. Open <http://192.168.9.2> in a browser

	Doc. No.	Rev	State
	MAN1014	00	Approved

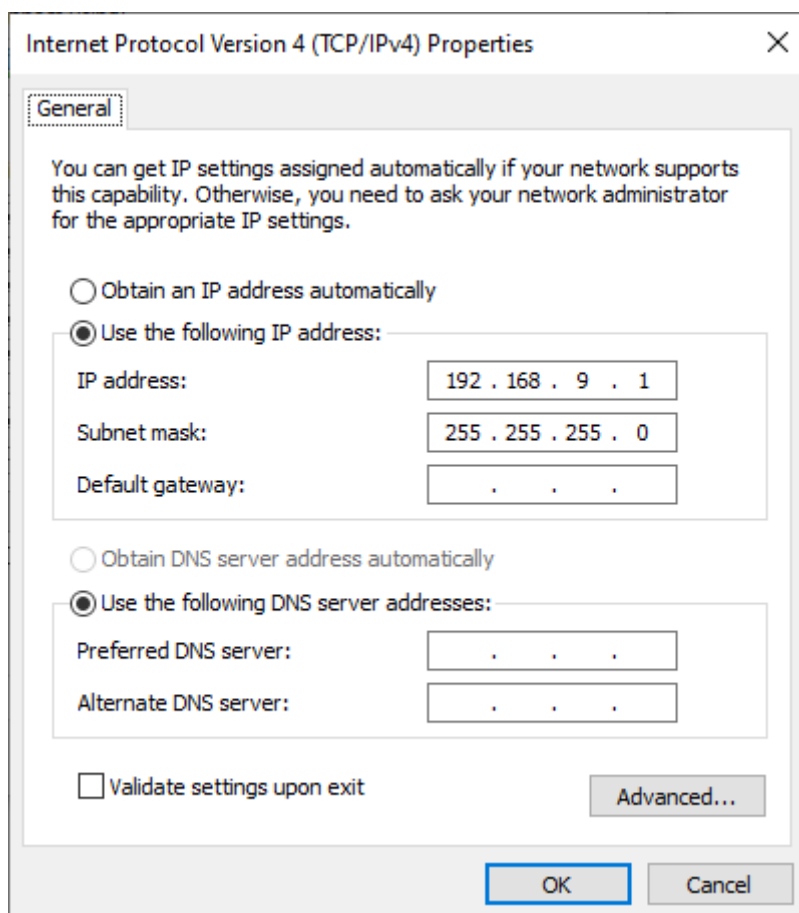


Figure 1: Network settings

Network Configuration

A custom IP can be configured through the Network Configuration page. The instrument can be configured to obtain IP automatically, via DHCP or configured with a static IP. It is also possible to configure DNS and specify an NTP (Network Time Protocol) server, if available.

NOTE

Regardless of the network configuration, the instrument will *always* be available on the IP address 192.168.9.2

	Doc. No.	Rev	State
	MAN1014	00	Approved

NETWORK CONFIGURATION

IP address

Subnet

Default gateway

DNS server

NTP server

DHCP

☒

Submit

Figure 2: Network configuration page

Serial Configuration

Options for the serial RS-485 Modbus RTU link can be configured on the Serial Configuration page. The available options are:

- Baud rate
- Stop bits
- Parity
- Slave address

	Doc. No.	Rev	State
	MAN1014	00	Approved

SERIAL CONFIGURATION

Baud rate

9600

▼

Stop bits

2

▼

Parity

None

▼

Slave address

4

Submit

Figure 3: Serial configuration

Measurement Configuration

The Measurement Configuration page can be used to set various parameters that control the measurement cycle.

	Doc. No.	Rev	State
	MAN1014	00	Approved

MEASUREMENT CONFIGURATION

Autostart
☐

Autozero
☐

Autozero period

Moving average

Submit

Figure 4: Measurement configuration

If autostart is enabled the instrument will start measurements automatically at powerup.

If autozero is enabled the instrument will run automatic zero-calibrations during measurements. The first zero-calibration is run immediately when the measurement is started.

Autozero period specifies the interval for automatic zero calibrations in hours.


Moving average specifies the number of measurement cycles to average. A higher number will reduce the noise but increase the response time.

Diagnostics

The diagnostics page can be used to check and diagnose any issues with the analyzer.

The analyzer state shows which program the analyzer is currently running (measurement, zero calibration etc.).

The error code indicates if any error has occurred. If everything is OK this should read 0 - No error. Note that not all errors are critical. The current error code can be cleared with the Clear Error button. This can be helpful to check if the error occurs again.

	Doc. No.	Rev	State
	MAN1014	00	Approved

The Restart Firmware button will restart the measurement firmware. The Reboot Analyzer button will reboot the analyzer. The Factory Reset button will reset any user settings to factory values (except network configuration).

The last part of the firmware log can be viewed in the Firmware Log pane. The entire log can be downloaded by clicking the Download button.

A simple self-test can be run by clicking the Run self-test button. This will run various check and report the results in the pane below. Note that this may impact measurement results if a measurement is currently running.

Measurement Results

The Live page shows the current output values. The values both printed numerically in a table and shown in live plots below. From this page it is also possible to manually start and stop measurements.

On the History page, measurement logs from previous measurements can be downloaded as CSV files.

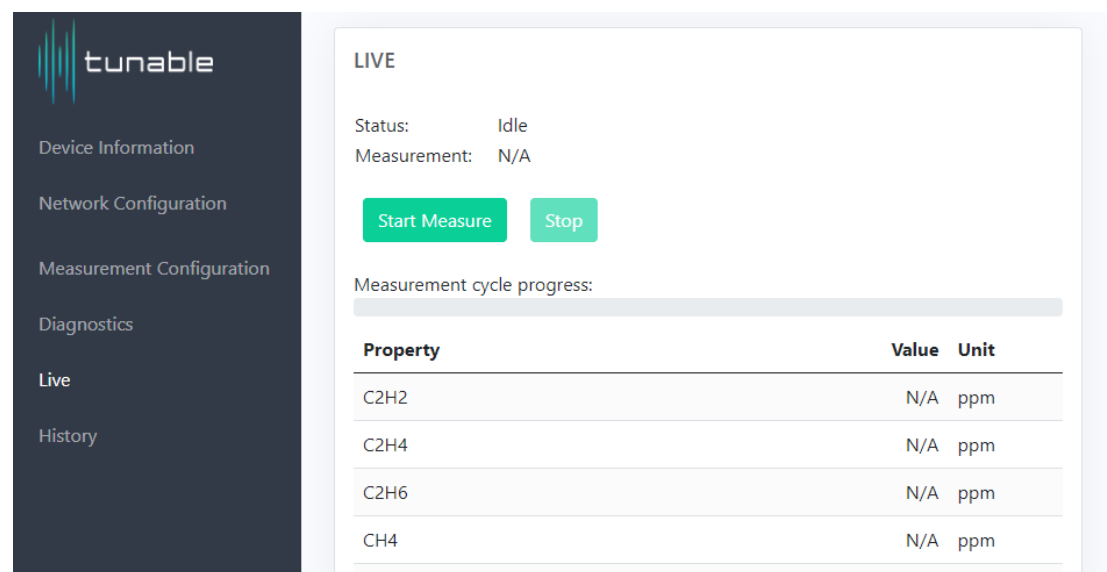


Figure 5: Live page

Valve Control

Settings for automatic valve control can be configured on the Valve Control page. Each sensor state (idle, measure, zero calibration etc.) can be mapped to an input selection which the analyzer will automatically select when entering the state.

	Doc. No.	Rev	State
	MAN1014	00	Approved

The selected input can also be controlled manually, independent of the sensor state, by ticking the 'Manual control' box.

VALVE CONTROL

Current state: Gas Inlet

Enable ☒

Idle

N2

Measure

Gas Inlet

Zero calibration

N2

Service calibration

N2

Manual control

☐

Input select

Gas Inlet

Submit

Figure 6: Valve control

Calibration

The Calibration page can be used to trigger zero and span calibrations.

	Doc. No.	Rev	State
	MAN1014	00	Approved

ZERO CALIBRATION

Last zero calibration: 12.08.2021 10:04 #598

Start Zero Calibration

SPAN CALIBRATION

Status: Idle

Last Span calibration: 12.08.2021 10:02 #594


Gas	Include	Target	Current Factor
Methane	<input type="checkbox"/>	<input type="text"/>	1.0000
Ethane	<input type="checkbox"/>	<input type="text"/>	1.0000
Propane	<input type="checkbox"/>	<input type="text"/>	1.0000
Butane	<input type="checkbox"/>	<input type="text"/>	1.0000
Isobutane	<input type="checkbox"/>	<input type="text"/>	1.0000
C5tot	<input type="checkbox"/>	<input type="text"/>	1.0000
CO2	<input type="checkbox"/>	<input type="text"/>	1.0000

Start Span Calibration

Clear Span Calibration

Figure 7: Zero and span calibration

Zero calibration is used to reduce zero-offset. To start a new Zero calibration click the Start Zero Calibration button. Make sure the measurement cell is filled/flushed with Nitrogen for the entire duration of the zero calibration.

	Doc. No.	Rev	State
	MAN1014	00	Approved

Span calibration can be run to calibrate against a known reference. Choose which components should be included in the span calibration by ticking off the Include column. Write the target value (known concentration of the reference) for each component, then click Start Span Calibration. After the calibration is complete, the current factors will be updated. The span factors can be cleared (reset to 1.0) by clicking the Clear Span Calibration button. This will reset the calibration to factory default.